

Owner's Manual

Smart Media Player **TIZZBIRD™ F30, F20**



Rev 2.1.0


Table of Contents

1	Safety Notice	5
2	Features	6
3	Specifications	7
3.1	F30	7
3.2	F20	8
4	Description of Each Part	9
4.1	F30	9
4.2	F20	10
5	Package Contents	11
6	F30 Installation and Connection	12
7	F20 Installation and Connection	17
8	Initial Setup	21
8.1	Language Setup	21
8.2	Video Output Setup	22
8.3	Screen Fitting Setup	23
8.4	Network Setup	23
8.5	Time & Weather Location Setup	25
8.6	Theme Setup	26
9	Home Screen (Android Theme)	27
10	Using Remote Controller	29
11	Firmware Update & Installation of Apps	30
12	Initial Screen	31
12.1	Turning On Power	31
12.2	Audio Settings	31
12.3	Network Settings	32
12.3.1	Configure Wi-Fi Connection	32
12.3.2	Configure Ethernet Connection	34
12.3.3	Configure Manual-IP Ethernet	34
12.4	Turning Power Off, Completely Power Off	35
13	Start-Up & Termination	36
13.1	Home Screen	36
13.2	Change Cover-View Style	37
13.3	Movie Browser	38
13.4	Terminate	38
14	Watching Movie	39
14.1	Movie Browser	39
14.2	Control Widget at Browser Screen	39
14.3	Selecting Device	40
14.4	Movie Browser Menu	41
14.5	To Add Movie Poster	42
14.6	Synopsis Screen	44
14.7	Resume and Bookmark	45
14.8	Movie Playback Menu	46
14.9	Playback Speed Control	47
14.10	Searching Menu (Time, Chapter, Bookmark)	47
14.11	Playback Information Menu	48
14.12	Subtitle Menu	48
14.13	Audio Menu	48
14.14	Video Parameter Menu	49
14.15	Playback 3D Format Movies	49
14.16	Skip Playback Position	49


14.17	Movie Playback Controller	50
15	Listening Music	51
15.1	Music Browser	51
15.2	Sorting Music	52
15.3	Music Playback Screen	52
15.4	Music Playback Menu	52
16	Watching Photo	53
16.1	Photo Browser	53
16.2	Photo Browsing Menu	53
16.3	Photo Wall	53
16.4	Photo Playback Screen	54
16.5	Slideshow Control	54
17	Posters, Album Art and Photo Arrangements	55
18	Using File Browser	61
18.1	File Browser Screen	61
18.2	Selecting Device at File Browser	62
18.3	Register Subtitle Font File	62
18.4	Using File Operation	63
19	Connecting Internet	65
19.1	Execute Internet Browser	65
19.2	Control Internet Browser	65
20	Install and Execute Application	66
20.1	Move applications at Android Phone to TizzBird	66
20.2	Execute Application	66
21	Settings	67
21.1	System	67
21.2	Audio and Visual	70
21.3	Movie	71
21.4	Music	72
21.5	Photo	73
21.6	Network	74
21.7	Cover-View	74
22	Connecting Network Server or NAS	75
22.1	Network connection using NFS	75
22.1.1	Downloading TizzNFS Server	75
22.1.2	Executing TizzNFS Server & Configuration	75
22.1.3	Downloading other NFS Server	76
22.1.4	Executing freeNFS Server & Configuration	76
22.1.5	Connecting NFS Server at Device	77
22.2	Network Connection using Samba	79
22.2.1	Activating PC Share	79
22.2.2	Connecting Samba Server at Device	79
22.3	Accessing Network Drive at File/ Media Browser	81
23	Using DLNA	82
23.1	Preparation for DMR	83
23.2	Sending Smartphone's Contents - iMediaShare APP	84
23.3	Sending Smartphone's Contents - TWONKY APP	87
24	Firmware Upgrade	89
24.1	Online Upgrade (O.T.A – Over the Air Upgrade)	89
24.2	Local Upgrade	89
24.2.1	Upgrade at Settings Screen	89
24.2.2	Upgrade at File Browser	90
25	How to Fix Booting Failure	91

25.1	Abstract	91
25.2	Repairing by <i>Safe Mode Booting</i>	91
25.3	Repairing by <i>System Recovery Mode</i>	91
25.3.1	Preparation	91
25.3.2	Entering System Recovery Mode	91
26	GNU General Public License	94


1 Safety Notice

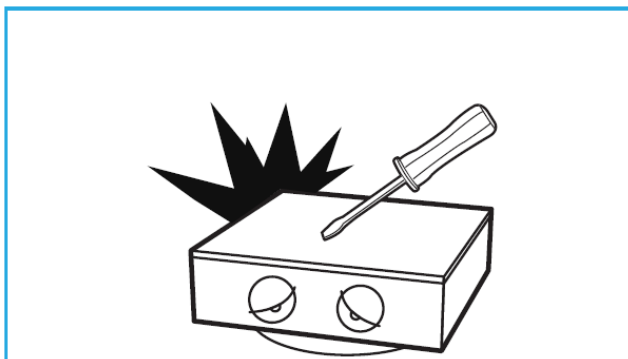


Do not try to disassemble the unit. It may cause malfunction or fire.

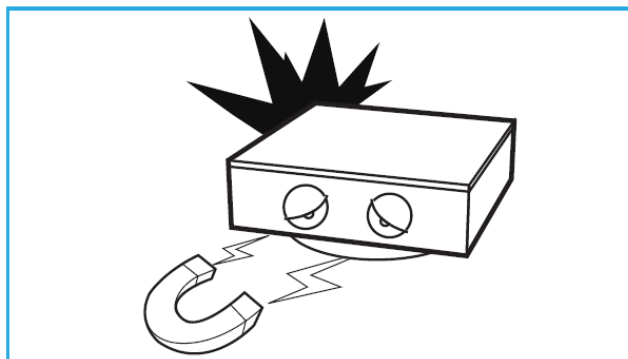


Keep away the unit from magnetized devices. It may erase the data stored in the HDD drive inside.

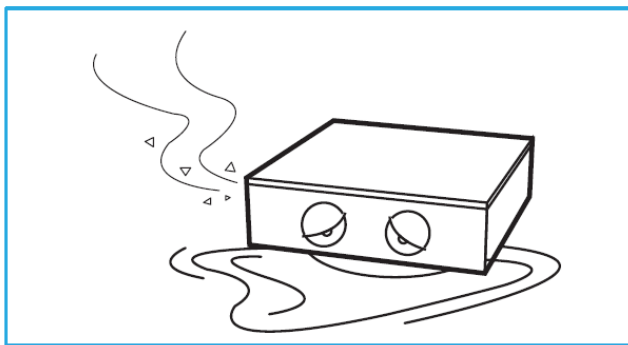


Do not place the unit in places that are exposed to oil, water, dust, humidity, rain or wind.

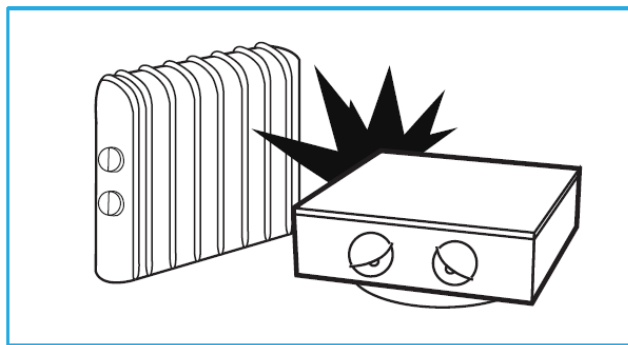

Keep away the unit from overheated areas, such as heaters. Place it well ventilated location. Ensure that a free airflow is maintained around the unit.

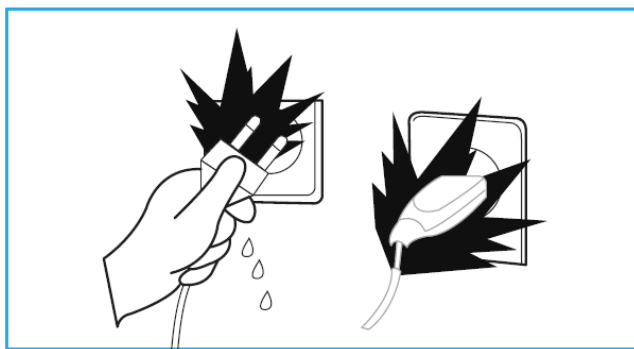

Do not touch the power plug with wet hands or use defective power cables and electric outlets. It may cause electric shocks or fire.

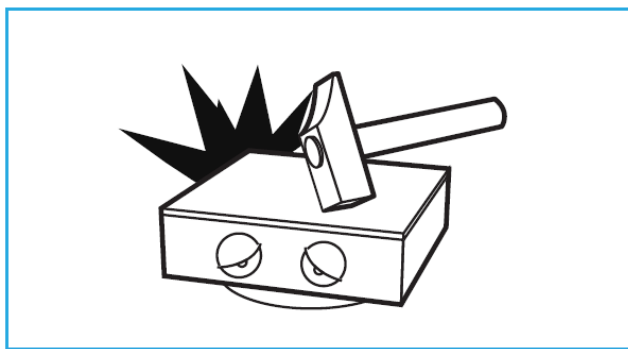

Do not drop or shock the unit from heights. Doing so may cause serious damage to the HDD inside.

Please install the unit nearby the socket-outlet and easily accessible place. Unplug the power cable when the device is not used for a long time.

2 Features



Tizzbird playbacks various full HD movie contents including HDMV and DVD backup formats as well as AVI, MKV, XVID and TS formats on TV. It supports most recent video formats such as H264 and VC-1.



TizzBird provides a full web-browsing capability very similar like PC. Mouse and keyboard can be attached to support various inputs, which enable slick Internet surfing even on the big screen TV.




TizzBird playbacks high resolution photo images on TV. It can slideshow the photos while playing back the music in background. Transition effects such as fade-in-out or zooming can be applied during transition of each photo.



TizzBird playbacks high quality lossless music such as FLAC, WAV up to 24bit/96Khz. It also supports compressed MP3, OGG, AAC and CUE format thru high fidelity Wolfson DAC.



TizzBird runs applications on TV exact same APPs installed on the Android Smartphone without any conversion. This also includes 3D games or 3D APPs that utilize the superb OPEN-GL 3D accelerator. Some APPs that fixed screen-aspect ratio cannot be applicable in some cases.

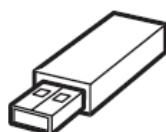

It also supports gigabit Ethernet which enables fastest networking ever before. TizzBird supports NFS, SAMBA, uPnP network protocols to connect various servers. It also has multiple mounting drive options and automatic browsing capability which maximize the network connection experience.



TizzBird can be used as an external USB storage thru connecting PC. TizzBird also supports playback the contents at USB flash drive or external HDD thru connecting USB host ports.

3 Specifications

3.1 F30

Model	TizzBird F30
System	TCC9302 1Ghz CPU/ 512M Memory/ 2GB NAND flash Booting time from stand-by is less than three seconds.
OS	Android Rev 2.3 Gingerbread
Video	Format: AVI/ MKV/ MPG/ WMV/ VOB/ TP/ TRP/ M2TS/ MOV/ FLV/ IFO/ ISO/ HDMV
	Codec: MPEG 1/2/4, H264, XVID, WMV9(MP@HL4.1) VC-1(AP@L3)
	Resolution: Max 1080p 60Hz
Audio	MP3/ OGG/ WAV/ AAC/ FLAC/ APE/ WMA
	Dolby Digital / DTS Down Mixing and Pass-thru
Image	JPG, JPEG, BMP, PNG, GIF
Connection	USB 2.0 Host Port 3 EA (Current → Max 500mA / Port)
	USB 3.0 Device Port 1EA (Max Transfer Rate 5Gbps)
	Gigabit Ethernet, Wireless Wi-Fi 802.11n (Optional)
	Network Protocol : Samba (CIFS)/ NFS/ uPnP
Video Output	HDMI 1.3a / Component(YPbPr)/ Composite
Audio Output	Digital: Coaxial and Optical Output / Analogue: Stereo RCA Output
File System	NTFS, FAT32
Subtitle	smi, smil, sub, sub/idx, srt, ssa, ass
Power	DC 12V / 3A Adapter, Standby power consumption < 0.4w
Languages	English, French, German, Spanish, Italian, Portuguese, Vietnamese, Swedish, Czech, Norwegian, Danish, Japanese, Korean, Traditional Chinese
Dimension	215 x 215 x 59 mm

3.2 F20


Model	TizzBird F20
System	TCC8801 Cortex-A8 1Ghz CPU/ 256KB L2 Cache 512M Memory/ 2GB NAND flash Bootling time from stand-by is less than three seconds.
OS	Android Rev 2.3 Gingerbread
Video	Format: AVI/ MKV/ MPG/ WMV/ VOB/ TP/ TRP/ M2TS/ MOV/ FLV/ IFO/ ISO/ HDMV
	Codec: MPEG 1/2/4, H264, XVID, WMV9(MP@HL4.1) VC-1(AP@L3)
	Resolution: Max 1080p 60Hz
Audio	MP3/ OGG/ WAV/ AAC/ FLAC/ APE/ WMA
	Dolby Digital / DTS Down Mixing and Pass-thru
Image	JPG, JPEG, BMP, PNG, GIF
Connection	USB 2.0 Host Port 3 EA (Current → Max 500mA / Port)
	USB 2.0 Device Port 1EA (Max Transfer Rate 480Mbps)
	Gigabit Ethernet, Wireless Wi-Fi 802.11n (Optional)
	Network Protocol : Samba (CIFS)/ NFS/ uPnP
Video Output	HDMI 1.3a / Composite
Audio Output	Digital: Optical Output / Analogue: Stereo RCA Output
File System	NTFS, FAT32
Subtitle	smi, smil, sub, sub/idx, srt, ssa, ass
Power	DC 12V / 2A Adapter, Standby power consumption < 0.5w
Languages	English, French, German, Spanish, Italian, Portuguese, Vietnamese, Swedish, Czech Norwegian, Danish, Japanese, Korean, Traditional Chinese
Dimension	155 x 155 x 31 mm

4 Description of Each Part

4.1 F30


Power Button

Turn ON/OFF power of the unit.

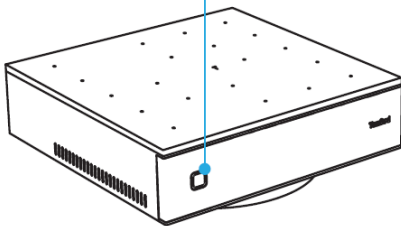

Smart HDD Rack


Install/ uninstall the HDD easily with this RACK

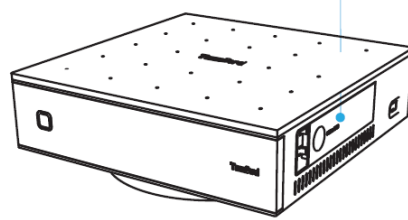

Connectors

Please connect the unit to AV port of the TV or AV receiver. Please connect Ethernet cable or install the Wi-Fi USB dongle for connecting the network.


** There's another USB host port at the side.**

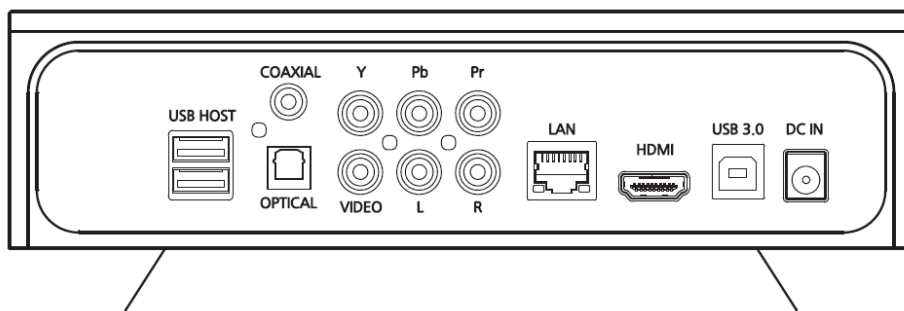

4.2 F20


Power Button

Turn ON/OFF power of the unit.

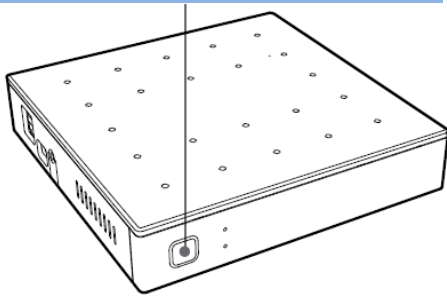

Bottom side HDD Cabinet


Install/ uninstall 2.5" HDD.

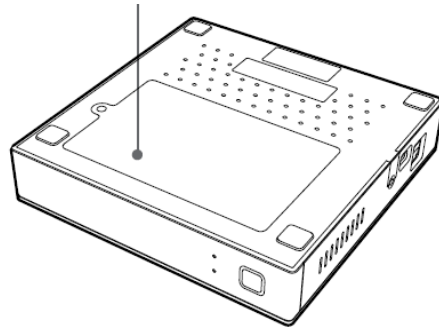

Connectors


Please connect the unit to AV port of the TV or AV receiver. Please connect Ethernet cable or install the Wi-Fi USB dongle for connecting the network.

** There's another USB host port at the side.**

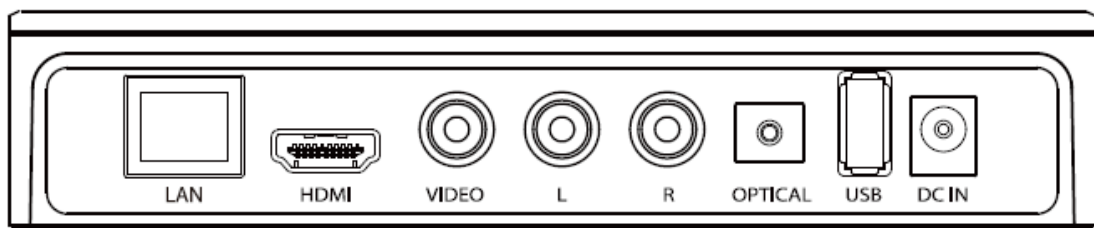


5 Package Contents


The TizzBird package contains the following items. The shape of items described below may slightly different from the actual contents.

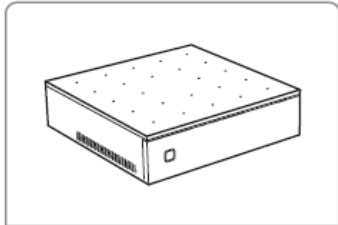


Main Unit

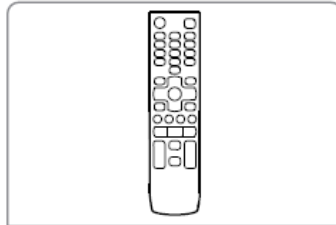


Remote Controller

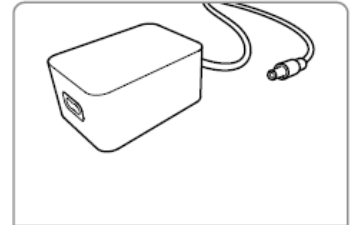


Power Adapter

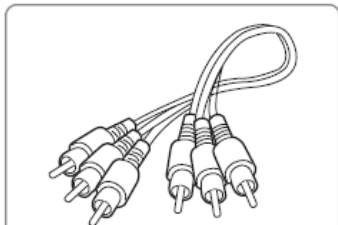


A/V Cable

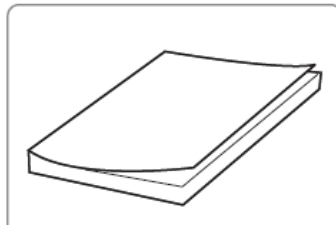

Quick Guide

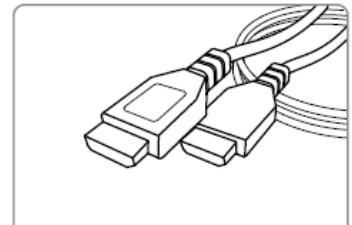

HDMI Cable

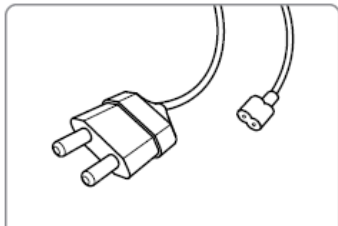


Power Cable


6 F30 Installation and Connection

Pedestal Assembly

This is a guide for assembly of pedestal into the main unit. No screw needed.

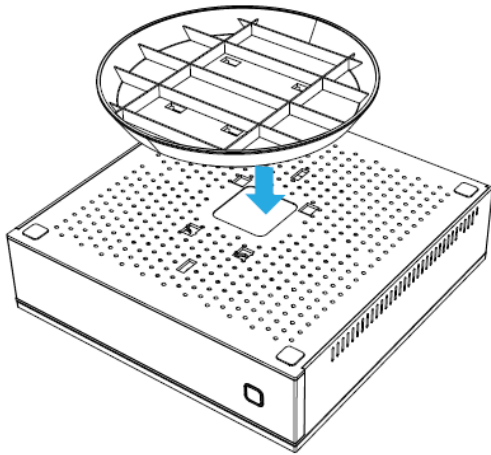


Find out six bumps of the pedestal and assembly them with six holes of the bottom side of the main unit.

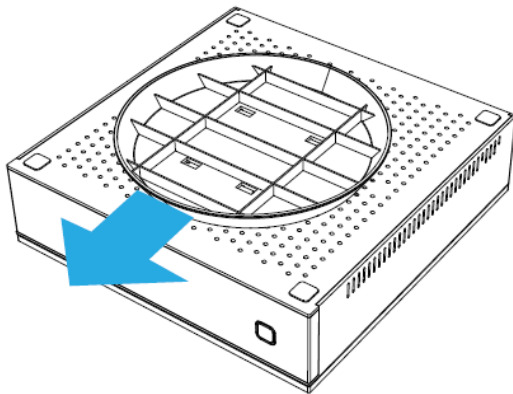


Push the pedestal to the front side until the "CLICK" sound.

HDD Installation


This is a guide for installation of HDD into the rack. No screw needed

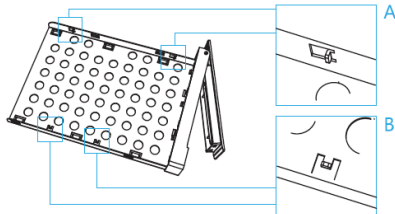


Before install the HDD into the rack, please check the four bumps on the rack. There are two A bumps on the side, and two B bumps on the bottom.

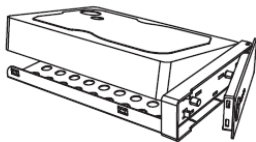


Find out the side holes of HDD, and assembly them with two A bumps. Insert the HDD first on the side. Then assembly the bottom holes of HDD with two B

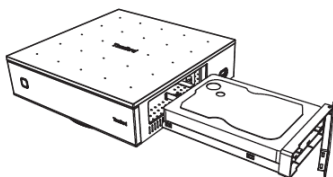

Insert the rack smoothly into the main unit. Please make sure that handle of rack is open status, before insertion.

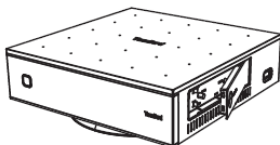




Push the rack until it reaches internal end of the unit.

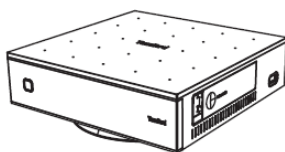

Close the handle of the rack after insertion.


Connecting the Video

The TizzBird supports HDMI, Component and Composite video output for connection to a TV, and each output needs to be configured in the settings browser depending on what cable is being used.

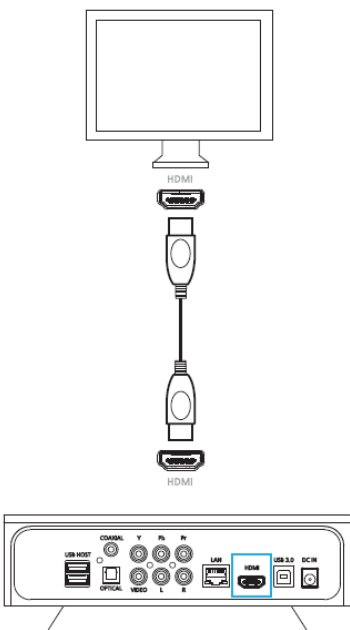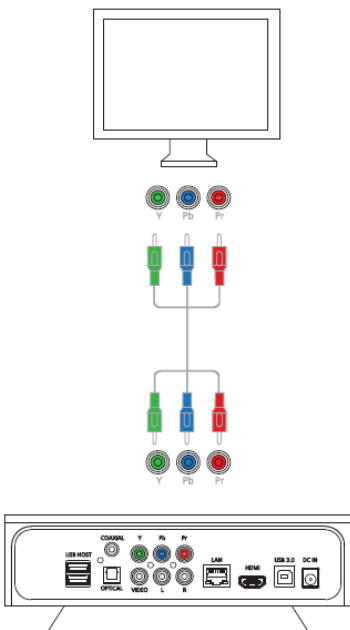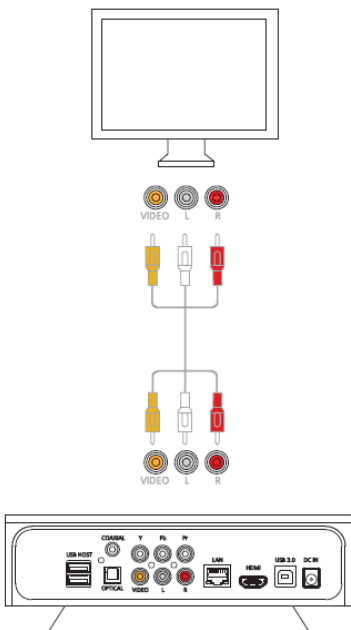Connection to HDMI Out	Connection to Component	Connection to Composite
<p>Connect the TizzBird output to your TV using an HDMI cable. 1080p full HD contents can be output as 1080p only thru HDMI. HDMI can also transfer the audio signal and no need to connect another cable for audio.</p>	<p>Connect the TizzBird output to your TV using the component video cable. Select an appropriate video input mode on you TV until you get the main page of the TizzBird. For the audio, please connect the stereo cable (Red/White one).</p>	<p>Connect the TizzBird output to your TV using the included Composite (Yellow one) video cable. Select an appropriate video input mode on you TV until you get the main page of the TizzBird. For the audio, please connect the stereo cable (Red/ White one),</p>
		


Connecting the Audio

The unit provides RCA analog stereo output, coaxial and optical digital output and HDMI to connect the audio device like AV receiver and TV. Please connect to audio outputs to appropriate port of audio device. Please select the appropriate input at the audio device using remote controller after connection.

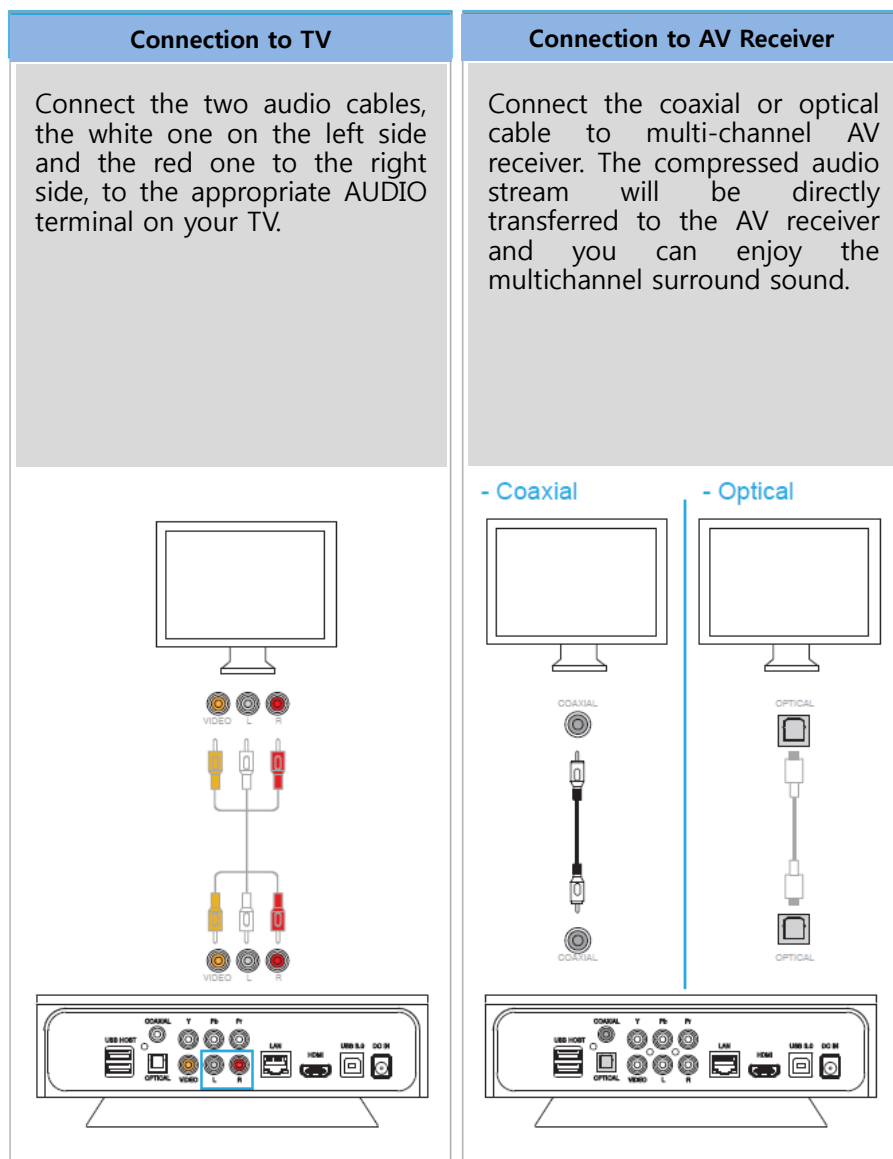

Connecting USB Device


TizzBird provides three USB 2.0 host ports to connect various external devices, such as FLASH MEMORY drive, external USB HDD enclosure, digital camera/camcorder, keyboard & mouse, or Wi-Fi USB dongle.

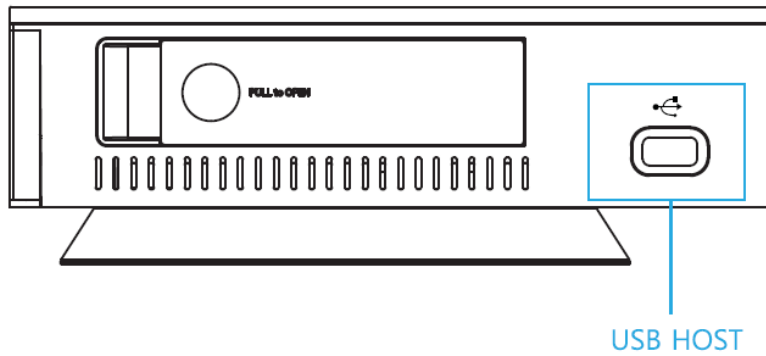


7 F20 Installation and Connection

HDD Installation


This is a guide for installation of HDD into the rack. No screw needed

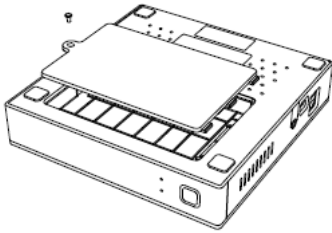

Before install the HDD into the cabinet, you need to unscrew one screw of cabinet at the bottom side of device. Then open the cover of the cabinet.

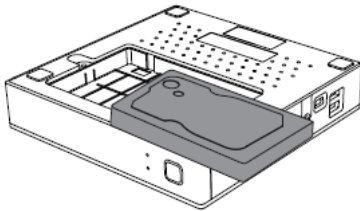

Insert the 2.5" HDD drive into the cabinet. Please notice the connector of HDD and it should be fit in.

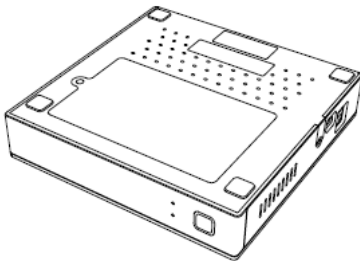


Close the cover of cabinet, screw the single screw of the cover.

Connecting the Video

The TizzBird supports HDMI, Component and Composite video output for connection to a TV, and each output needs to be configured in the settings browser depending on what cable is being used.


Connection to HDMI Out

Connect the TizzBird output to your TV using an HDMI cable. 1080p full HD contents can be output as 1080p only thru HDMI. HDMI can also transfer the audio signal and no need to connect another cable for audio.

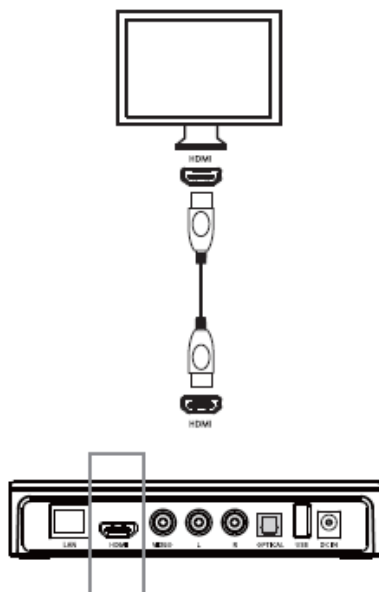

Connection to Composite

Connect the TizzBird output to your TV using the included Composite (Yellow one) video cable. Select an appropriate video input mode on you TV until you get the main page of the TizzBird. For the audio, please connect the stereo cable (Red/ White one),

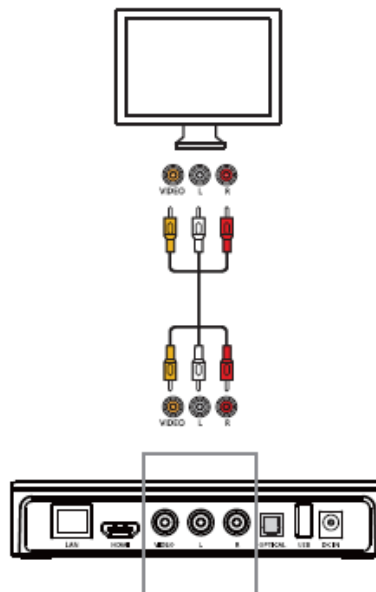


Connecting the Audio

The unit provides RCA analog stereo output, coaxial and optical digital output and HDMI to connect the audio device like AV receiver and TV. Please connect to audio outputs to appropriate port of audio device. Please select the appropriate input at the audio device using remote controller after connection.


Connection to TV

Connect the two audio cables, the white one on the left side and the red one to the right side, to the appropriate AUDIO terminal on your TV.

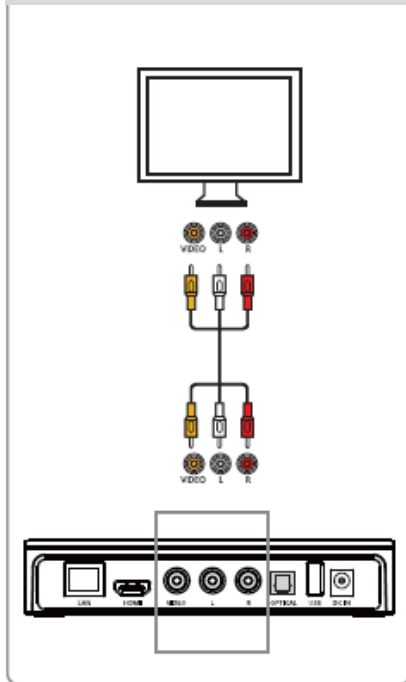

Connection to AV Receiver


Connect the optical cable to multi-channel AV receiver. The compressed audio stream will be directly transferred to the AV receiver and you can enjoy the multichannel surround sound.

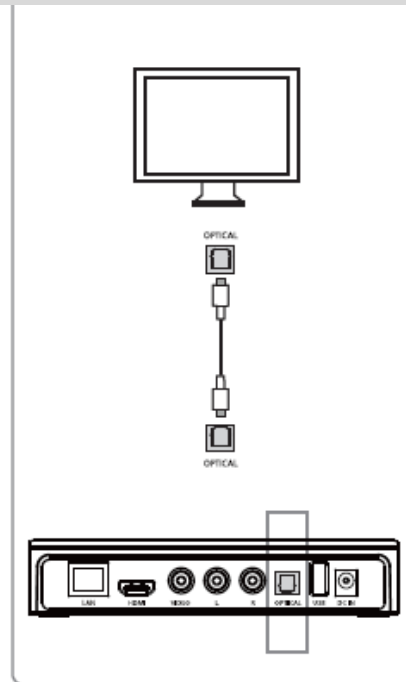

Connecting USB Device

TizzBird provides three USB 2.0 host ports to connect various external devices, such as FLASH MEMORY drive, external USB HDD enclosure, digital camera/camcorder, keyboard & mouse, or Wi-Fi USB dongle.

Recommendation → The upper port of USB host should be used for mouse or keyboard. It's actually USB 2.0 OTG port so it may cause compatibility problem on some devices.

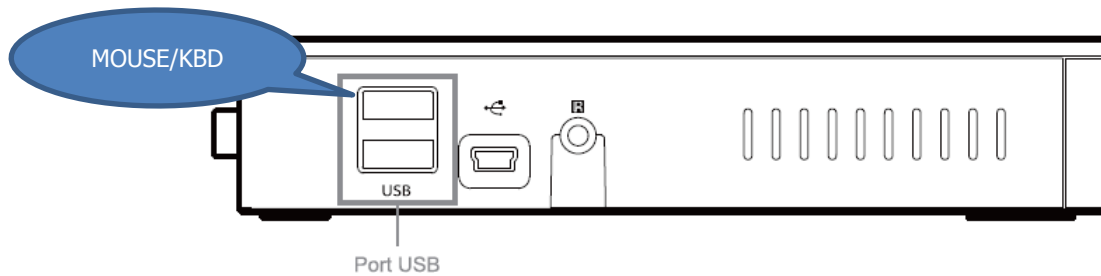


8 Initial Setup

Initial setup consists of 6 steps of WIZARD style sequences. The sequence of WIZARD will be LANGUAGE SETUP → VIDEO OUTPUT SETUP → SCREEN FITTING → NETWORK SETUP → TIME&WEATHER SETUP → THEME SETUP


The PREV/ NEXT button on the top side of each screen will bring the PREV/ NEXT step.

8.1 Language Setup

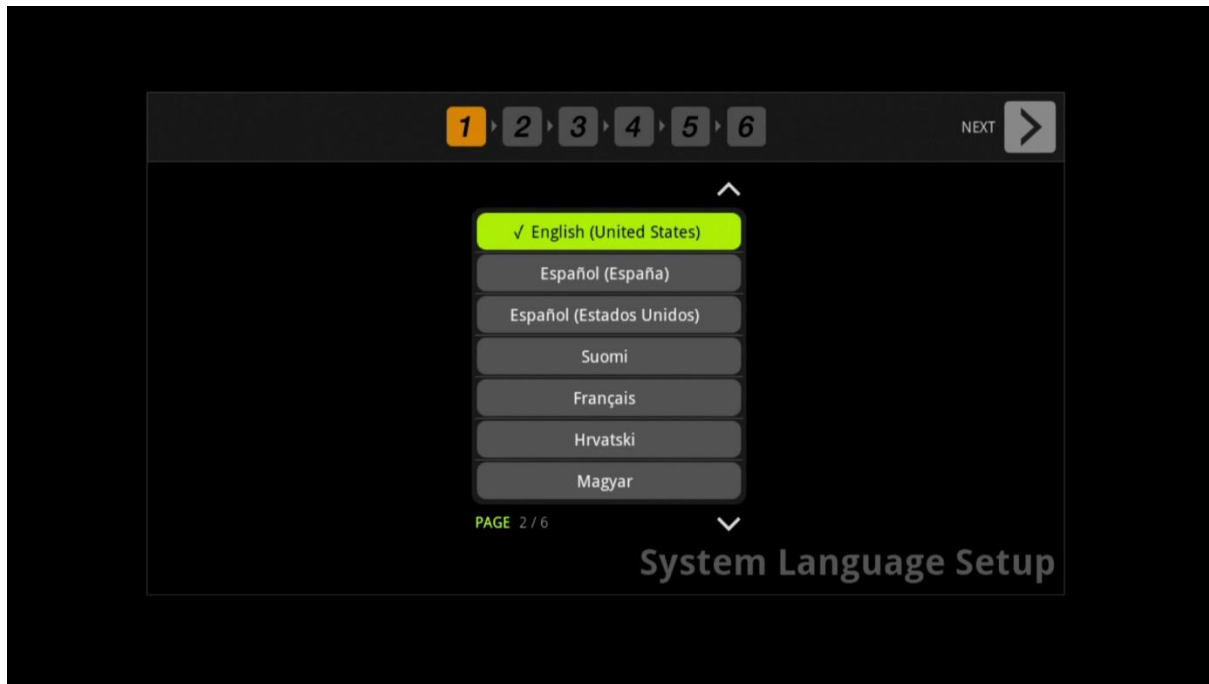


The first step is setup the menu language. The setup wizard will enumerate all the languages available at the device.

8.2 Video Output Setup

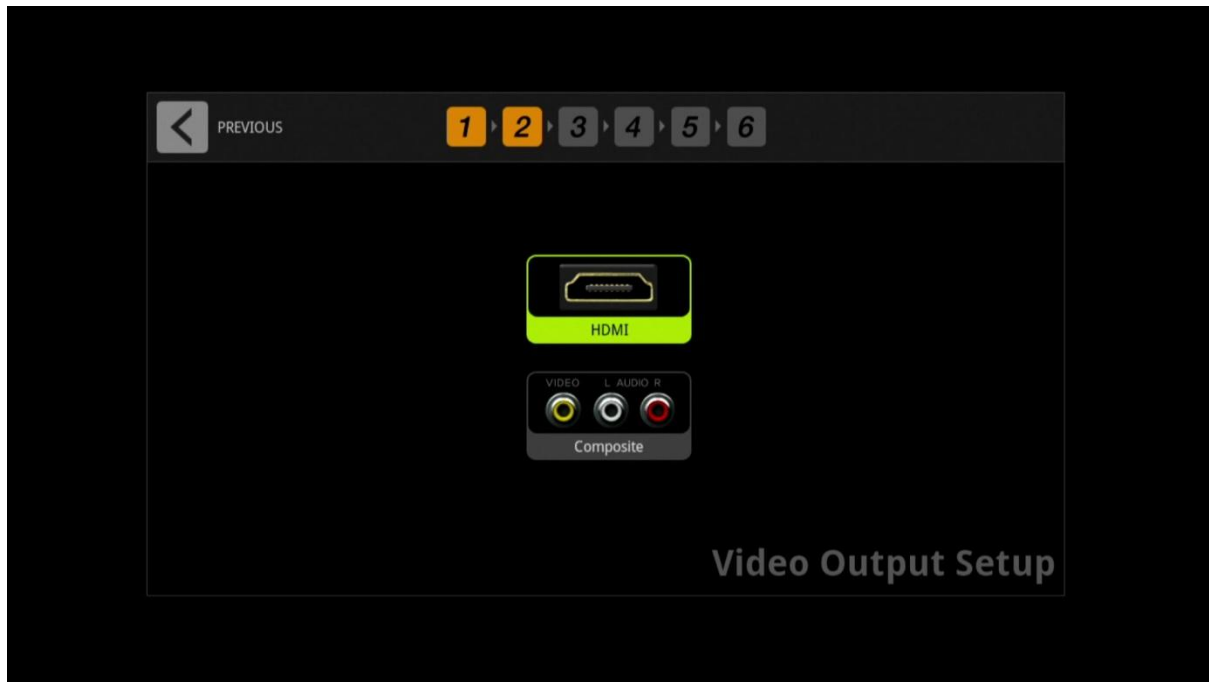


The 2nd setup is video output. Video output screen will pop up both COMPOSITE and HDMI screen. User can select one of these buttons with MOUSE or REMOTE.

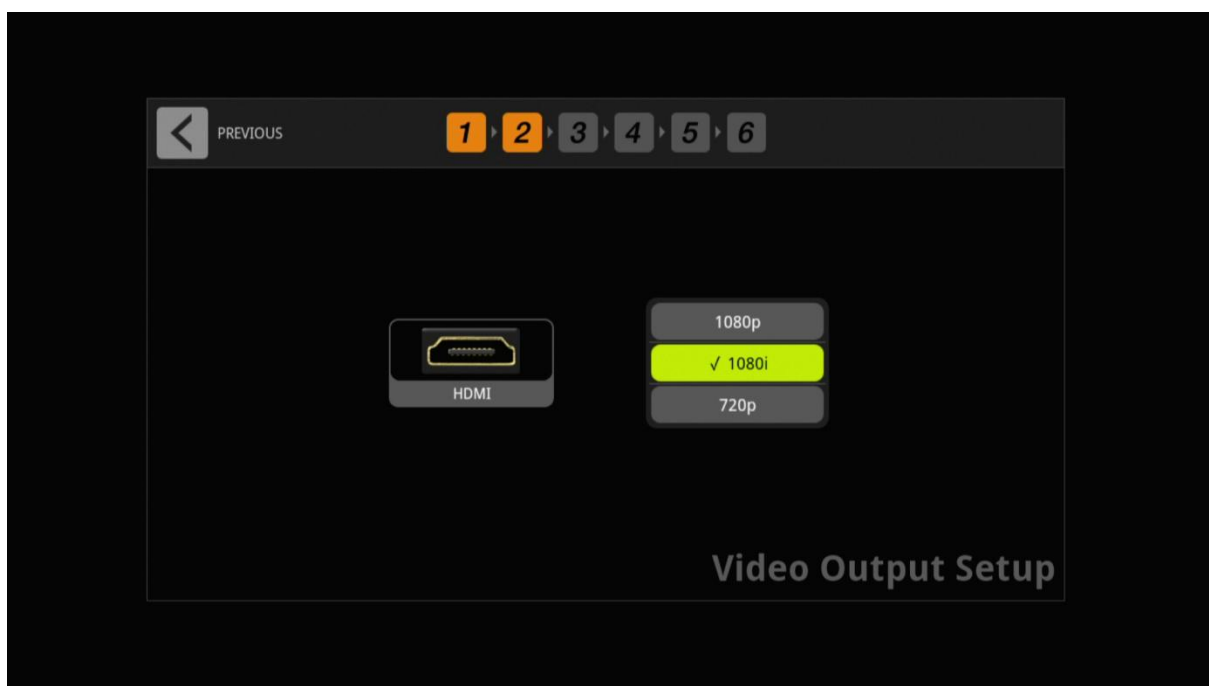


If user selects HDMI output then the screen resolution selection screen will appear as above.

8.3 Screen Fitting Setup

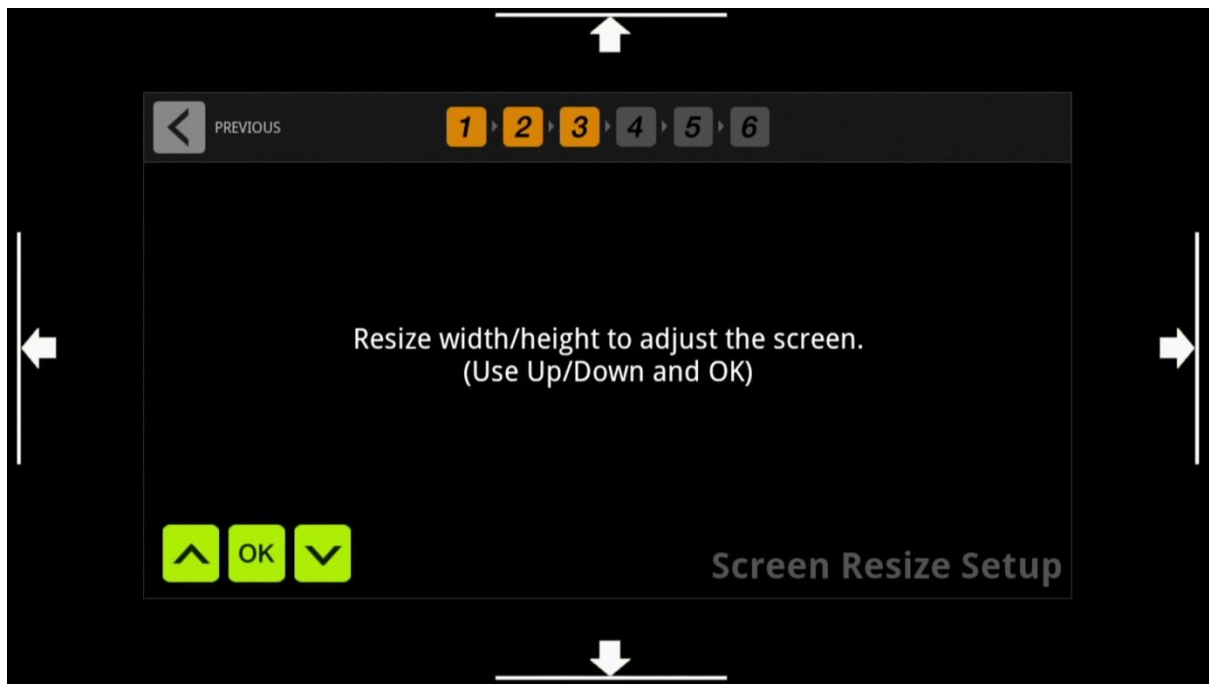


The 3rd step is fitting the screen size according to user's TV. Clicking UP/DOWN button at left-bottom side will increase/ decrease the screen size accordingly. Press OK when done.

8.4 Network Setup

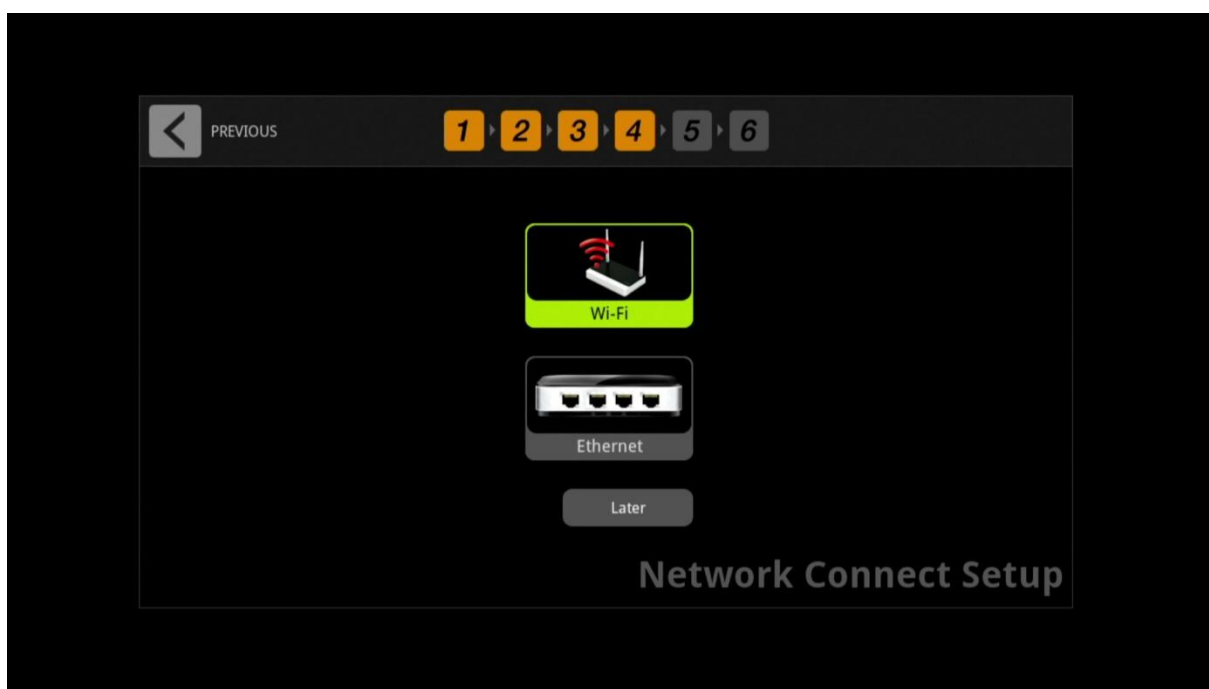


The 4th step is setting up network. Both Wi-Fi and Ethernet can be configured here. If

Wi-Fi button were pressed, the following screen will enumerate all available Wi-Fi AP. Select one of them and click it.

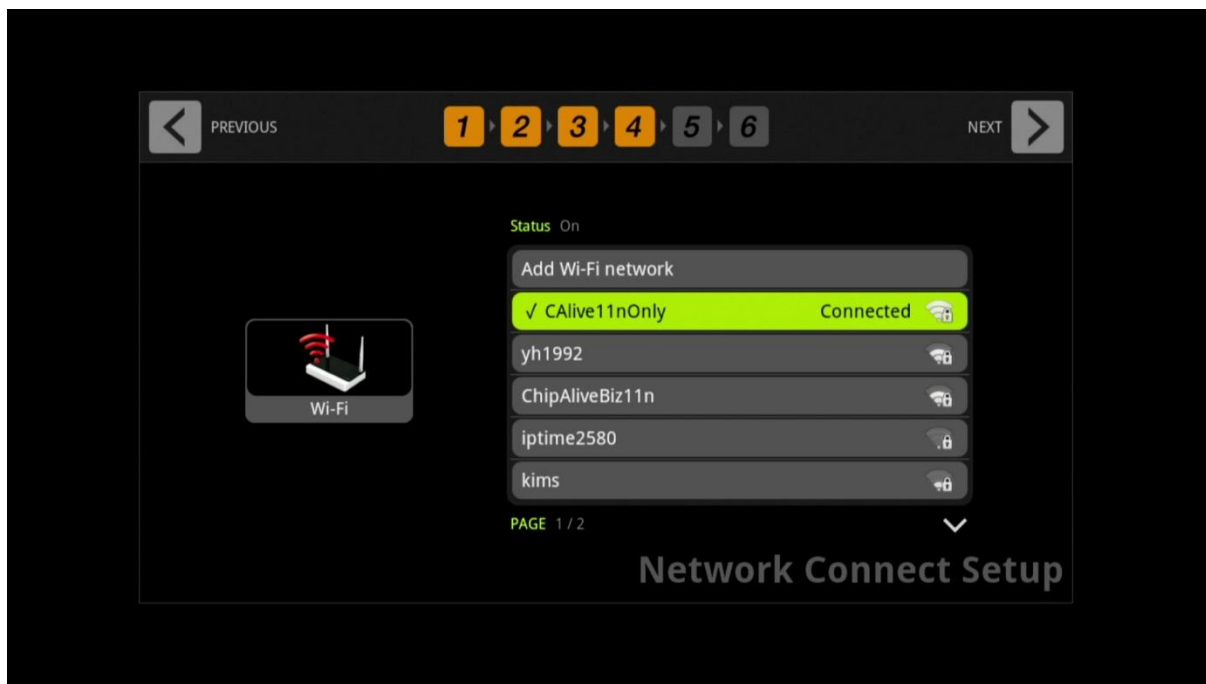


The next page screen will pop up to configure the Wi-Fi.

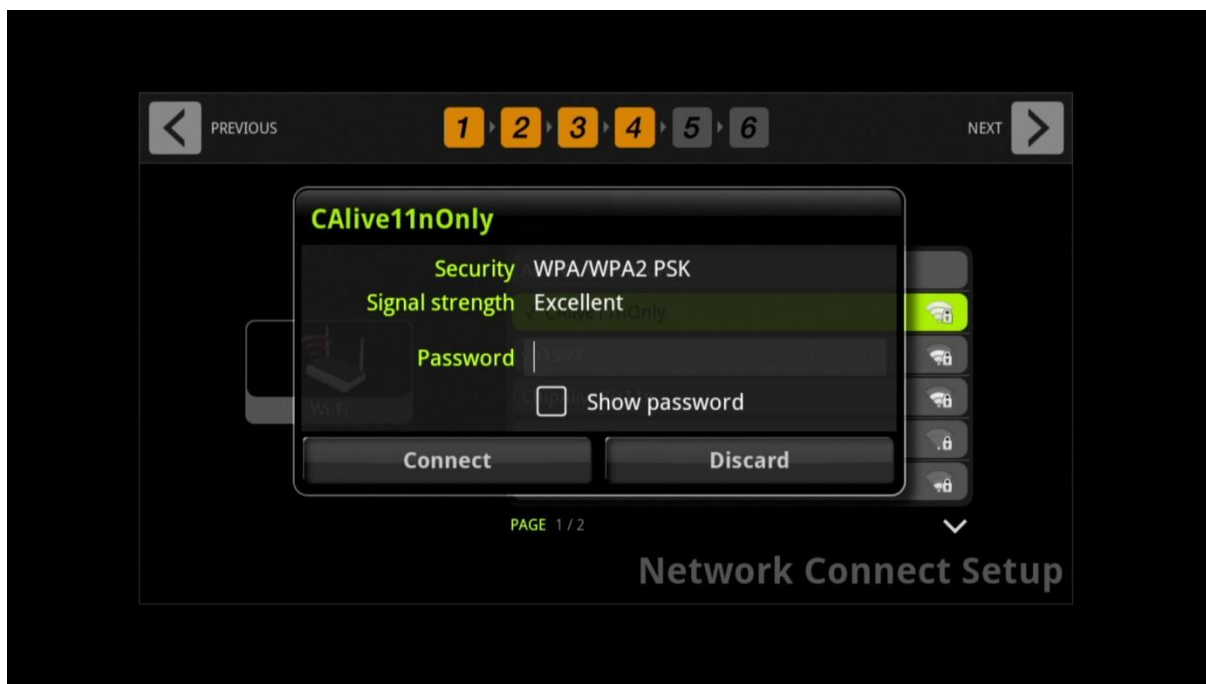


Typing the password will finalize the Wi-Fi setup and Internet connection will be made.

8.5 Time & Weather Location Setup

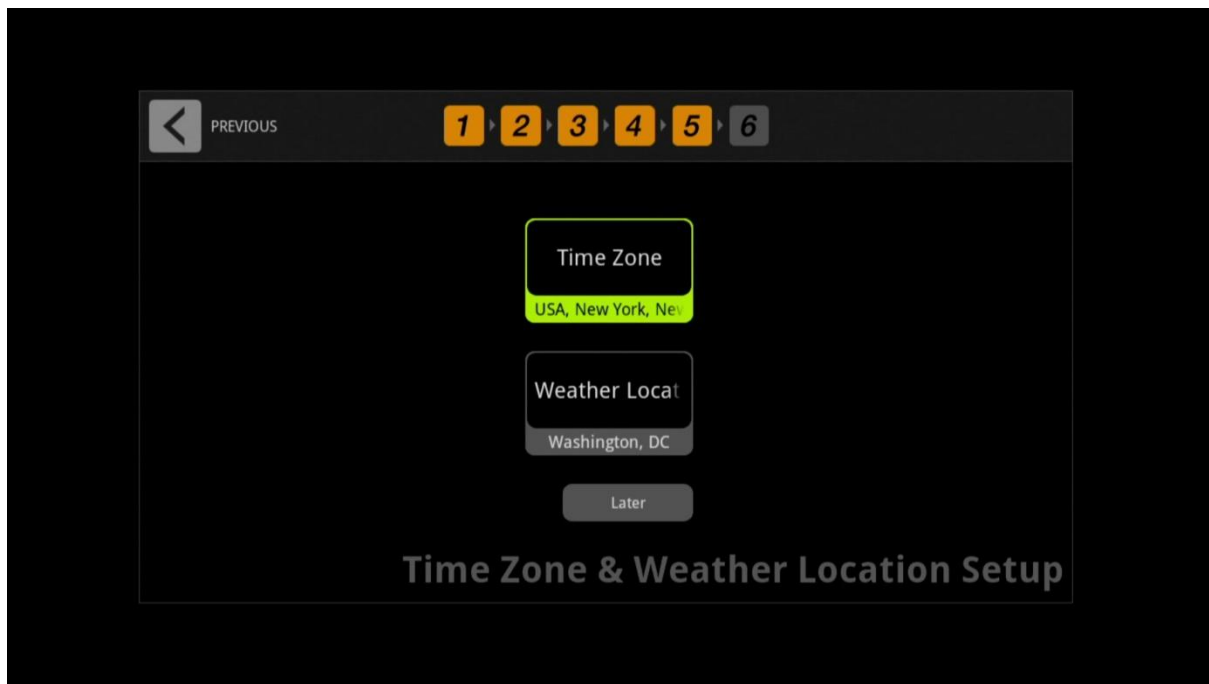


The next step is setting up time zone and weather location. Tizzbird provides automatic setup for those as long as network is connected.


To setup the time-zone, select the Time-Zone button as above screen. Then select "AUTO" if Internet is connected. Otherwise, you can manually input the time-zone.

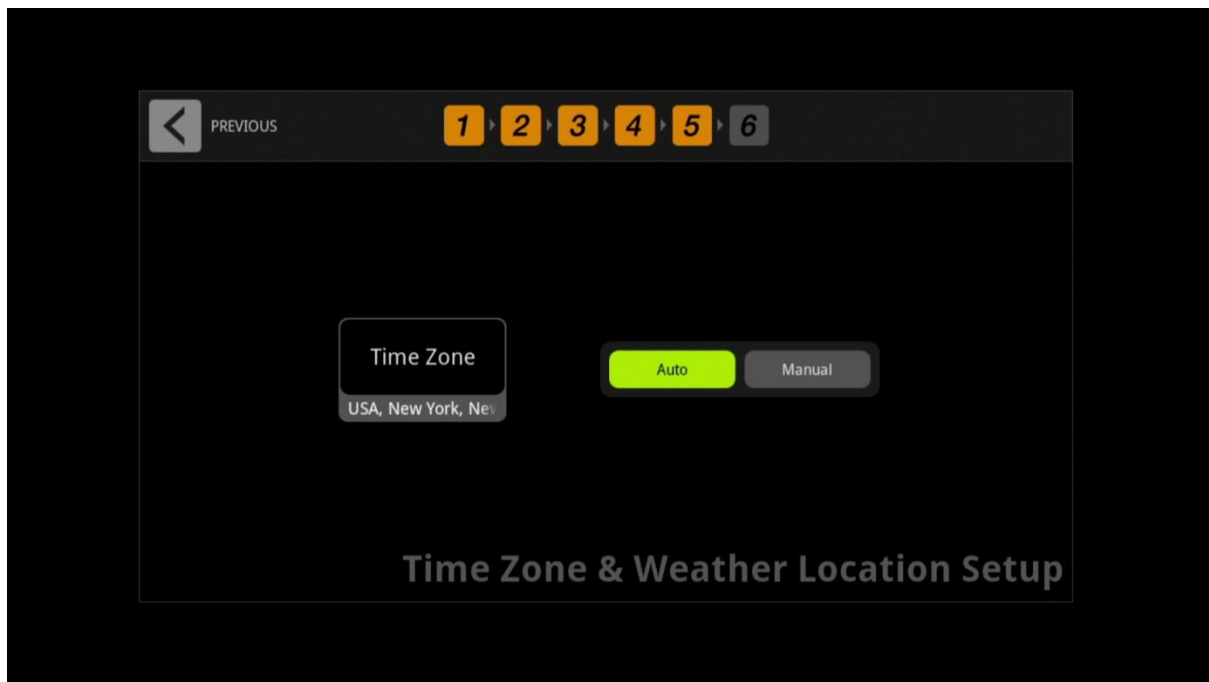

The weather location can be configured as "AUTO" or "MANUAL". Please select "AUTO" if Internet is connected. Otherwise, you can manually input the weather-location.

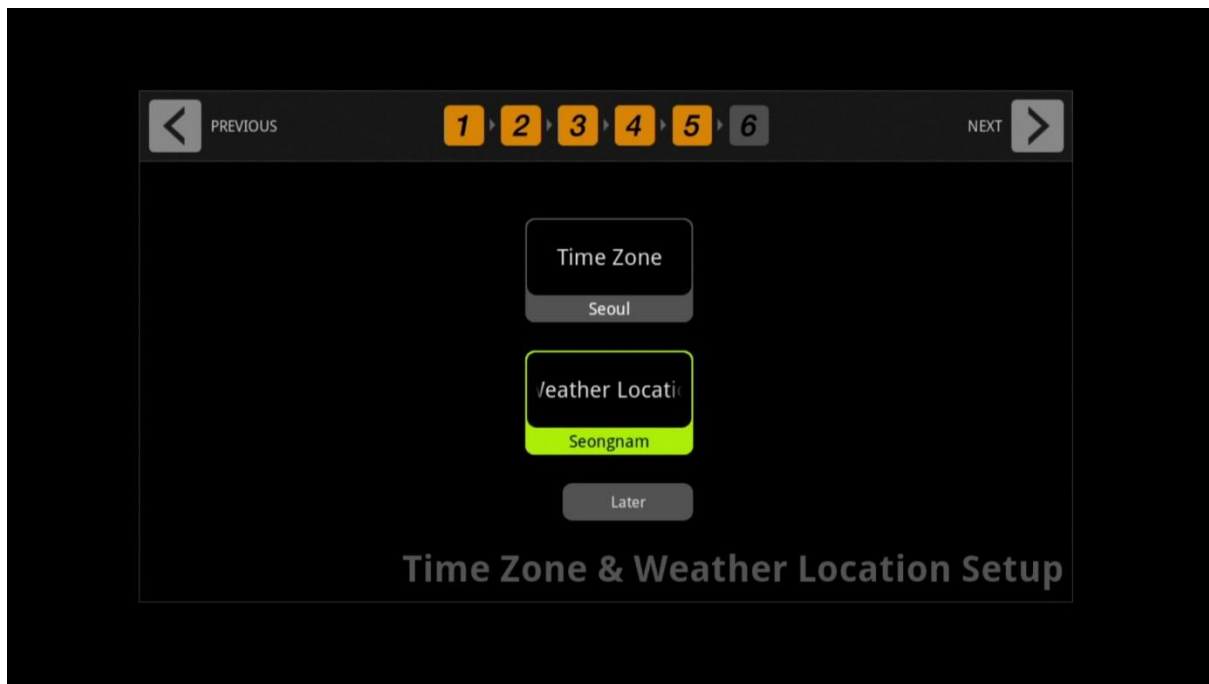

8.6 Theme Setup

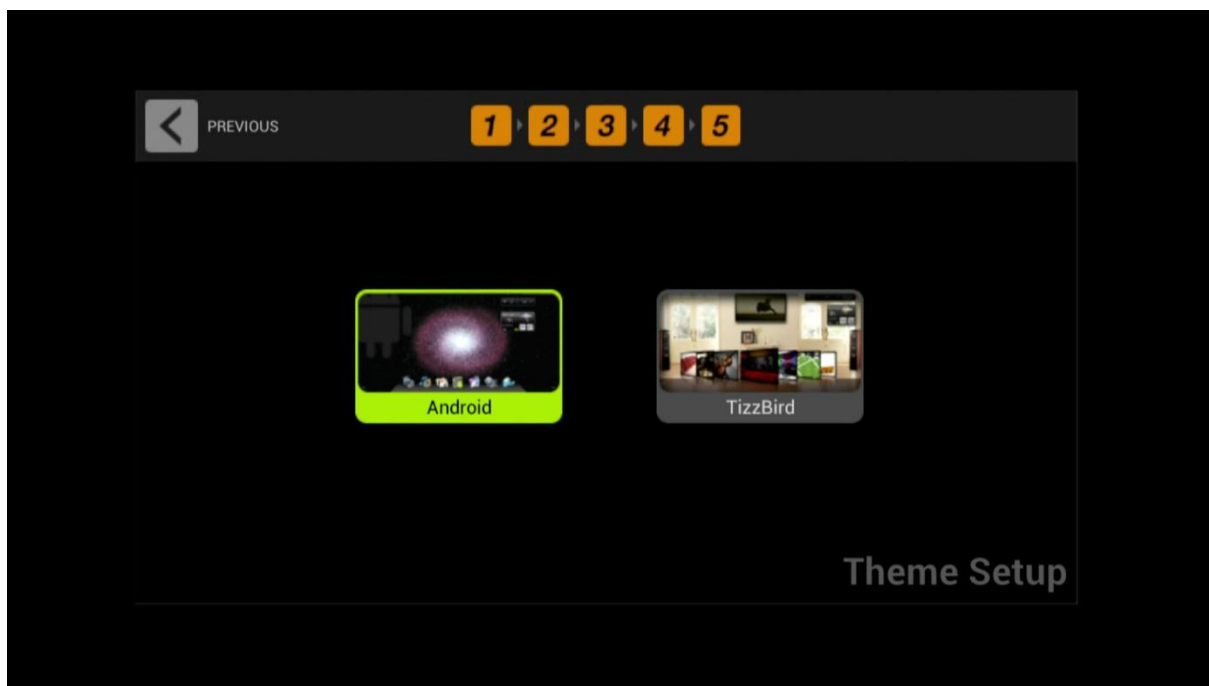

The final step is setting up theme. Tizzbird provides two type of theme, one is the Android theme, the other is Tizzbird classic theme. If you are familiar with smart phone user interface, please choose "Android". If you are more familiar with multimedia player, then choose TizzBird theme. The theme can be selected freely at settings later.

9 Home Screen (Android Theme)


The HOME SCREEN is very similar with smart phone. The APPs can be located at the surface of HOME SCREEN freely, while the specific browsers like MOVIE/ MUSIC/ PHOTO/ FILE/ WEB/ APP browser will stick as icons at the bottom side of HOME SCREEN.

The several WIDGETs will help the user navigate thru the screen.


Weather Widget shows the weather, calendar and time.

Click the WEATHER WIDGET will bring the configuration screen of location and time-zone.


The apps at APP browser can be moved by long-press the apps and drag it to the home screen just like the smart phone.

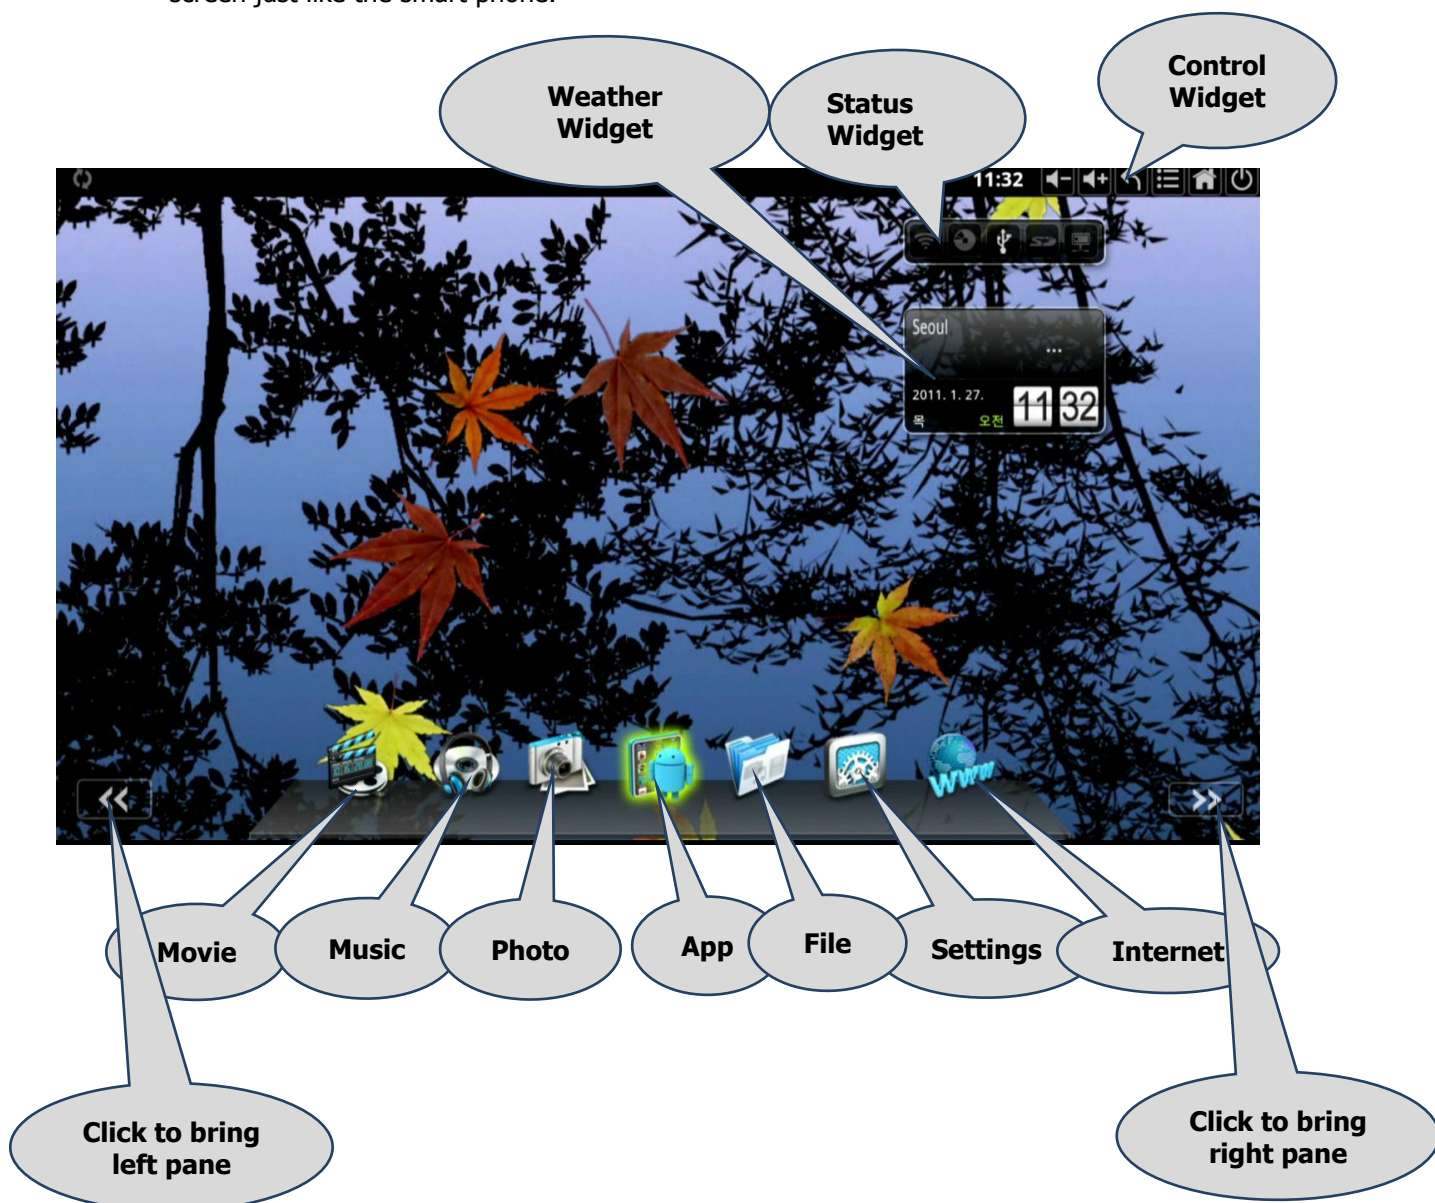



 
 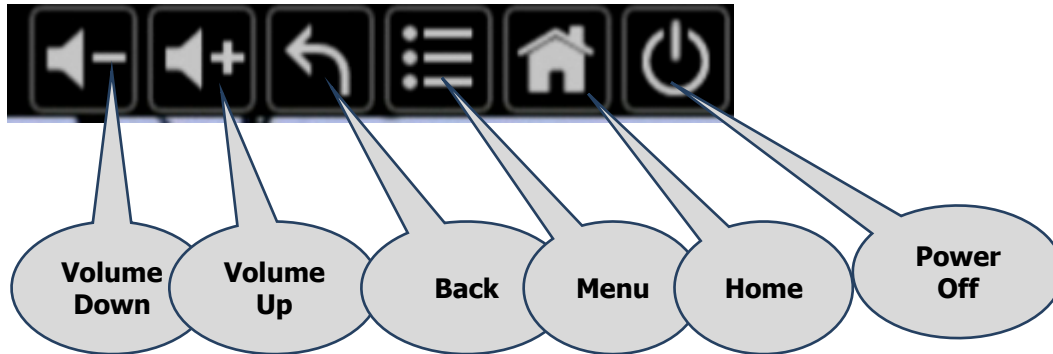



 

 
 
 
 


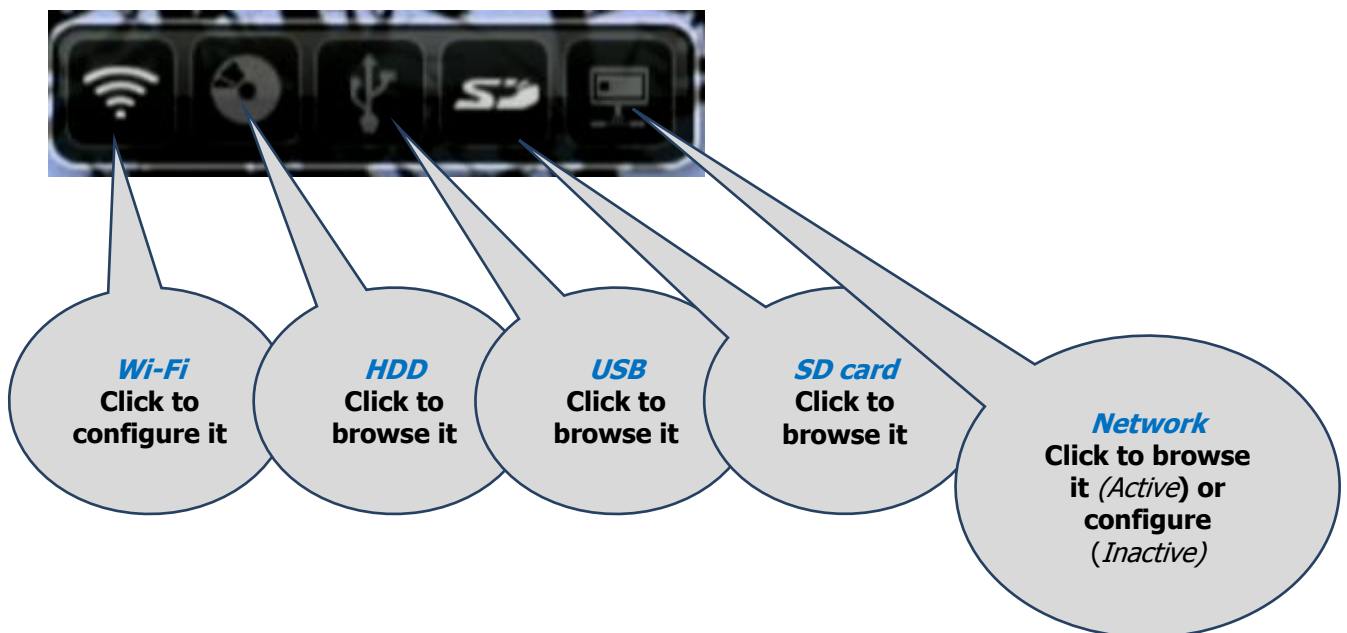


The **CONTROL WIDGET** lets users control the SCREEN and VOLUME by MOUSE. *The CONTROL WIDGET cannot be accessible by REMOTE. It's because one of the nature of Android.* It's only accessible by MOUSE. The same functional buttons are on the remote already. Please use them.




The **STATUS WIDGET** shows current status of each device. It will highlight when activated.



10 Using Remote Controller

POWER		Turn power ON/OFF
TV-OUT		Change the TV Output mode
NUMBER		Input numbers
HOME		Go to HOME screen
MENU		Pop-up MENU screen
BACK		Resume to previous screen
PREV/NEXT		Move to previous /next item (page)
ARROW		Move to each directed item
OK		Select
COLOR		Optional "hot" context button
PLAY/PAUSE		Play or Pause
FF/REW		Fast-Forward and Rewind
VOLUME		Volume Up/ Down
CHANNEL		Channel (PVR) or Sync (Subtitle) Up/Down
RECORD		Record (PVR)
MUTE		Mute the audio
BOOK MARK		Bookmark the current scene
SEARCH		Time/ Chapter/ Bookmark Search

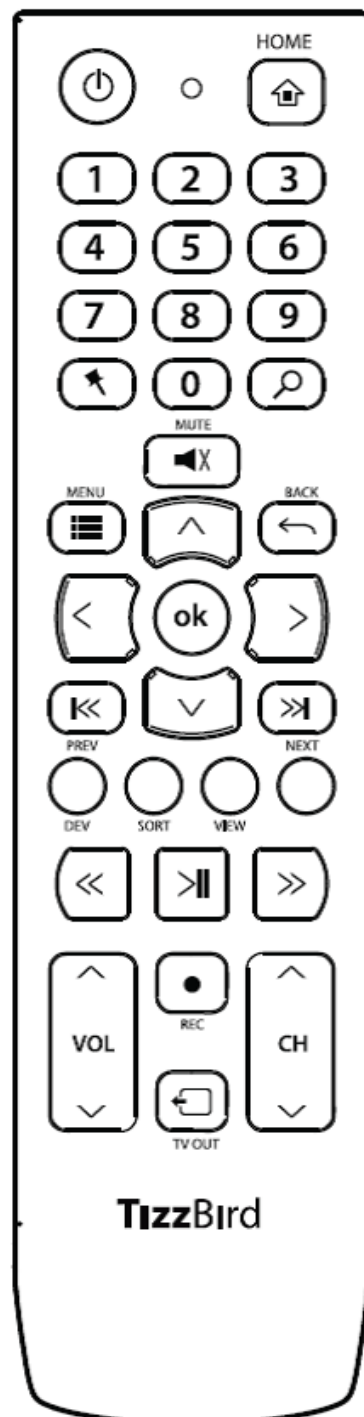


11 Firmware Update & Installation of Apps

The **new FIRMWARE** can be updated by OTA (Over the Air) when there is new firmware available. The information dialog will be pop-up when there is new firmware.

Here's the step.

- 1) **Prepare more than 128MB free space of USB flash drive or HDD.**
- 2) Connect this flash drive or HDD to USB host port.
- 3) Go to "Settings" icon → System Tab and select "Firmware Upgrade".
- 4) The firmware will be downloaded at the USB drive you connected and automatically updated.

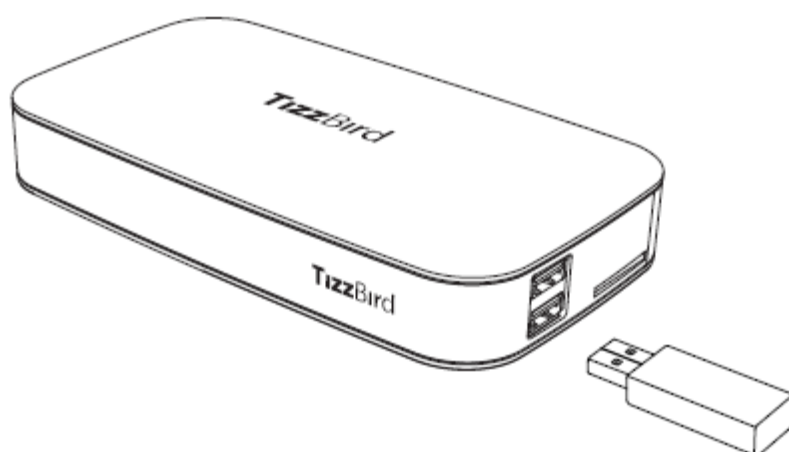

The **application can be installed** from MARKET application we bundled (1 Mobile Market). If you download many applications from market, internal NAND memory can be full. In this case you **need to install the extra SD card into the SD slot for more applications**. Then more application can be downloaded and installed.



Some applications are initially configured to be downloaded and installed into SD card only, not internal memory.

12 Initial Screen

12.1 Turning On Power

Press <POWER> button on the remote or press the power key at front panel to turn on the power. The unit will start boot-up.

Red color LED will blink fast during the booting. LED will turn into BLUE during normal operation after booting.


12.2 Audio Settings

Audio output should be configured as "Digital" mode to connect AV receiver. Select <Settings Browser> → <Audio & Visual> → <Audio Output>, then press <OK> button. Select the appropriate audio output port between HDMI, Digital (S/PDIF) and Analog (RCA), then select "Digital" at next screen.



When "Digital" mode is selected, the pop-up will come out like following picture. The each

audio format can be configured as ON/ OFF of pass-thru. Please choose appropriate “On” or “Off” status according to the capability of connected audio device.

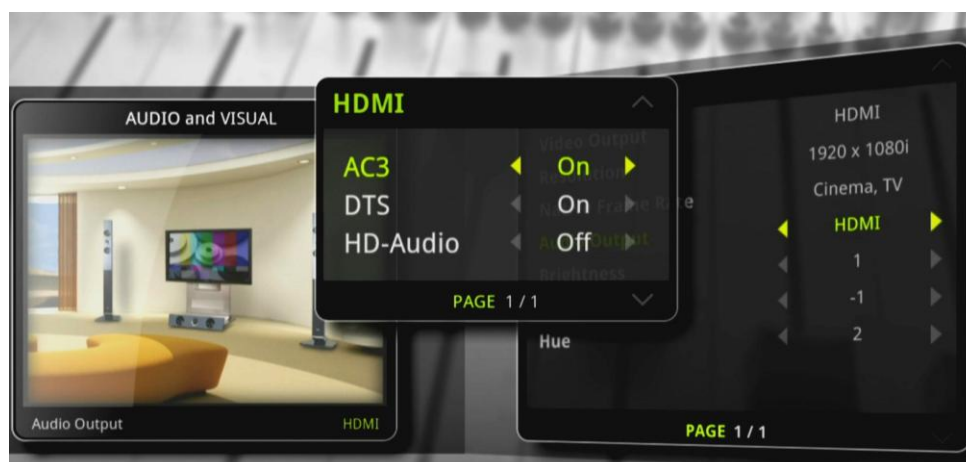


12.3 Network Settings

Network should be configured to surf Internet and download movie poster automatically from Internet and do network game. There are two types of network setting. One is Wi-Fi (Wireless), the other is Ethernet (Wired).


The USB Wi-Fi dongle should be prepared to connect network thru Wi-Fi. This optional Wi-Fi dongle can be purchased thru TizzBird local dealer, or **any USB Wi-Fi module that is using RealTEK RTL8188 or Ralink RT3070 as internal chipset can be used**. Prepare it and connect it to USB host port of the unit. **Prepare keyboard or mouse if the password of Wi-Fi is string**. Below mouse or keyboard is compatible with this unit.

- ✓ Keyboard: USB type or Wireless RF type
- ✓ Mouse: USB type or Wireless RF type

12.3.1 Configure Wi-Fi Connection

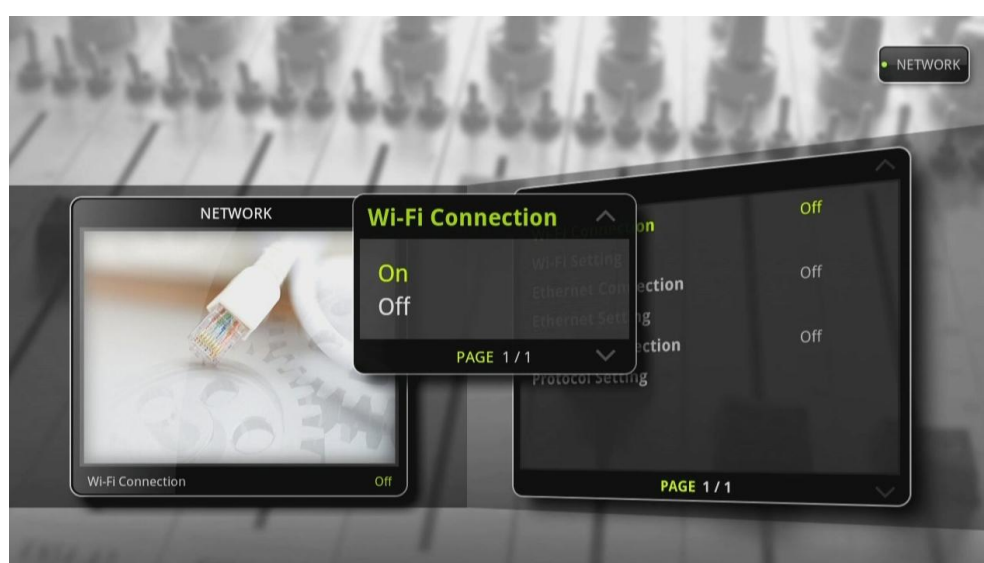

Select <Settings Browser> → <Network> → <Wi-Fi Connection>. If the wireless AP was not configured before, the below <Wi-Fi setting> window will pop-up automatically.

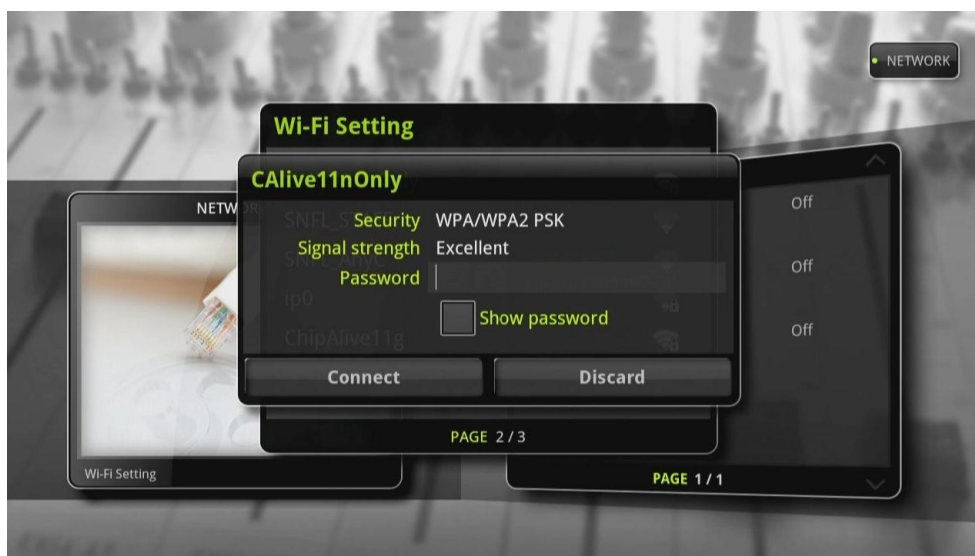

This pop-up shows the wireless access points available. Select one of them that can be accessible. It shows the signal strength and prompts the password, if password is required like below picture. Password can be input by remote button if it's composed of numbers. Or mouse or keyboard need to be used if the password is string.



- ✓ To maximize the performance of wireless connection, 802.11n mode is recommended. 1080p MKV movie or HD broadcasting stream can be streamed without stuttering. Wireless AP should be configured like below.
- ✓ Mode → 11n Only
- ✓ Encryption → WPA/2PSK

12.3.2 Configure Ethernet Connection


Gigabit Ethernet can be also used to connect wired network. Connect the network cable at the Ethernet network port at rear side of the unit.

- 1) Select <Settings Browser> → <Network> → <Ethernet connection>.
- 2) If the configuration is "Auto IP", the network connection will occur immediately.
- 3) Otherwise, network setting should be manually configured by selecting <Ethernet Settings>.




12.3.3 Configure Manual-IP Ethernet

To configure the manual-IP, select "Manual IP" like following picture then select "Next" button.

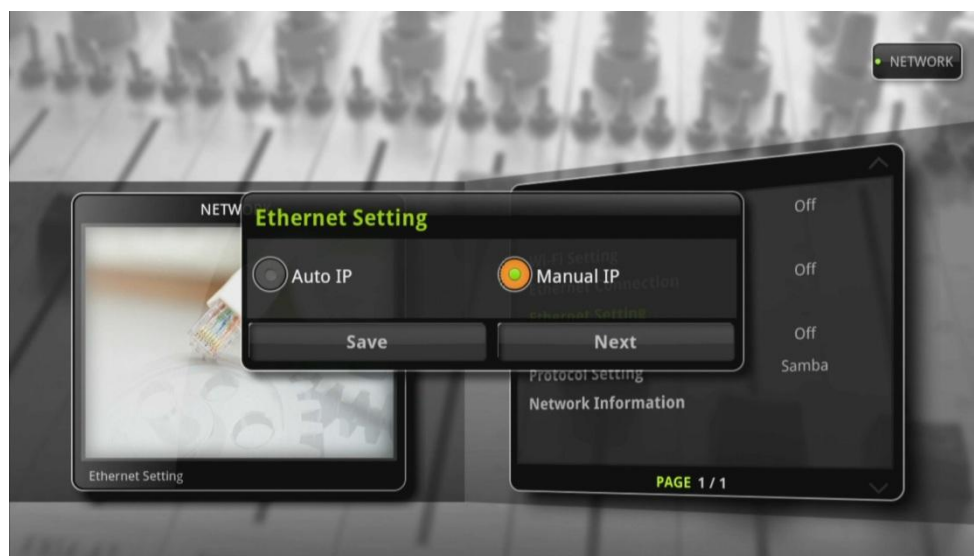


The following dialog box will appear. Enter the each digit by pressing number buttons on remote controller. Or you can use the mouse to enter the number. The virtual keyboard will appear if you click the field to enter.

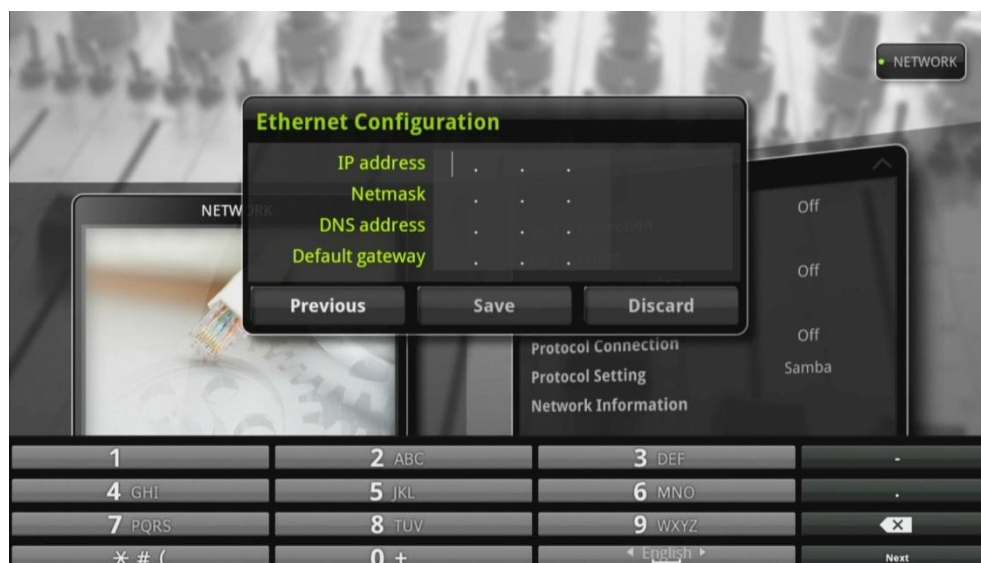

12.4 Turning Power Off, Completely Power Off

To turn off the power, press **<POWER>** button on the remote or press power key on the front panel. The LED will turn into RED status, and this shows the unit is in "STAND-BY" status. Press power button on remote control more than 1 second will bring up the following POWER-OFF DIALOG BOX.

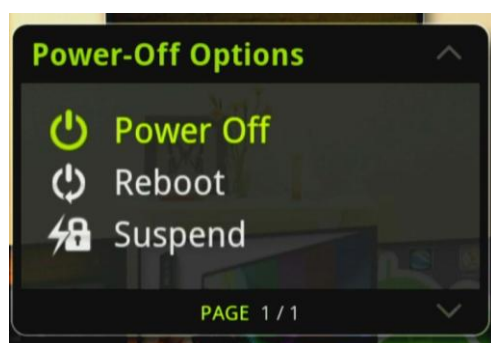

Power Off → Turn off power completely

Reboot → Reboot the system

Stand-by → Make it suspend mode

This unit consumes quite little power which is less than 0.4W at STAND-BY mode. This can be achieved by minimal power consumption logic. This unit supports high speed booting mode from STAND-BY. It takes less than two seconds to resume to the normal operation status from STAND-BY mode.

To turn power off completely, please press and hold **<POWER>** key at the front panel more than 4 seconds. The LED will be turned off completely.

The status of LED lighting is like below


- | | |
|-------------------|----------------------|
| ✓ Initial booting | → Blinks fast in RED |
| ✓ Operation | → Stays at BLUE. |
| ✓ Stand-by | → Stays at RED |
| ✓ Power Off | → Completely off |

13 Start-Up & Termination

13.1 Home Screen

The below HOME SCREEN will appear after booting up. It shows 7 different items. The each item can do the each designated browsing. For example, movies can be browsed at MOVIE BROWSER. HOME SCREEN consists of 7 browsers including (from left to right) FILE/ PHOTO/ MOVIE/ MUSIC/ SETTINGS/ APP/ WEB browsers.

To execute each browser, select the browser by arrow buttons on the remote and press <OK> button.

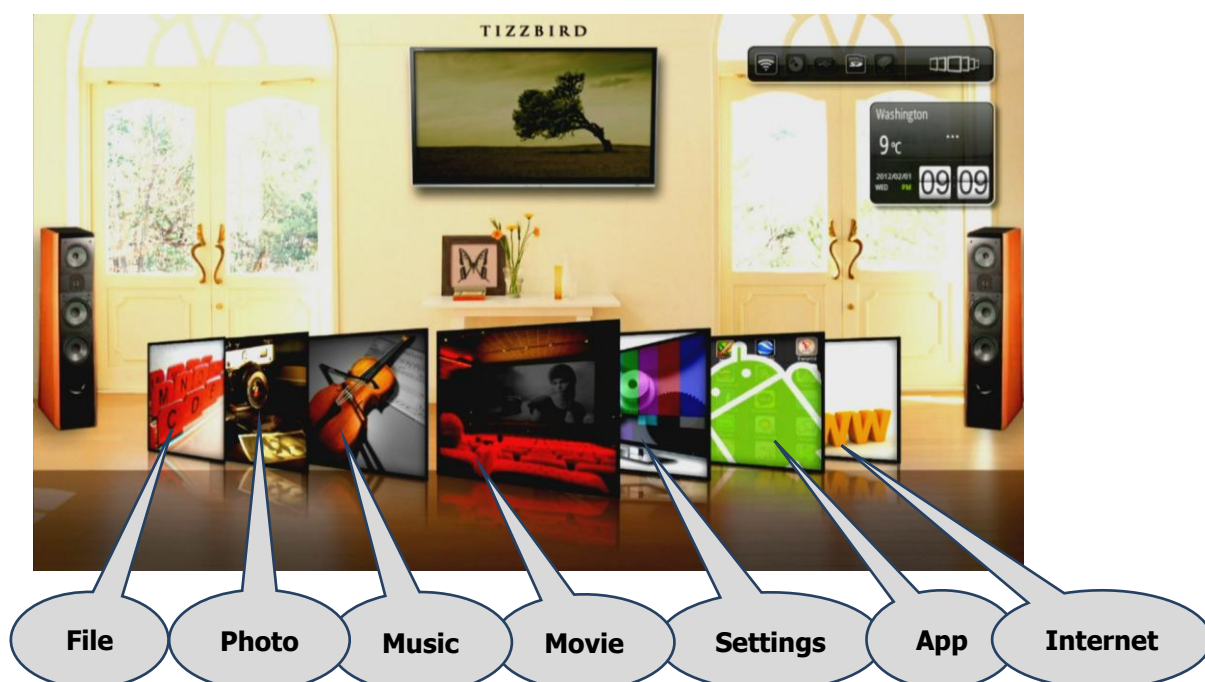

The default selection would be MOVIE BROWSER at first start-up. TizzBird is the unique unit compared to other units, since it retains consistent user-interface based on the powerful database feature of Android OS. TizzBird provides full featured cover-view and imaged oriented browsing, which is highly intuitive. The other units can only provide user interface, mostly text based information with additional images.

Movie Browser: Register all movie files and let you browse them on poster based.

Music Browser: Register all music files and let you browse them on album-art based.

Photo Browser: Register all photo files and let you browse them on folder image based.

Settings Browser: Browse available settings.

App Browser: Browse registered applications and let you select and execute them.

Web Browser: Let you surf Internet.

File Browser: Browse files and folders based on the device based. (Legacy mode)

13.2 Change Cover-View Style

TizzBird provides Open-GL 3D based Cover-View user interface. One of six different styles of cover-view can be selected as a view-style. Press "BLUE" color button on the remote. The cover-view selection pane will pop-up and let you select one of them.




This kind of selection is also available at MOVIE/ MUSIC/ PHOTO/SETTINGS browser, and one of them can be chosen always by pressing "BLUE" color button on remote.




13.3 Movie Browser

Movie browser will scan movie files on the devices when booting first or attaching external device thru USB. It will take several minutes (depends on size of HDD) for the 1st scanning. Once it's scanned, it will take much less time on next boot.

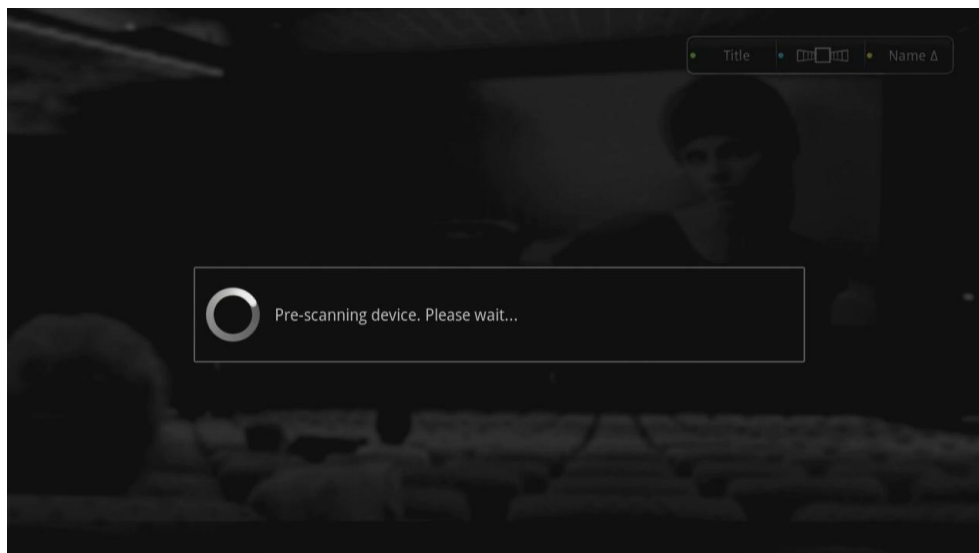

If movie posters are available for the movies, then cover-view screen like below will appear.

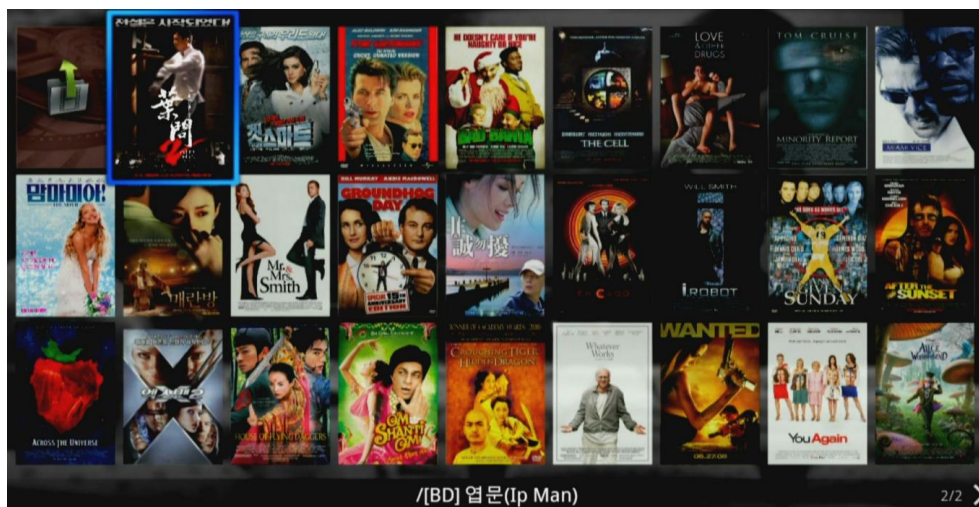


13.4 Terminate

Press <POWER> button on remote or <POWER> key on the front will turn the unit be into STAND-BY status. The unit will consume virtually nothing (less than 0.4W) in the STAND-BY status. The LED will turn into RED.

14 Watching Movie


14.1 Movie Browser


If MOVIE BROWSER is selected and if the posters were already scraped or registered for movies, then the following screen will appear. This screen is called "MOVIE BROWSER" screen. Up to 15 movies can be browsed at once per page. Arrow keys can be used to navigate thru posters. Keep press arrow key to browse continuously.

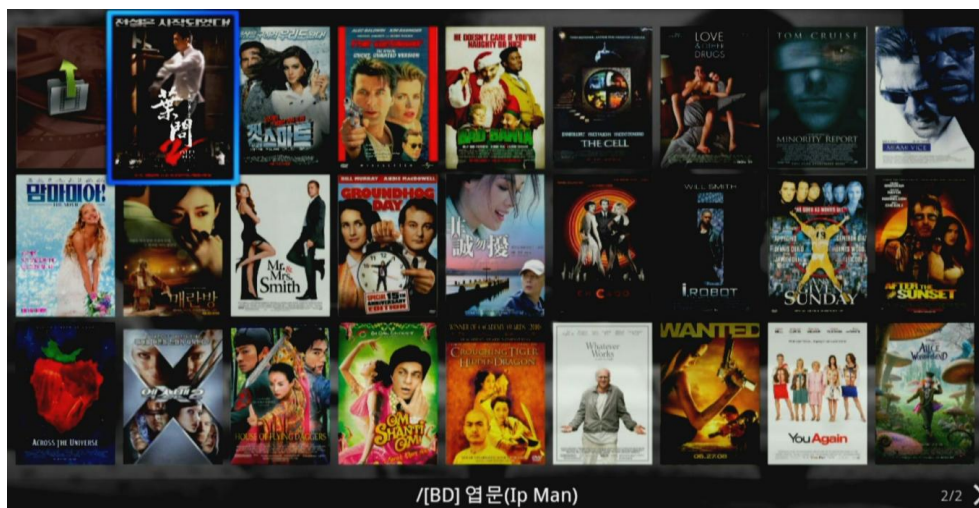

14.2 Control Widget at Browser Screen

The each specific browser was changed to support the control widget. Clicking the control pop-up button will bring the CONTROL WIDGET.


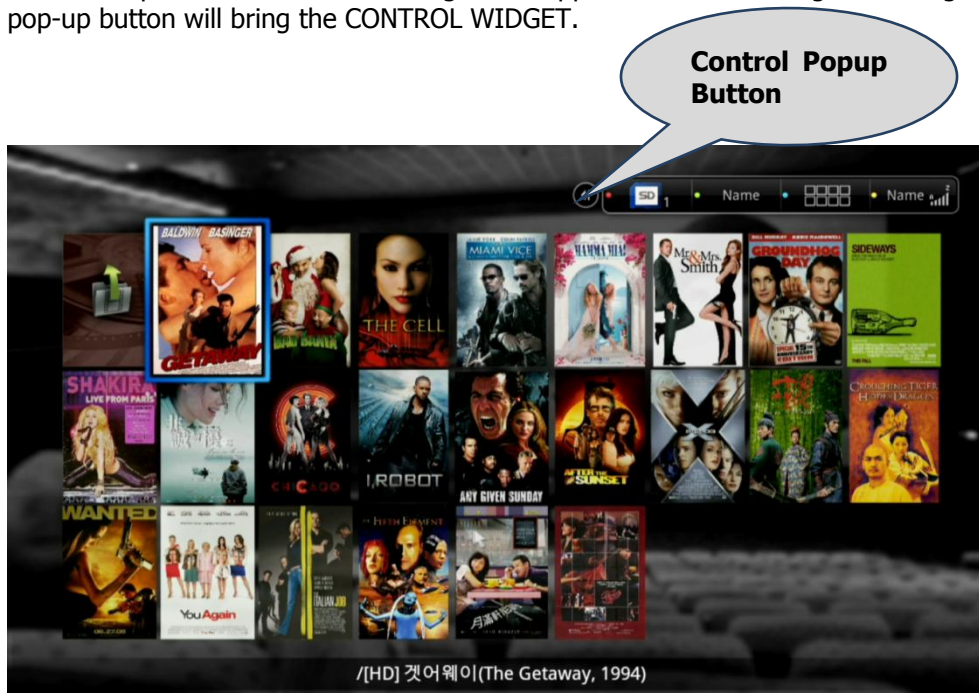


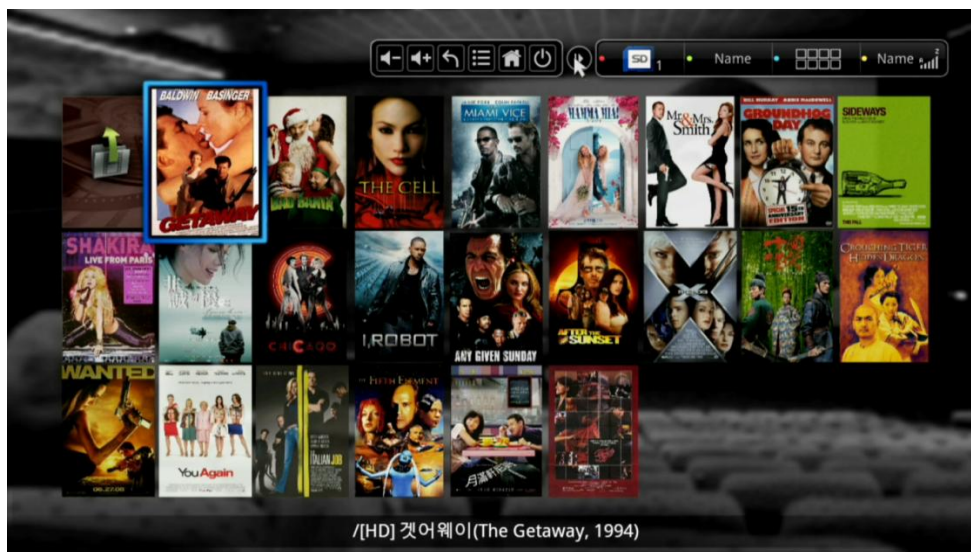

The control widget bar will appear to control the overall behavior of the browser.

14.3 Selecting Device

The attached device can be selected by RED color button on the remote, like below picture. This kind of device selection can be also available at MUSIC and PHOTO BROWSER.

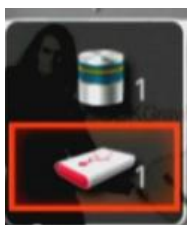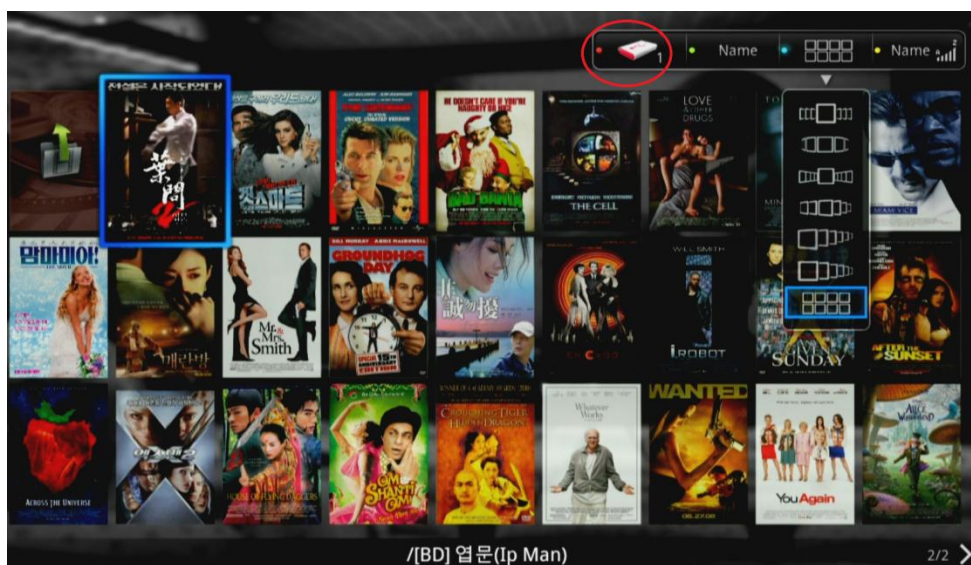

[Device Selection]


Selecting DATABASE will scan all the movie files on every device and show them. Selecting each device like HDD, USB or NETWORK DRIVE will just show the folders on that device. It will show the <Movie> folder on that device and will be browsed by FOLDER BASE.

14.4 Movie Browser Menu

<MENU> button at “MOVIE BROWSER” can be used to do various actions including searching movies, scraping movie posters, jumping based on bookmarks & resuming lists. Press <MENU> button on the remote.




“SEARCH” menu like above picture lets you search the movie quickly based on the title names and other information. Press <OK> to bring the following image. Use <UP> or <DOWN> arrow key to select the index, <LEFT> <RIGHT> arrow key let you change the digit of the wheel control, so titles can be browsed fast. Press <OK> to bring the poster of the selected movie.

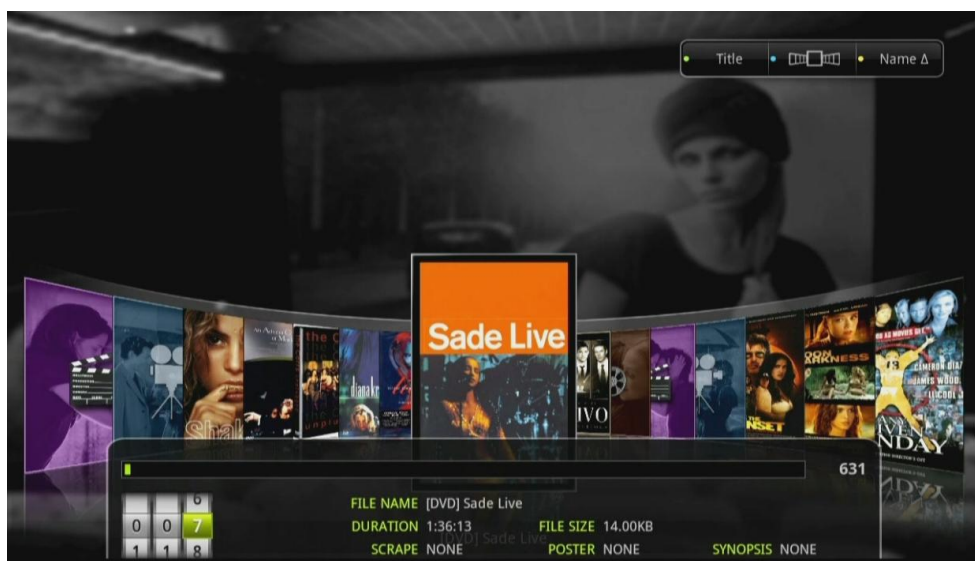


14.5 To Add Movie Poster


Movie posters should be added to make fancy movie browser like following screen. TizzBird has built-in poster downloader inside called <SCRAPER> which means scraping the movie information from network. Network should be connected before scraping movie posters. Please refer to section 8.8 to configure network settings. If movie does not have poster, the default image will appear like following screen. Press <MENU> to add movie poster.

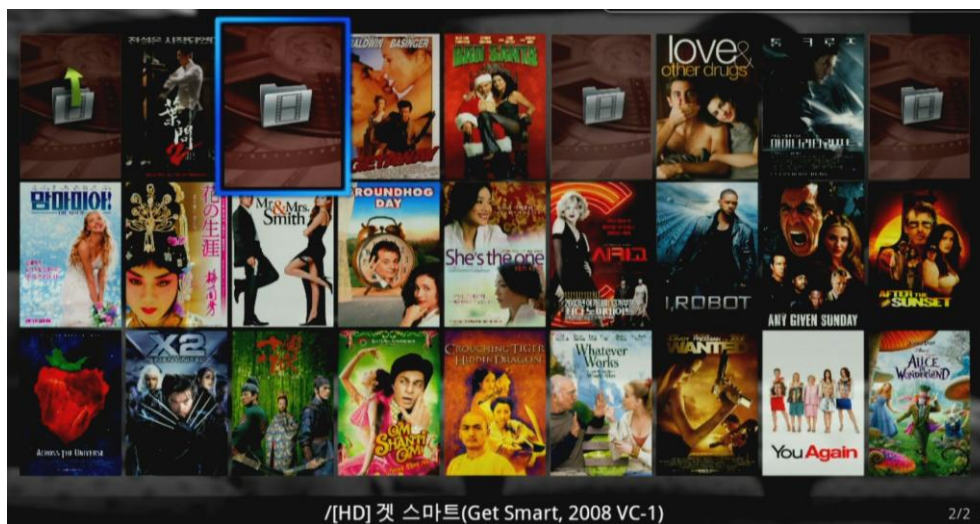

Select <Scrape Current > on the menu and press <OK>.

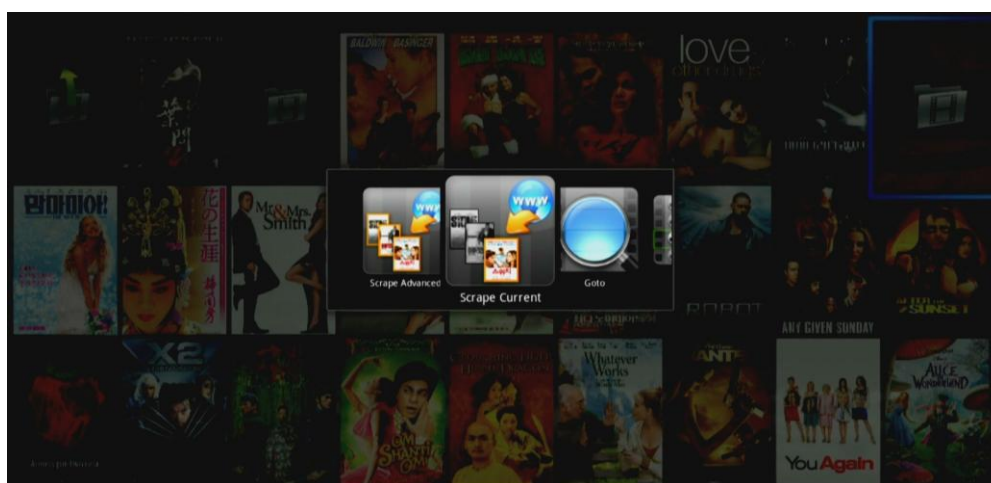


The following screen will appear when start scraping.

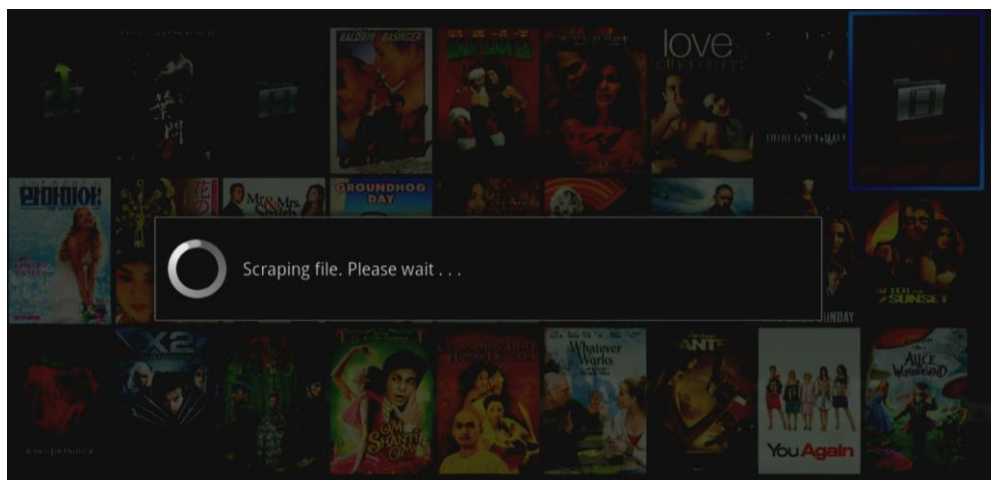

The scraping will be performed based on the file name, so there can be a chance the file name is not correct or not good enough. In this case, scraping can be tried again on the same file. The dialog box will be pop-up to enter or revise the file name to scrape. Click the dialog box with mouse to bring the virtual keyboard, so the scraping file name can be changed.

Press <DOWN> button on remote or click <SCRAPE> button on the dialog to restart the scraping.

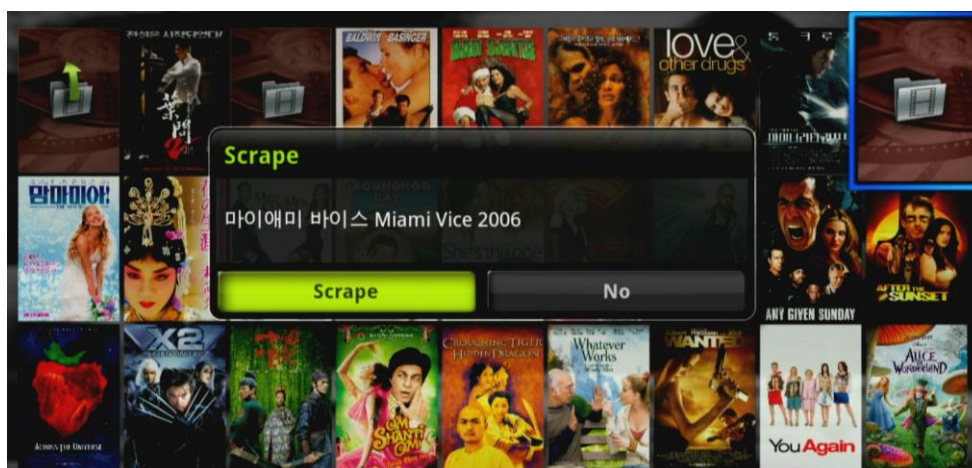

- ※ It's quite tedious to do the same things on all movies. There is a menu items to simplify those jobs. <Scrape Advanced> will run on the background since it will take quite long time to do the scraping. Movie can be playback still while the background job is running.

Scrape All: Ignore previous scraping results, and restart scraping for all movies.

Smart Scrape: Find not scraped files and start scraping.

Scrape Files in the folder: Scrape all the files on the designated folder.

- ※ <Scrape files in the folder> is the only available item at the DEVICE mode.

14.6 Synopsis Screen

The scraping consists of two steps. One is getting the movie poster, the other is getting the filmography including synopsis of the movie. If scraping is successful, the following screen will come out as a next when the poster is selected.


It shows a synopsis, running time, release year, genre, director and actors.



The bottom side of the synopsis screen shows the additional movie information like rating, movie format & resolution and audio information. Click the "start" button on the synopsis screen or press "OK" button on remote to start playback movie.


14.7 Resume and Bookmark

TizzBird provides RESUME function to the last playback position of movie, so it's not necessary to search it again manually. Press <MENU> button at MOVIE BROWSER and select <RESUME> menu to pop-up the resuming list. The resume list will appear like following image. Select wanted movie to resume to last playback position.

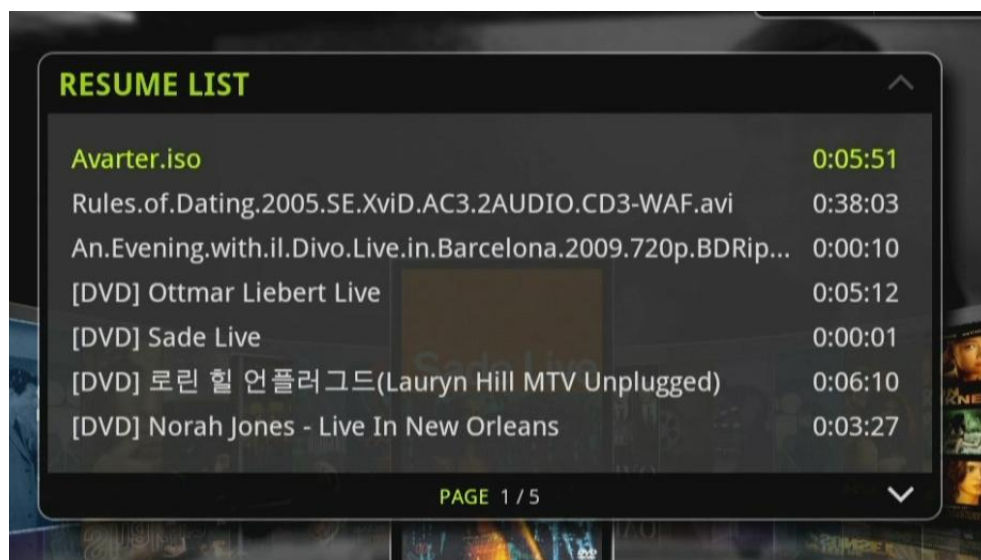


TizzBird also provides BOOKMARK function to memorize the scene position of movie. Press <BOOKMARK> button to memorize at wanted scene when playback the movie.

Press <MENU> button at MOVIE BROWSER and select <BOOKMARK> menu to pop-up the bookmark list. The bookmark list will appear like following image. Select wanted movie and position to resume to bookmarked position.

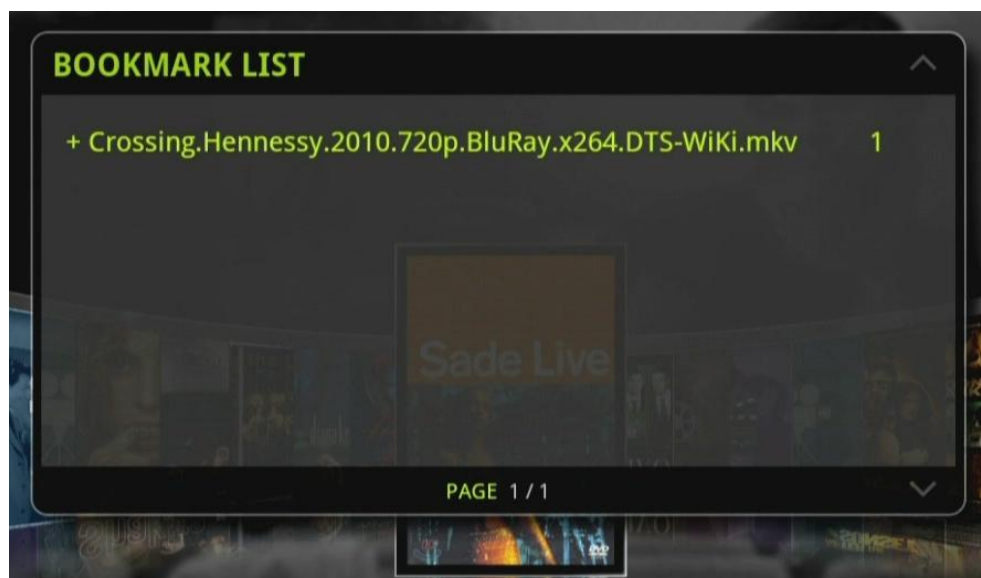

14.8 Movie Playback Menu

The information pane will appear at bottom side of screen as soon as movie starts like below picture.

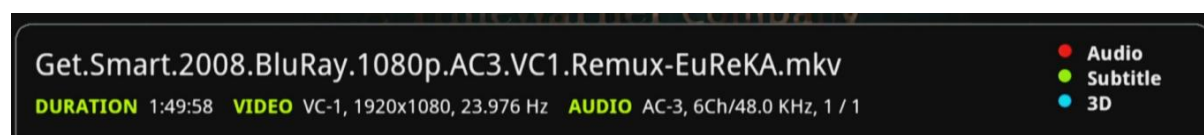

It will show title, running time, video and audio types. It also shows color buttons on the remote that can be used to control movie playback.


- RED color button: Select audio
- GREEN color button: Select and control subtitle parameters.
- BLUE color button: Select video parameters and 3D movie types.
- YELLOW color button: Show movie playback information.

TizzBird provides various control functions during movie playback. These functions include <TIME/CHAPTER SEARCH>, <INFO>, <SUBTITLE>, <AUDIO> and <VIDEO> settings. Most of functions can be activated by pressing <MENU> button. Press <MENU> button to pop-up the following menu screen.



14.9 Playback Speed Control


TizzBird provides various playback speeds and skip controls during playback including PAUSE/ FAST-FORWARD/ REWIND/ PREVIOUS/ NEXT.

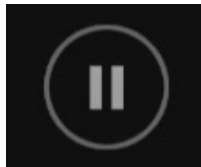


Press <PLAY/PAUSE> button to play or pause the playback.



 Press <PREV> or <NEXT> button to skip to previous or next chapter.



Press <FF> button to fast-forward playback. It will change from 4x > 8x > 16x > 32x then again 4x if press continuously

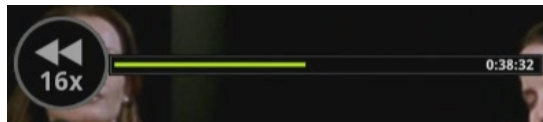

Press <REWIND> button to rewind playback. It will change -4x > -8x > ...


14.10 Searching Menu (Time, Chapter, Bookmark)

Press <MENU> button and select following image to search the movie by time, chapter or bookmark.



Select <SEARCH> image.

The following screen will appear after selecting <SEARCH> menu. Playback time position can be changed by arrows keys at wheel user interface. The CHAPTER or BOOKMARK field can be also appeared if they are available.

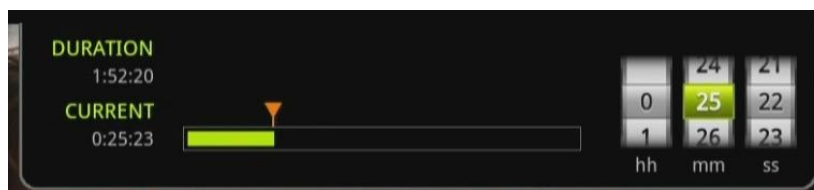

Press <UP> or <DOWN> key to select time.


14.11 Playback Information Menu

Select <INFO> image at movie playback menu to confirm the movie playback information.



Select <INFO> image.

The movie information and current playback position will appear like following image.

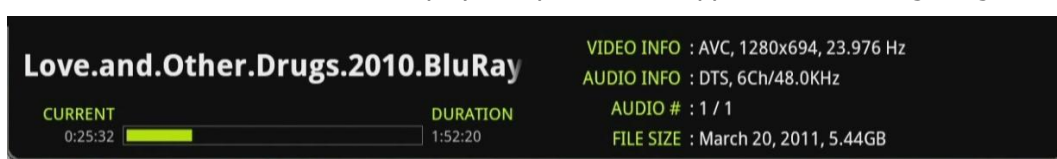


14.12 Subtitle Menu

Select <SUBTITLE> image at movie playback menu to control the subtitle language, position, size, sync and font



Select <SUBTITLE> image.

The subtitle position would be lowest bottom side at 100% and would be top at 0%.

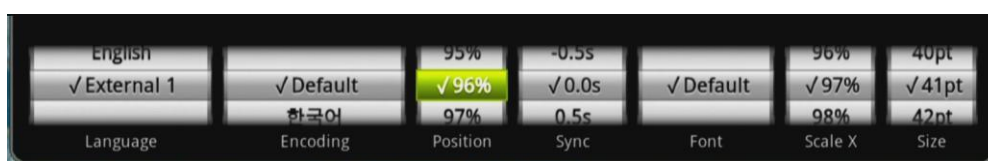


14.13 Audio Menu

Select <AUDIO> image at movie playback menu if multiple audio tracks are available.



Select <AUDIO> image.

Press <OK> after selecting audio format or language audio to change the audio track.

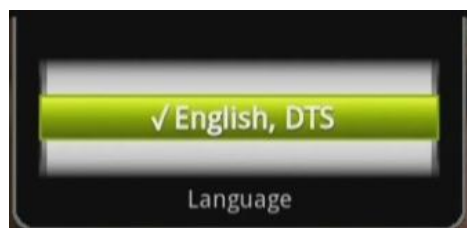


14.14 Video Parameter Menu

Select <VIDEO PARAMETER> image at movie playback to change the video parameters like brightness, contrast or hue.



Press <OK> after selecting the value to apply.

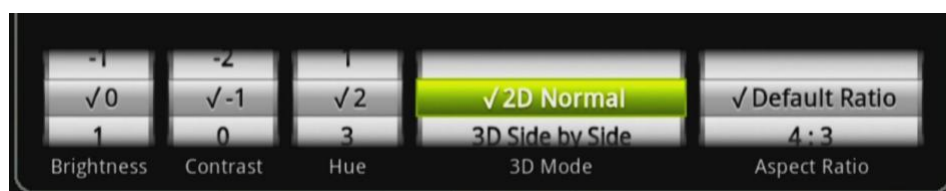

14.15 Playback 3D Format Movies

TizzBird supports 3D files, if 3D display is available. The supported formats are SIDE-BY-SIDE and TOP-AND-BOTTOM.

- If file name contains 3D and SBS (or TNB) string, then it will turn TV into 3D mode automatically.
- If file name does not contain 3D string, but it contains actually 3D contents, then BLUE button can be pressed to switch the TV into 3D mode.
- The subtitle and menu will be switched 3D mode automatically as well.


14.16 Skip Playback Position

Press <UP> or <DOWN> key during movie playback to skip movie playback position. The skip duration can be configured at <SETTINGS BROWSER> → <MOVIE> → <SKIP DURATION>. This function is quite simple to use to skip to the wanted scene


- . <UP> button → Skip forward
- <DOWN> button → Skip backward

14.17 Movie Playback Controller

The MOVIE PLAYBACK screen was changed as well to support the MOUSE. The CONTROLLER will pop up when *LEFT CLICK MOUSE* button.

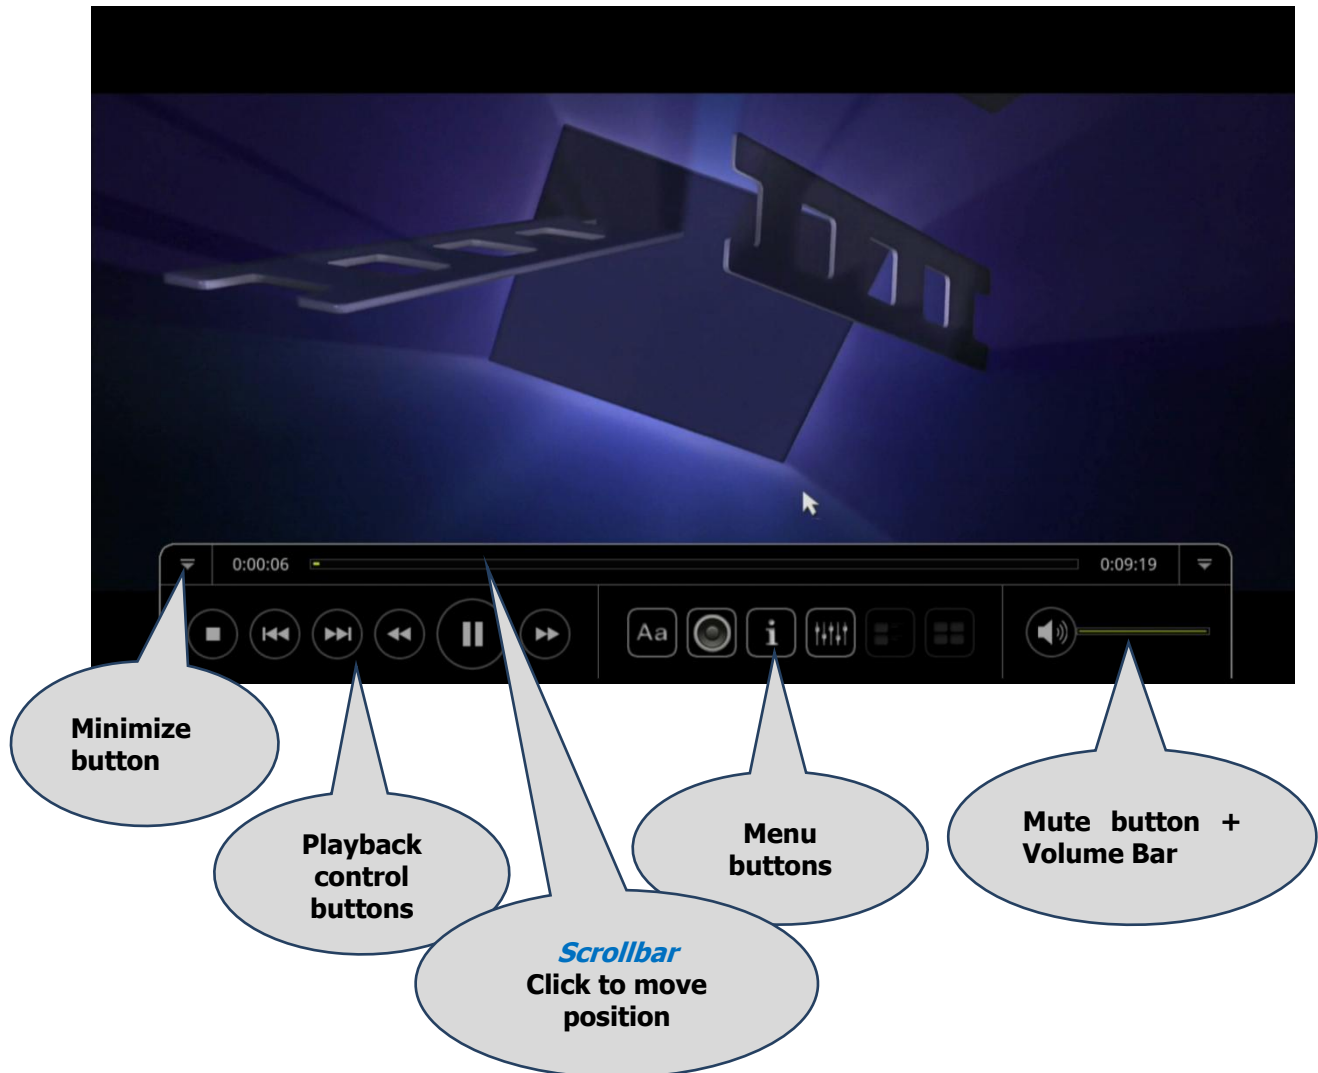

The **MENU BUTTON** group consists of several menu buttons.

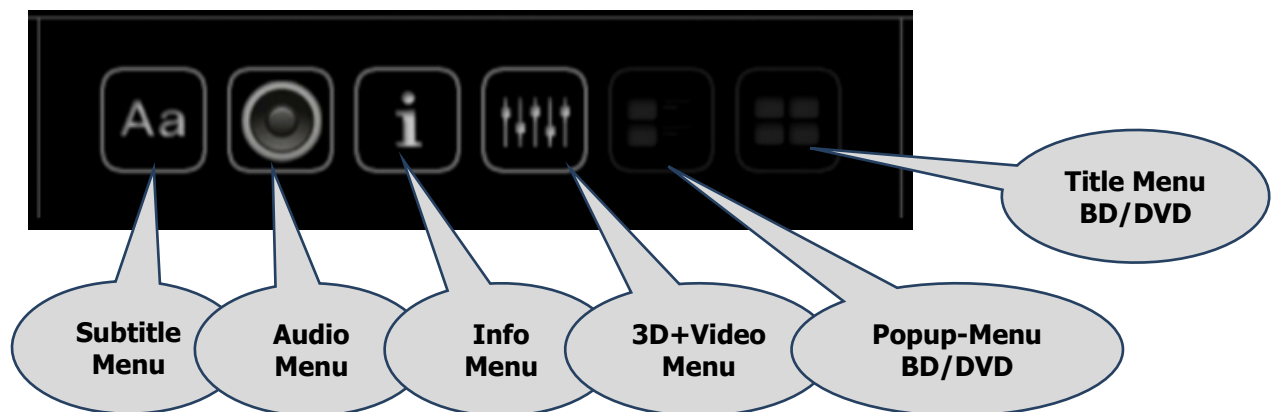


15 Listening Music

15.1 Music Browser

The following MUSIC BROWSER screen will appear if music files contain the album art at their tags. Press <LEFT> or <RIGHT> keys to move each direction. Keep pressing arrow keys to browsing continuously. The album-art screen will keep changing.



Press <MENU> button to bring <SEARCH> or <SCRAPE> menu just like MOVIE BROWSER.

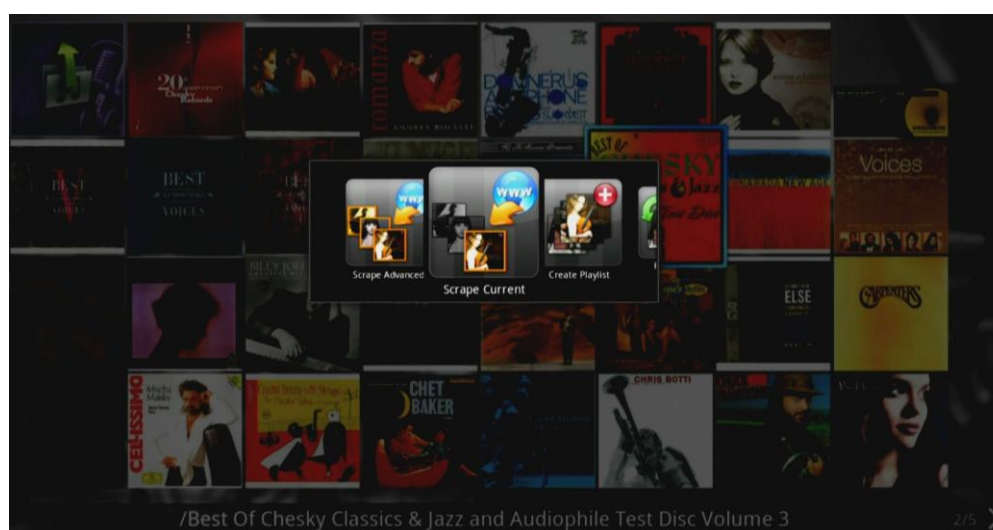

15.2 Sorting Music

Music files at large capacity hard drive need to be sorted since it's easy to organize and search. TizzBird provides various "SORTING" functions based on the powerful Android database. Press GREEN color button on remote to sort by ALBUM, ARTIST, TITLE or YEAR. The following two images show SORT BY GENRE and SORT BY YEAR.



SORT BY GENRE



SORT BY YEAR


15.3 Music Playback Screen

Select album art to playback the selected music. The following image will appear.

Left pane: Shows album-art image, current playback status and position.

Right pane: Shows list of songs, song information and album-art thumbnail.

Press <UP> or <DOWN> arrow key to browse songs and press <OK> to start playback. Now playing music will be shown in YELLOW and selected music in LIGHT GREEN color. Press <PREV> or <NEXT> button to turn pages, if there are more pages on the song list,

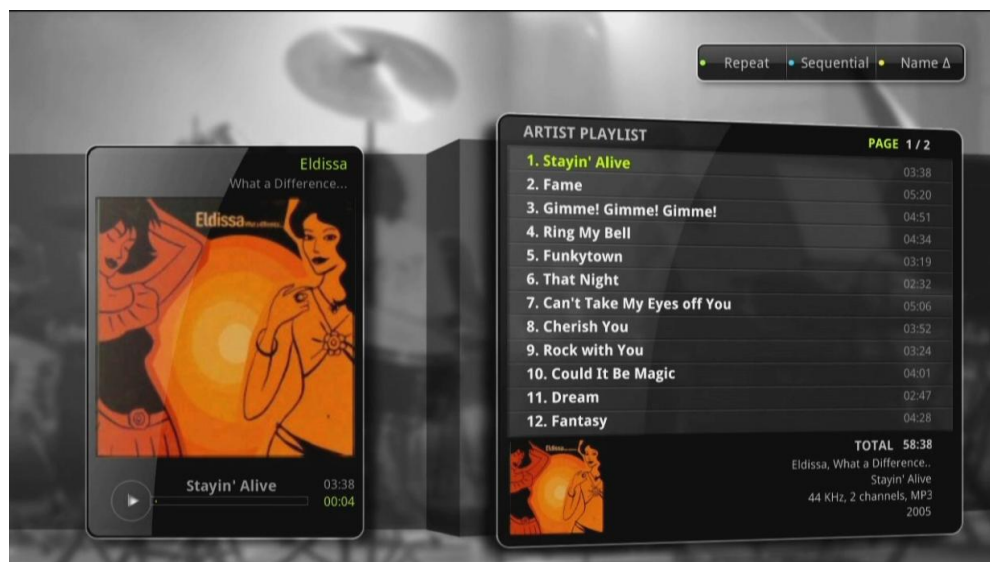

15.4 Music Playback Menu

Available button when playback music is like this:


<PLAY/PAUSE> button: play or pause the music

<UP> or <DOWN> button: skip playback position designated at settings.

16 Watching Photo

16.1 Photo Browser

The following PHOTO BROWSER screen will appear when selecting PHOTO BROWSER. It's composed of superb folder thumbnails COVER-VIEW which is quite neat and intuitive. Each image shows thumbnails of photos that folder contains.

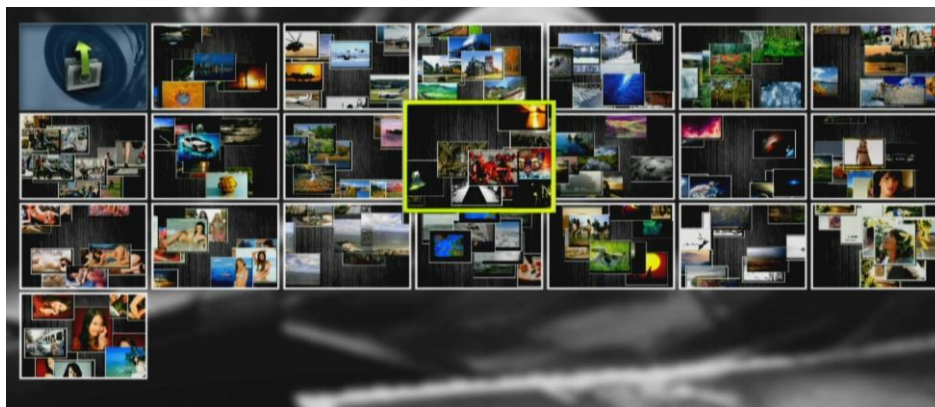

16.2 Photo Browsing Menu

Press <MENU> button to bring quick <SEARCH FOLDER> function.

16.3 Photo Wall

The following screen will appear after selecting one of the folder thumbnails. Photo wall can be used to select one of photos. Use arrow buttons to navigate the photos and press <OK> button to see the photo at full screen.



16.4 Photo Playback Screen

Photo slide show will start automatically, so next photos will keep appearing with transition effect. The various TRANSITION EFFECTS can be configured at <SETTINGS BROWSER> → <PHOTO>.




16.5 Slideshow Control

Slideshow can be controlled by arrow and <PLAY/PAUSE> buttons. Press <PLAY/PAUSE> button to pause or resume to playback. Use arrow keys to change the slide direction.

17 Posters, Album Art and Photo Arrangements

The arrangement of each browser and shape of each item can be configured at each browser. For example, you can change the number of items of movie browsers and shape of posters.

Press <Menu> button on the remote at Movie Browser. The <Movie Settings> Menu was added to configure the movie browser directly. This will bring the <Settings Browsers> → <Movie> directly.

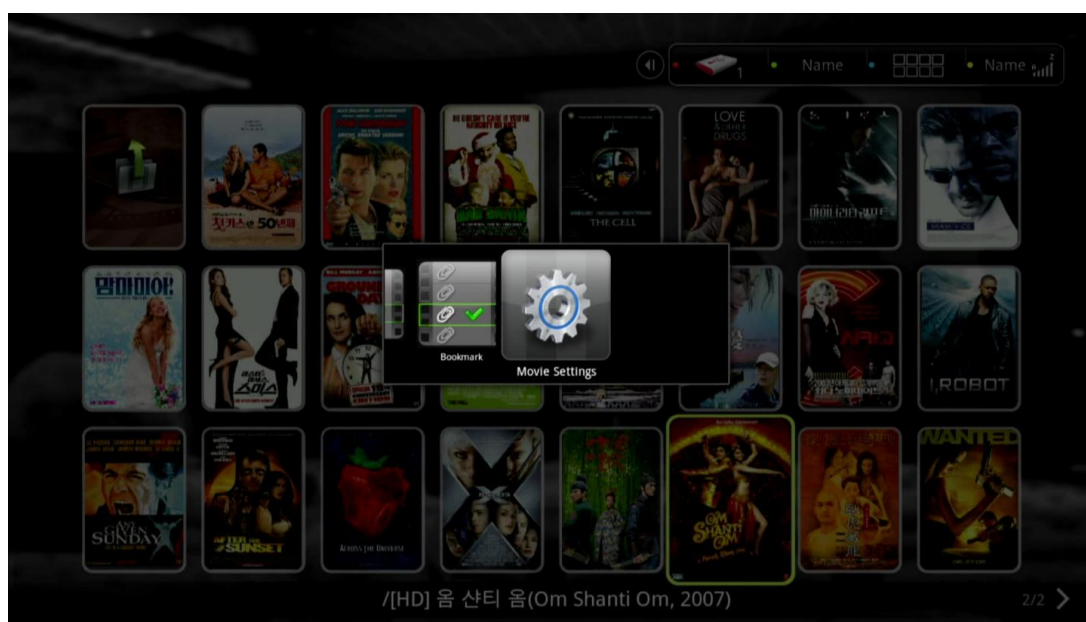

You can configure the movie posters arrangements and shape of posters.

Press <Menu> button on the remote at Movie Browser. The <Movie Settings> Menu was added to configure the movie browser directly. This will bring the <Settings Browsers> → <Movie> at movie browser.




There are new setting items at PAGE2 of movie settings like above screen, which are <Browser

Mode> and <Browser Item Mode>. You can configure layouts of browsers at <Browser Mode> and configure shape of each item at <Browser Shape Mode>.



For example, the <Browser Item Mode> will bring you the following screen to configure the border type, border alpha value, width, radius and item alpha. Alpha is transparency rate.




For example, configure 8x3, rounded border and border width 3 will give you something like this movie browser.

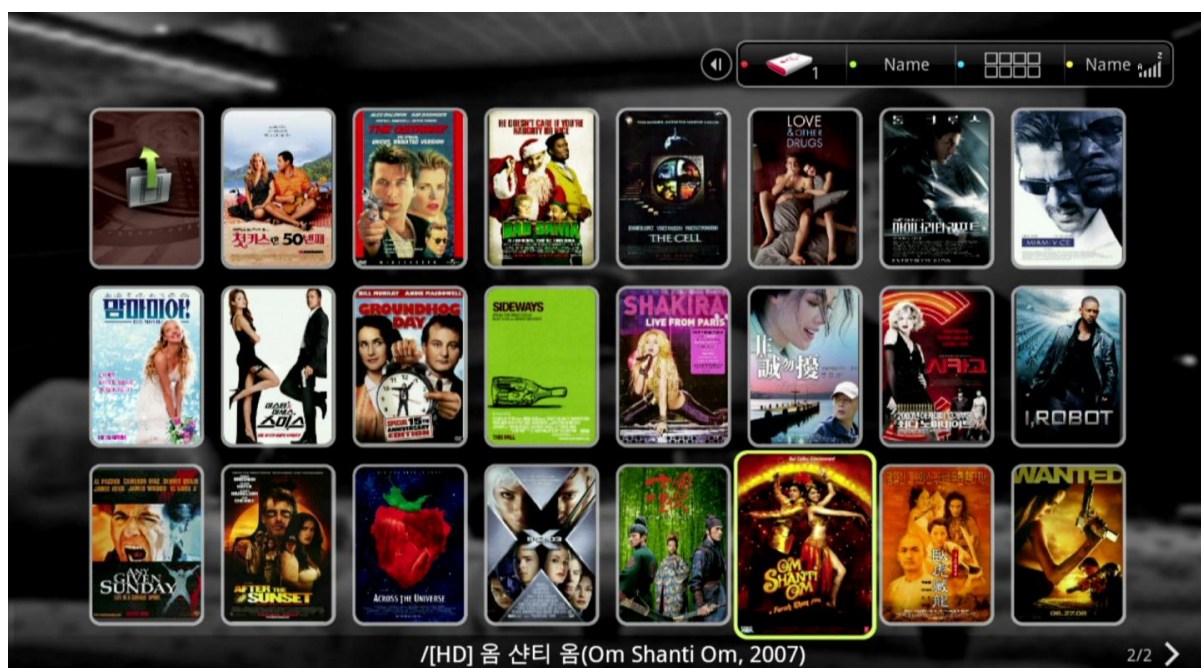


This kind of configuration is also possible at MUSIC and PHOTO BROWSER. Please notice the following screen-shots.

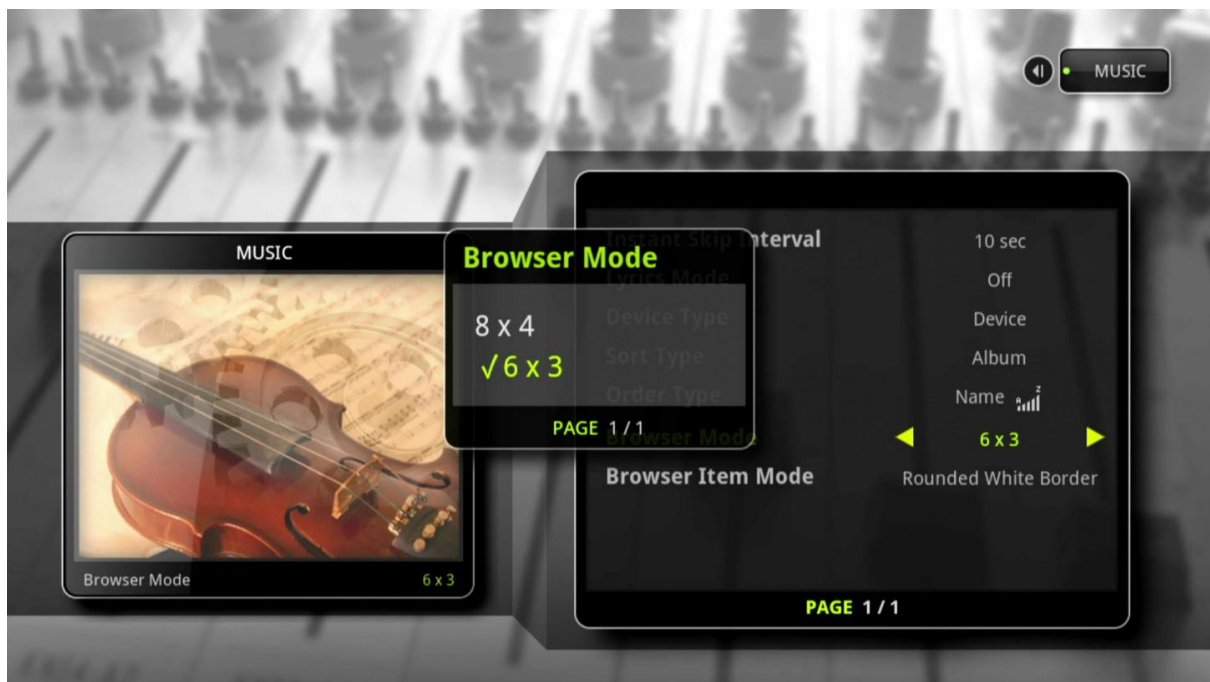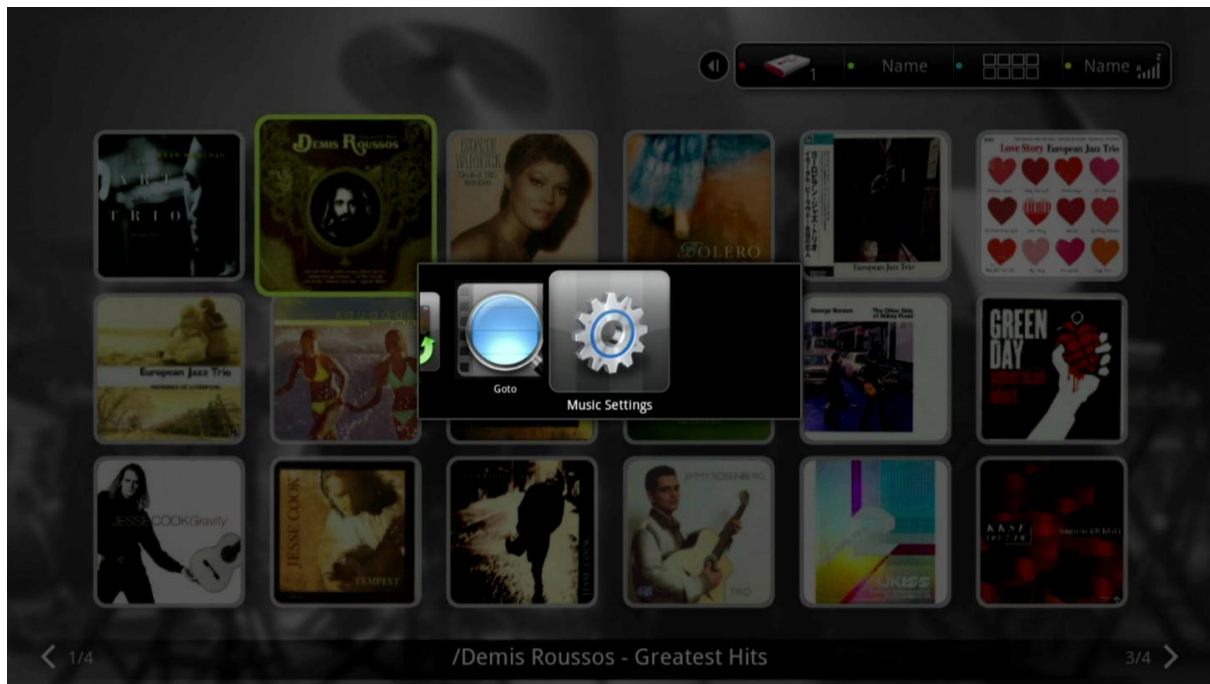

For example, configure 6x3, rounded border and border width 3 will give you something like this music browser.

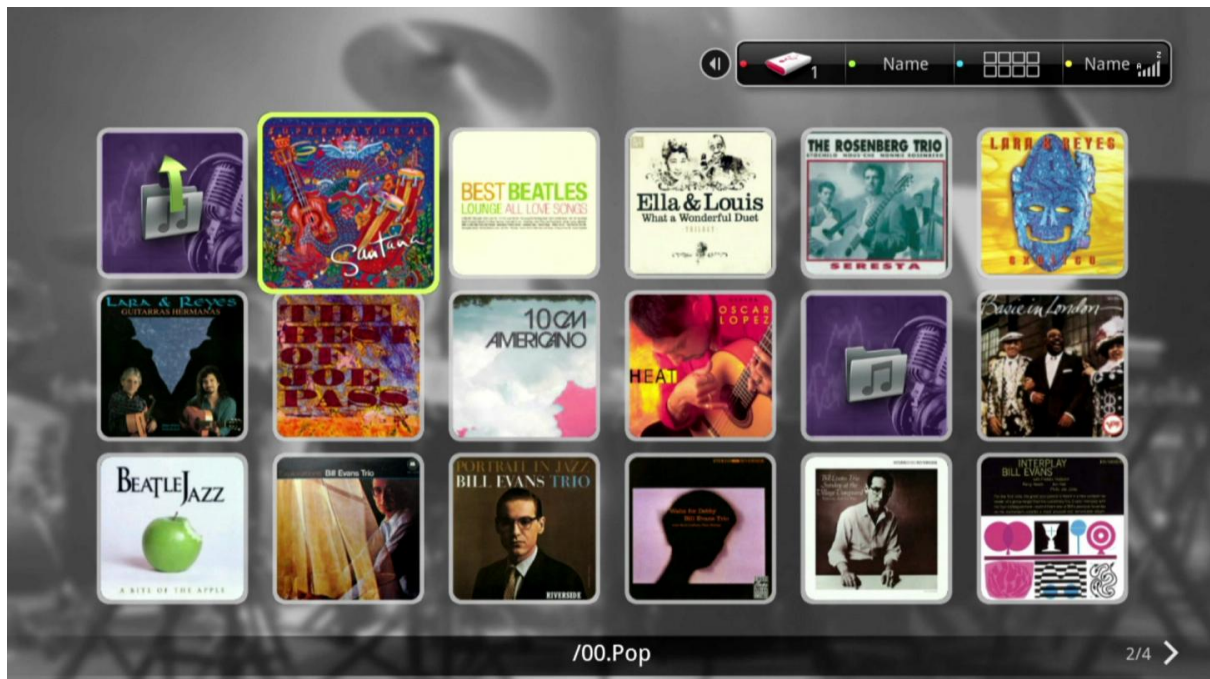


Here's the photo setting:

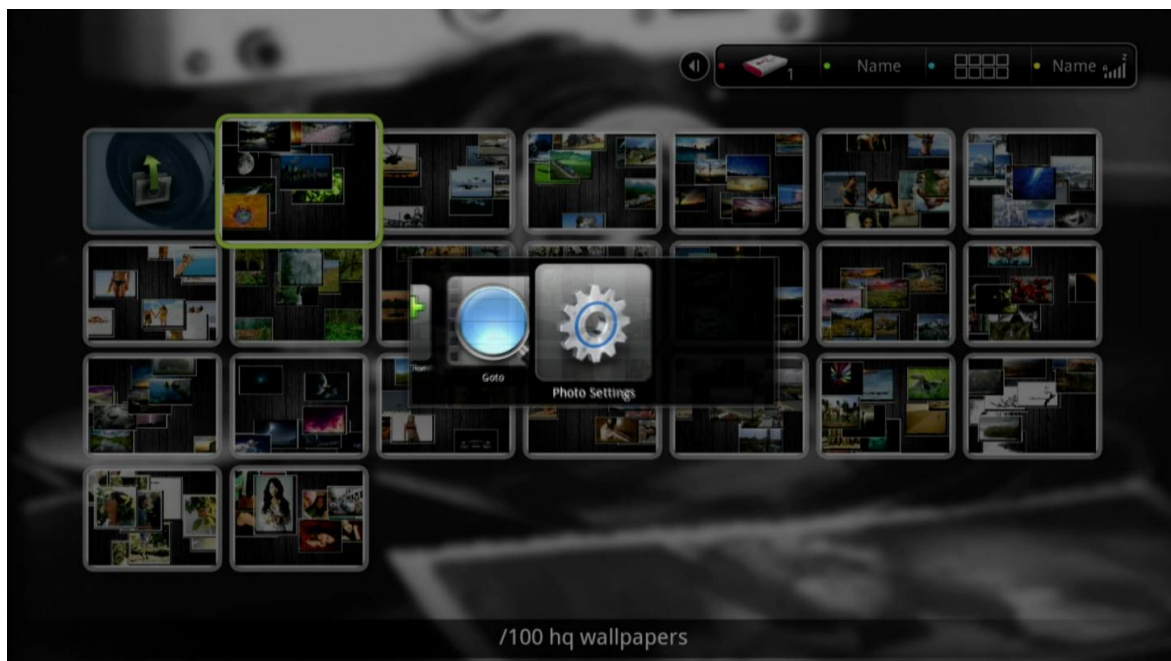



For example, configure 7x3, rounded border and border width 3 will give you something like this photo browser.

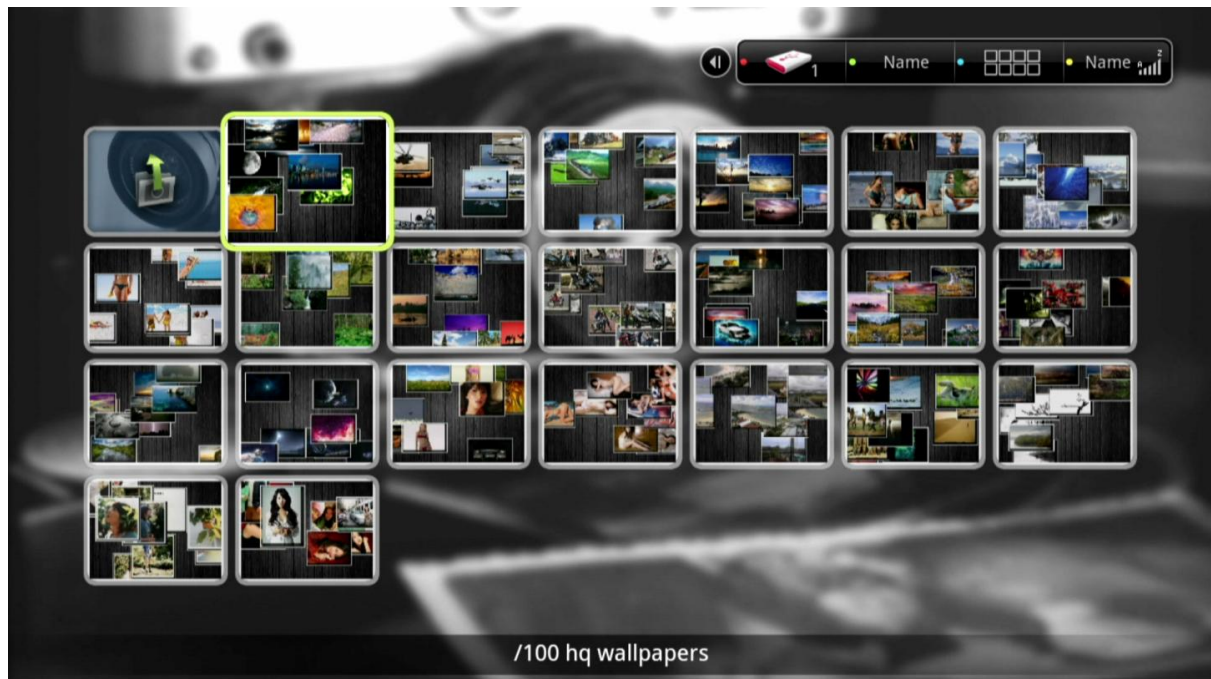


18 Using File Browser


18.1 File Browser Screen

The following screen will appear when selecting FILE BROWSER. This is quite similar browser user interface that legacy media players provided before. Folder or file based browsing is possible on this browser, and selecting and playback the file directly.

The left pane is FOLDER PANE, and the right pane is FILE PANE.

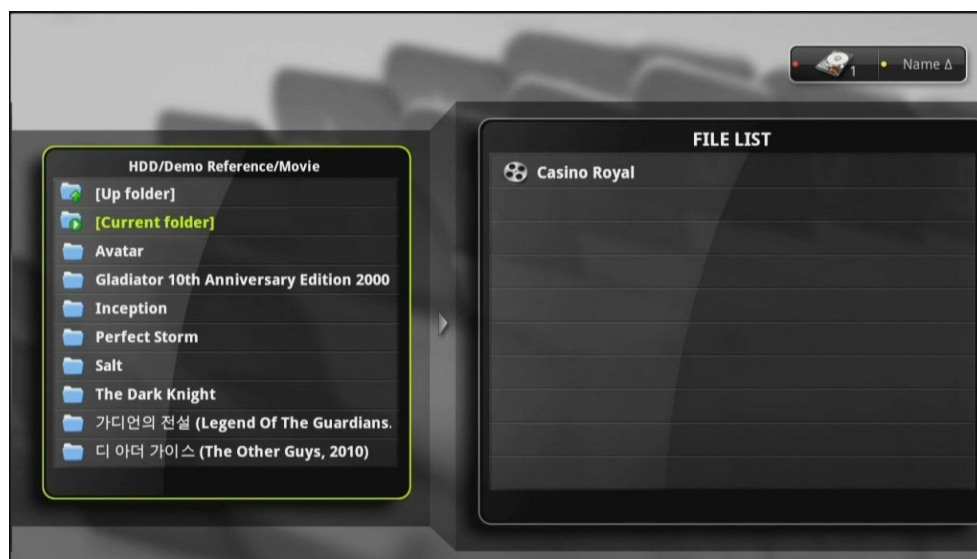


Folders can be browsed by arrow keys and press <OK> button to select that folder. The files will be appeared on the right pane if that folder contains the files. The GREEN outline on the pane means it's selected. Press <RIGHT> arrow button to move the FILE PANE and select the file. Press <OK> to select and start playback that file.

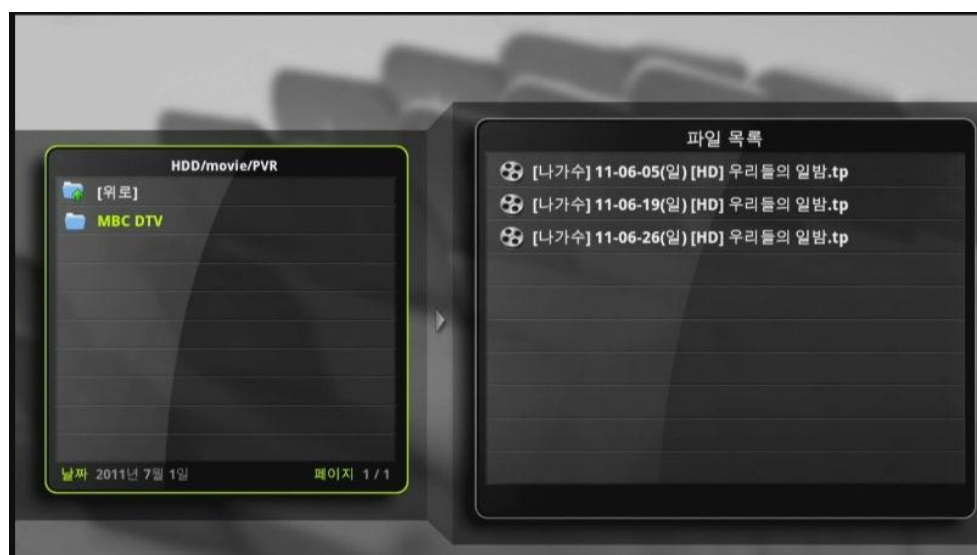

18.2 Selecting Device at File Browser

External USB, internal HDD storage device, or network drive can be selected at FILE BROWSER. Press <RED> button on the remote and the device drop-down list will pop-up like following image. Use <UP> or <DOWN> arrow key to browse devices. Choose one of them then press <OK> to select it.

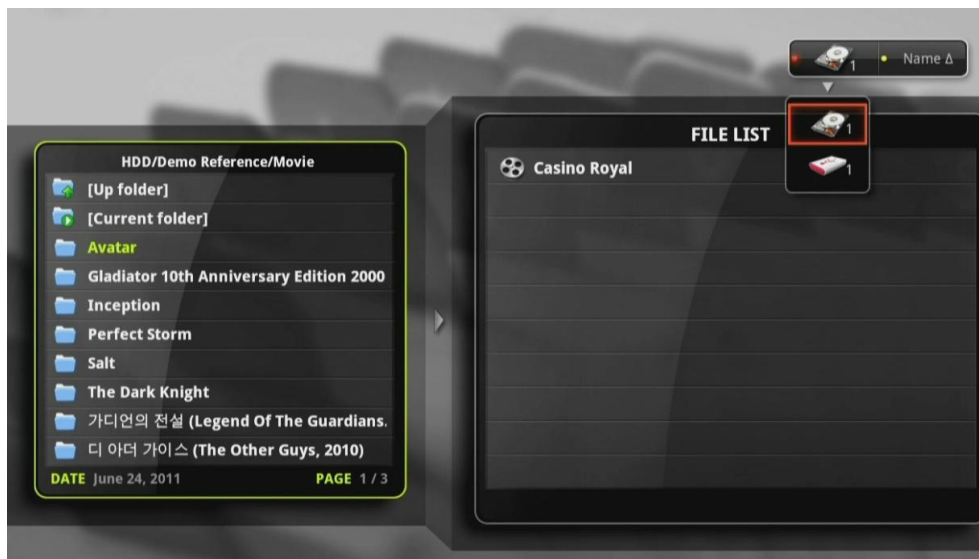


18.3 Register Subtitle Font File

Subtitle font file can be selected at file browser. Copy or move the font file (true-type font file - .TTF extension) to the USB drive or internal HDD from PC, then connect the drive to TizzBird. Press <RED> button to select drive and navigate into the folder that font file was copied. The font file will appear like the following image.

Select one of the font file and press <OK> button to register. Several font files can be registered at once.




Registered font files will appear at movie playback screen menu. Press <MENU> button and choose <SUBTITLE> icon.

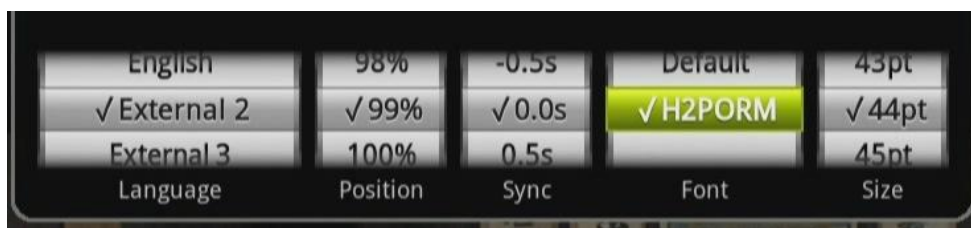

18.4 Using File Operation

Rev 1.12 firmware provides the "File Operation" capability which enables COPY, MOVE, DELETE, RENAME and NEW FOLDER functions. Press "MENU" button on the remote then select the "File Operation" ICON at the pop-up window to enter this mode.

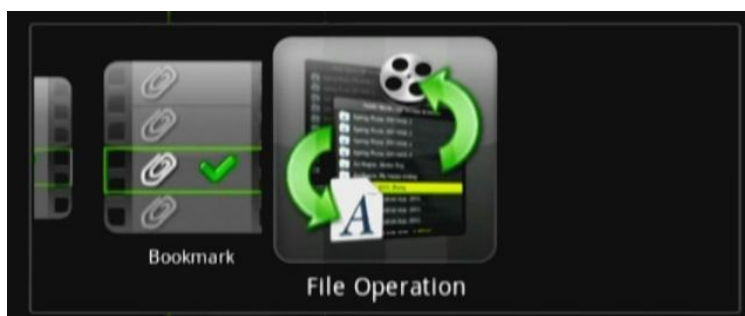

This will bring the following screen.



The left pane is source window and the right pane is target window. The "File Operation" will function from left pane to right pane. The following remote buttons can be used.



OK button →

Browse and enter the folder.



Bookmark button →

Select the item to operate.




Menu button →

Pop-up the FILE OPERATING ICONs.

Please use left or right arrow button to move left or right pane. The RED button can be used to select the device at each pane. This RED button enables the selection of source or target device at each pane.

Pressing BOOKMARK button will check the selected item like below picture. The check icon will appear on the small box at left side of item.

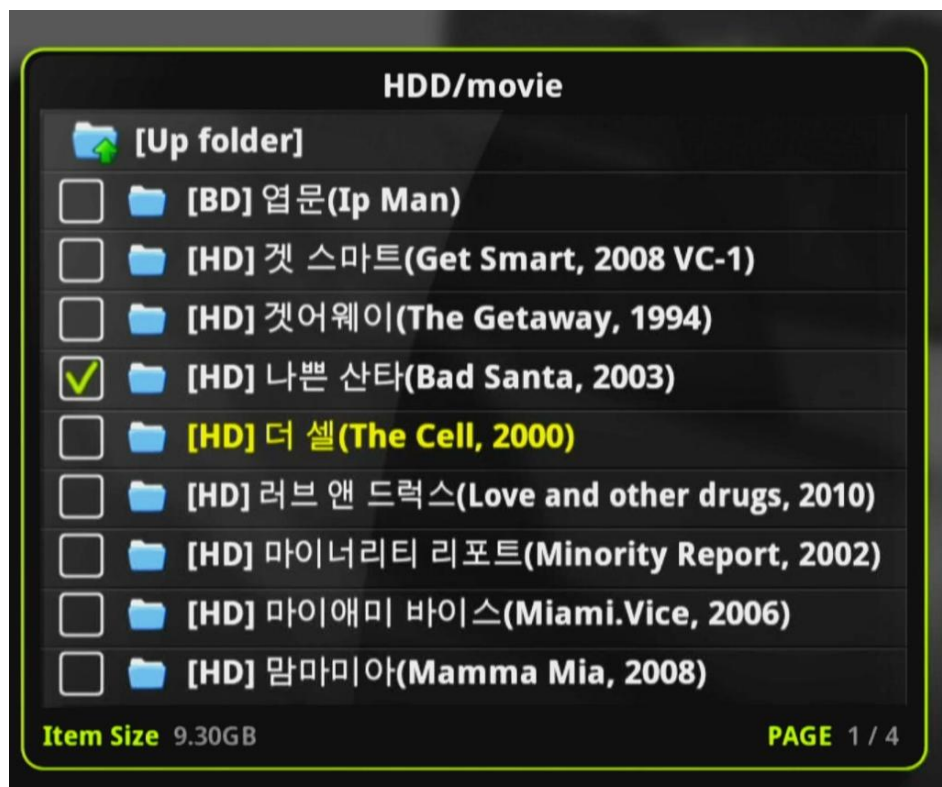

The total size of selected item will be also calculated whenever BOOKMARK button is pressed. It will take some time if there are many items at selected folder.

Pressing MENU button will bring the following POP-UP menu to select the function. The *COPY, MOVE, DELETE, SELECT ALL, CANCEL, RENAME, NEW FOLDER* can be selected.




The *COPY* or *MOVE* operation will be performed always from LEFT PANE to RIGHT PANE. The *DELETE, RENAME, SELECT ALL* and *CANCEL* will be performed always at LEFT PANE. The *NEW FOLDER* will be performed on selected pane. Please select the wanted icon to execute the operation.

19 Connecting Internet

19.1 Execute Internet Browser


Web browser will appear if WEB BROWSER was selected at HOME SCREEN and network was connected like following image.

※ Using mouse is highly recommended at WEB BROWSING. Wireless RF or USB mouse can be used. Web address or other information can be entered thru virtual keyboard with mouse. Wanted article or link can be clicked with mouse as well.

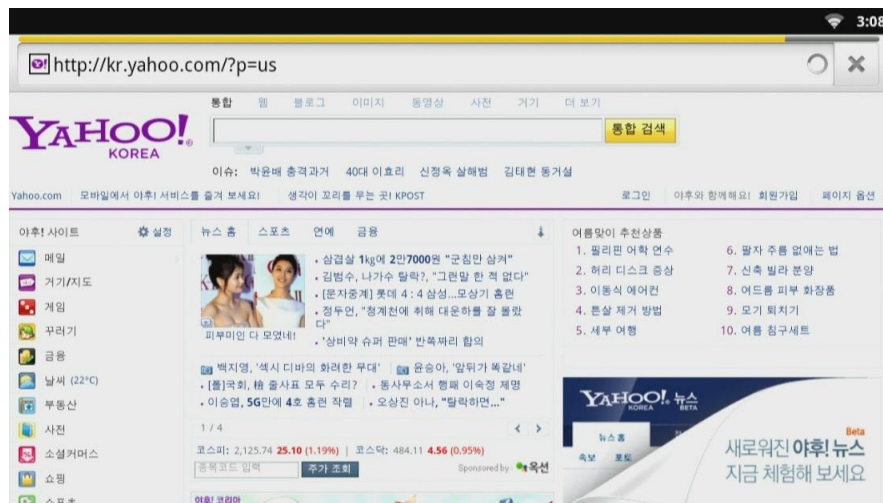

19.2 Control Internet Browser

Press <BACK> button on remote or click mouse right button to move back to the previous screen. Press <MENU> button on the remote to change the home page and register at there.

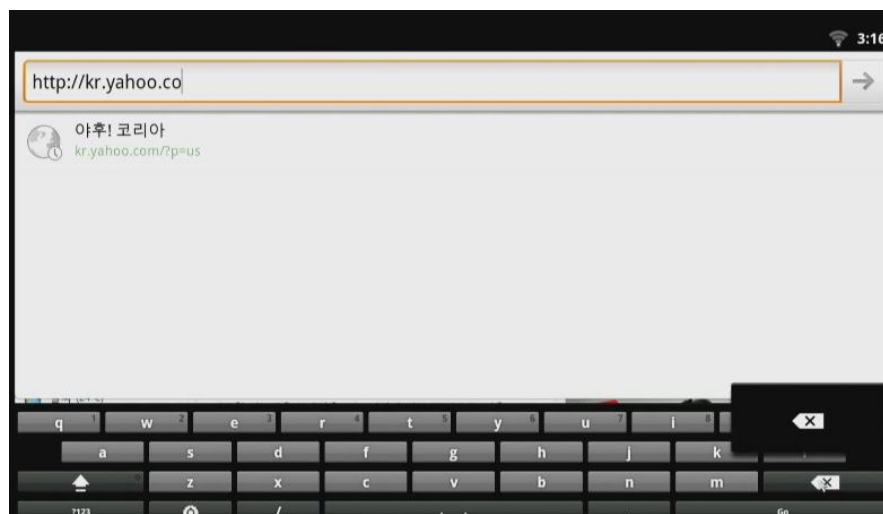

20 Install and Execute Application

20.1 Move applications at Android Phone to TizzBird

The applications on the Android smart phone can be installed on this unit. The procedures are like this.

- 1) Download or move the applications on the Android smart phone at USB flash drive.
 - Move the applications on the smart phone to SD card. This can be done by Android application like "App Monster". This kind of application let user backup their APP to SD card.
 - Move the APP at SD card to USB flash drive. Attach the USB flash drive to the unit.
 - Run FILE BROWSER at HOME SCREEN, and select the application that you want to install.

The APP at smart phone may have problems when installing or executing since it requires GPS, PHONE or TOUCH function. Or it always shows in portrait mode, since the application is just intended to use on phone.

- ※ Some APP requires specially touch function. In this case, mouse should be used. So using mouse is highly recommended when running applications.

20.2 Execute Application

The following image will appear when run APP BROWSER at home screen.




Use arrow buttons to browse the application and press <OK> button to execute it.

21 Settings

Various set-ups can be configured at SETTINGS BROWSER.

21.1 System


Menu language, date & time, system information, firmware information and update can be set-up at this menu.

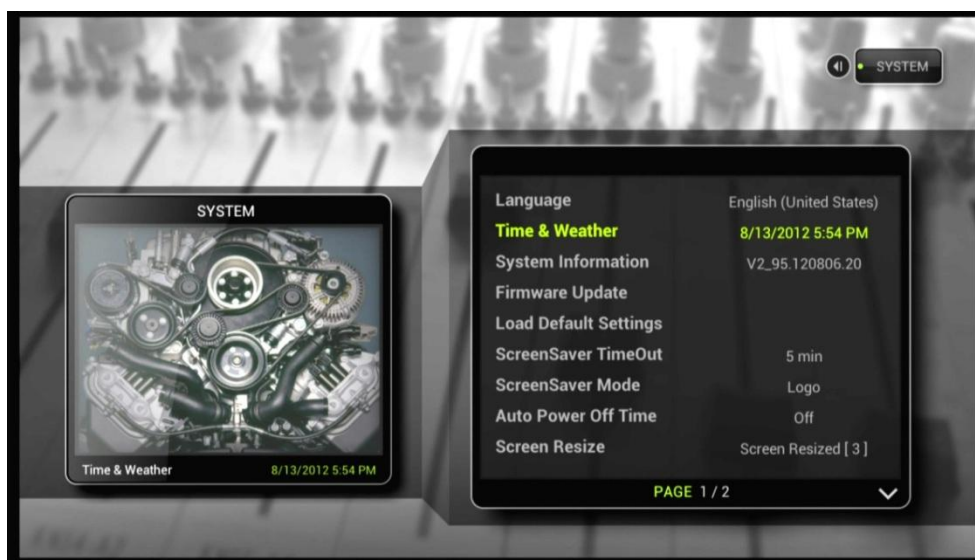

- Language → Select menu language. Press <OK> to bring the pop-up.
 - Date & Time → Set up the date & time, manually or automatically.
Network should be configured and connected to get time information automatically.
 - System Information → Show current system information like firmware version.
 - Firmware Update → Update the firmware.
 - Load Default Settings → Clear the previous settings and get back to the default settings
 - Screen Saver Time-Out → Set up the screen saver time-out.
 - Screen Saver Mode → Configure the screen saver icon or off the saver.
 - Screen Resize → Configure the size of graphic user interface screen.
 - TizzRemote Setting → Setup the TizzRemote by QR code and setup the System name for TizzRemote searching.
- Next page contains more system settings.




TizzRemote Setting → Setup the TizzRemote by QR code and setup the System name for TizzRemote searching.

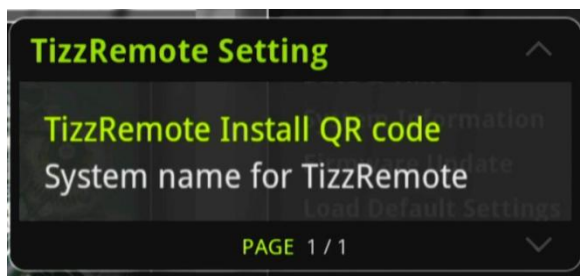

The TizzRemote™ is the remote application for TizzBird which can replace keyboard, mouse and keyboard.

There are two methods to install the TizzRemote™. The TizzRemote™ itself is already on the Google Market, so you can directly download it at your smart phone. The other way is using the QR code. If you select the above item at the dialog box, the following dialog box will pop-up.

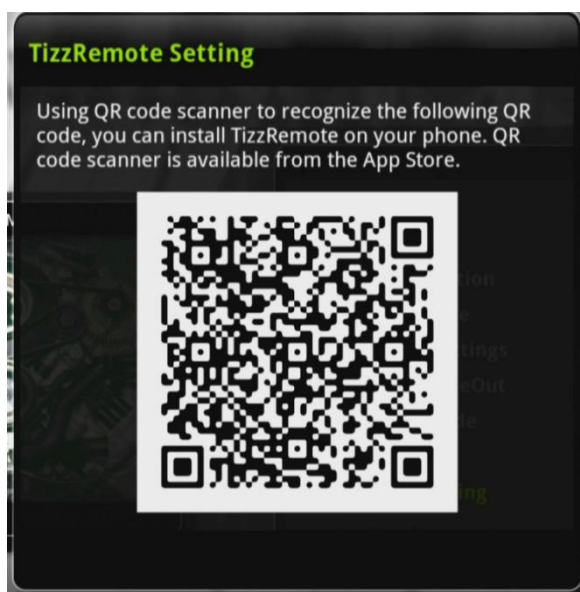


If you have QR code scanner on your smart phone, then scan this QR code with it, the


TizzRemote™ APP will be automatically download and installed on your smart phone.

External Kbd Layout → Select between QWERTY or AZERTY type key board.

System Theme → Select launcher between TizzBird theme and Android theme

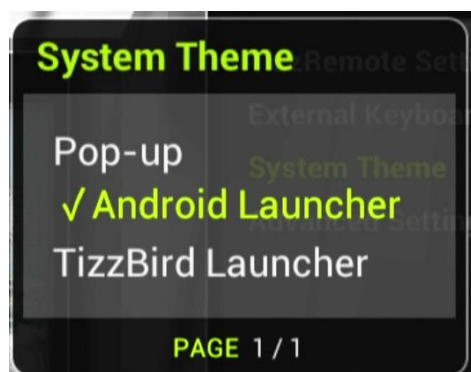

Advanced Setting → Show advanced (not for casual use) setting.

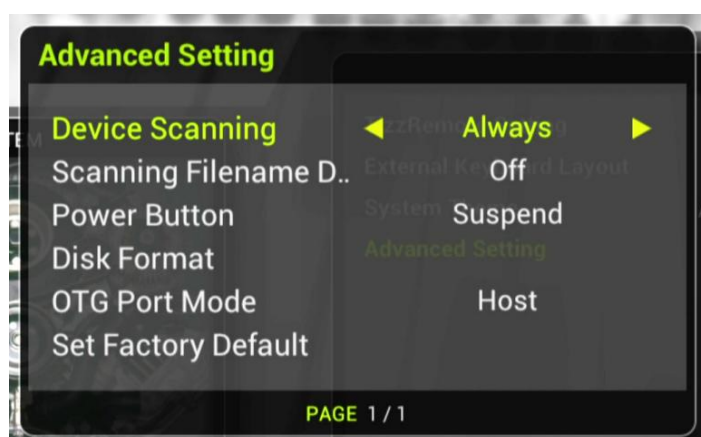

Device Scanning → Select between scanning device "Always", "New Device Only" and "Never". It will determine the scanner for database will be applied always or new device only or never.

Scanning Filename Display → It will determine display file name during device scanning or not.

Power Button → Select between "Power Off" and "Suspend" when pressing power button. If "Power Off" selected, the system will completely be powered off when POWER button pressed. System will boot up completely from initial stage when next POWER-ON. (COLD-BOOT)

Disk Format → Format the attached hard disk drive.

OTG Port Mode → Select mode of OTG port (the USB port comes with Y-cable). The OTG port can be configured as "Host" (normal USB port) or "UMS" (flash drive can be accessible by PC) or "Debug" (Can be used Android debug mode).

Set Factory Default → Reset the internal data to original one from factory. It will reset the TV output resolution, internal settings and database. It will preserve the application you installed, though.


21.2 Audio and Visual



- Video Output → Select video output port.
- Resolution → Select resolution of the video output.
- Native Frame Rate → Turn On/Off of original frame rate of the source
- Cinema Original (24p)* → Enable/ Disable cinema frame rate
 - TV Original (1080i 60Hz)* → Enable/ Disable TV frame rate.

- Audio Output → Select audio output port and format
- HDMI* → Audio will output to HDMI port
 - Digital (S/PDIF)* → Audio will output to digital audio port (optical)
 - Analog (RCA)* → Audio will output to analog port (RCA)

For HDMI and Digital (S/PDIF) port, the format of audio can be also configured such as ANALOG (PCM) or DIGITAL (Compressed). In "Digital Mode", the output can be On/Off for each format.

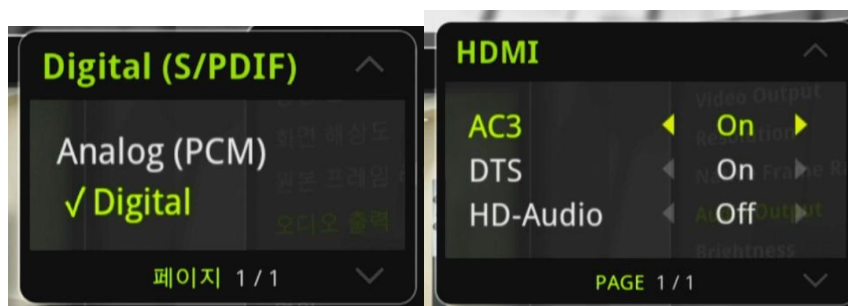

[Audio Format Selection]

[Configuration for each format]

※ In "Digital (Compressed)" output mode, each format (AC3/ DTS/ AAC/ HD-Audio) can be configured as On/Off independently. It's because the capability of connected audio device is quite different.

21.3 Movie




- Subtitle Language → Select subtitle language.
- Subtitle Setting → Select size, position, font, color of subtitle. Please refer 10.10.
- Resume → Select resume screen pop-up method.
- Instant Skip Interval → Select instant skip interval. Instant skip will occur when pressing <UP> or <DOWN> key at movie playback.
- Sort Type → Select sorting type of movie.
- Order Type → Select ordering type of movie browser.
- Movie Scrapper → Select movie scraping data base.

The next page contains more configurations for movie.



Poster layout and Poster Shape → Please refer to chapter16.

Advanced setting contains more special settings for movie.

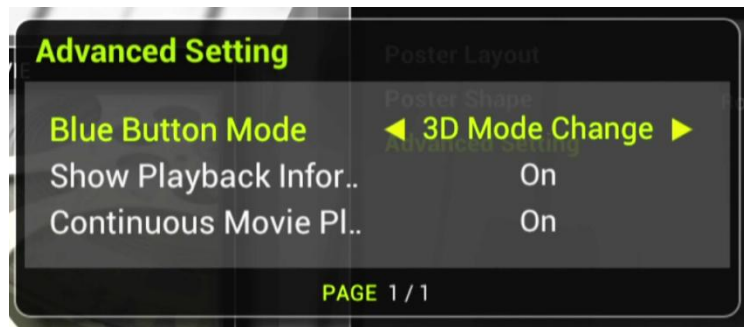


Blue Button Mode→ Blue color button on remote can be configured "3D mode change" button or "Repeat mode" button.

Show Playback Info→ Turn on/off the information window when movie start-up.

Continuous Movie Playback→ Turn on/off successive movie playback, if any.

21.4 Music

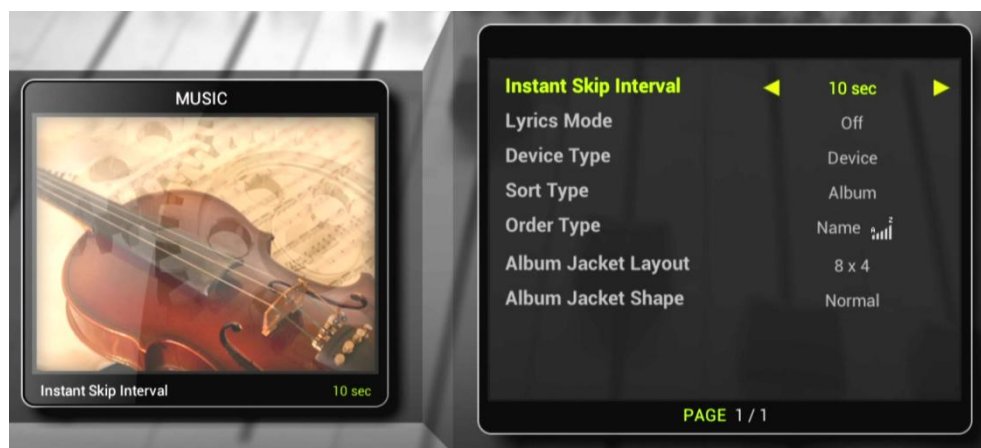


Instant Skip Interval → Select instant skip interval. Instant skip will occur when pressing <UP> or <DOWN> key at movie playback.

Sort Type → Select sorting type of music.

Order Type → Select ordering type of music browser.

Album Jacket Layout & Shape → Please refer to chapter16.

21.5 Photo

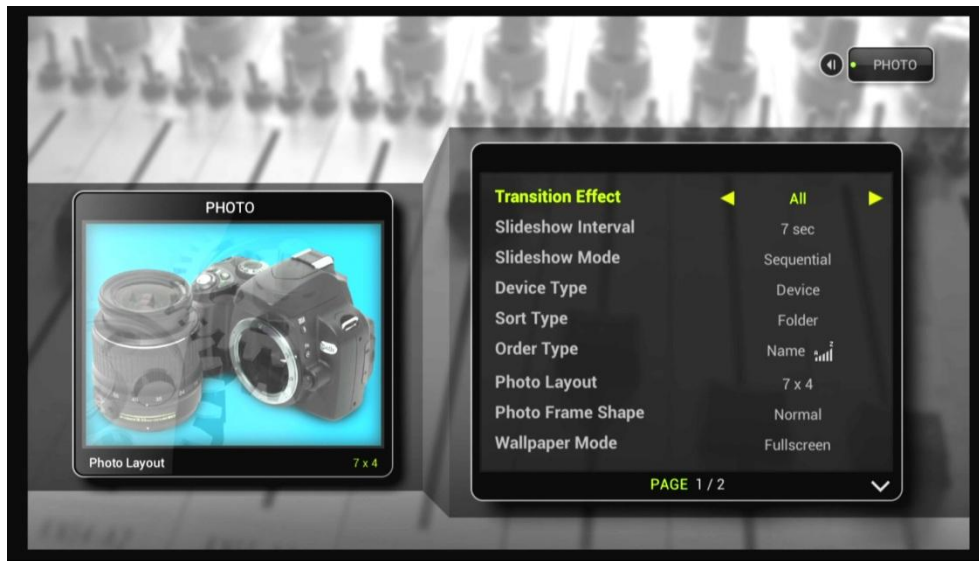

- Transition Effect → Select transition effects of slideshow.
- Slideshow Interval → Select transition interval of slideshow.
- Slideshow Mode → Select showing order of slideshow.
- Sort Type → Select sorting type of photos.
- Order Type → Select ordering type of photos.
- Photo Frame Layout & Shape → Please refer to chapter16.
- Wallpaper Mode → Keep the aspect ratio or stretching to "Fullscreen"
- Restore wallpaper → Restore default wallpaper if background was changed.




Transition Effect

21.6 Network



- Wi-Fi Connection → Turn On/Off the Wi-Fi connection
- Wi-Fi Setting → Select Wi-Fi Access Point and configure the SSID and password
- Ethernet Connection → Turn On/Off Ethernet connection
- Ethernet Setting → Please refer to chapter 11 and 11.3 section.
- Network Server ... → Please refer to chapter 21 and 21.1.5 for configuration
- DLNA → Turn On/Off the DLNA. See chapter22 for usage of DLNA.
- YouTube Cache Size → Determine the cache size for YouTube real-time streaming.
(This menu may not be shown on some devices)
- Network Information → Show current connected network information.

21.7 Cover-View

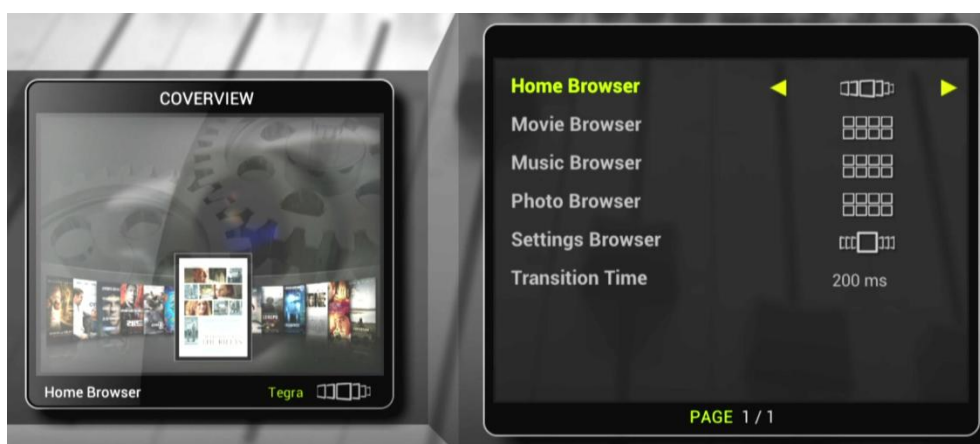

You can change the cover-view style for browser. You can also change the transition time of cover-view.

22 Connecting Network Server or NAS

This device provides powerful network browsing and connection capability from Rev 1.12 firmware. This includes multiple mountings of network drives for both SAMBA and NFS. The high performance NFS server software for PC, the **TizzNFS** will be also provided thru TizzBird WEB-site

22.1 Network connection using NFS

The NFS (Network File System) is a simple but powerful networking file system originally created by Sun Microsystems™. The NFS enables high performance file sharing between network devices, so it's most suitable for multimedia file playback via network.


The following section explains how to connect the shared PC folders using NFS server application or NAS (Network Attached Storage) which runs NFS server.


22.1.1 Downloading TizzNFS Server

Please download the "**TizzNFS**" server at Internet at the PC. Please visit our WEB-site (<http://www.tizzbird.com>) to download the TizzNFS program. Please install it after downloading it. The TizzNFS has following features.


- Runs on Windows™ XP/ Vista/ 7 (both 32 bit and 64bit)
- Simple and intuitive user interface.
- Enables sharing multiple folders thru EXPORT function.
- Reliable and high performance operation
- Simple or complex EXPORT name can be selectable.
- Supports NFS2 and NFS3 protocol completely.

22.1.2 Executing TizzNFS Server & Configuration

Execute the TizzNFS. The TizzNFS icon  will appear on Task Bar. Click the icon and select "Settings" menu item.

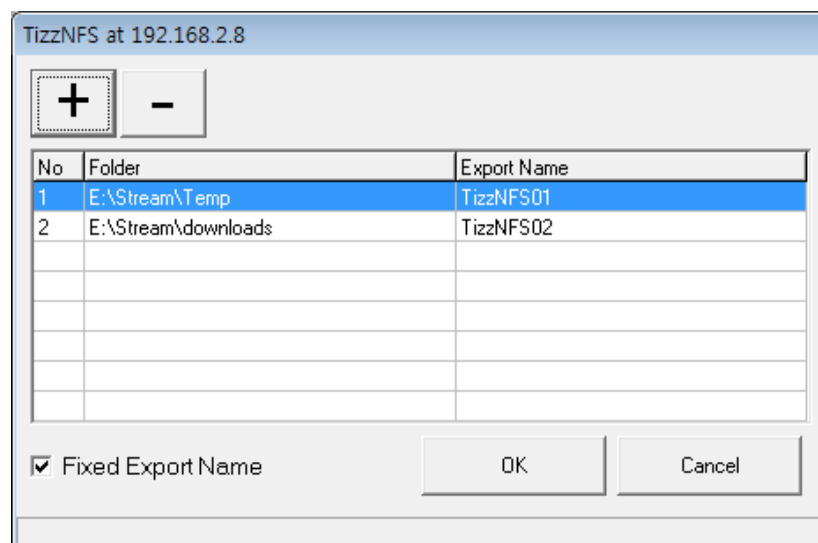




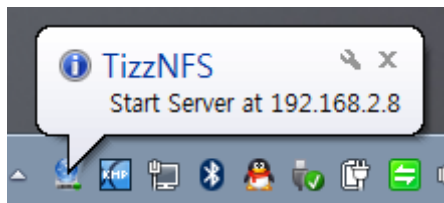
Please press  button to share the folder. The folder selecting dialog box will appear so the wanted folder can be selected.

Please repeat this procedure to select all other desirable folders to share. Please press



 button to unselect the folder, after clicking the row of unwanted folder at the dialog box.

The balloon help will pop-up when pressing OK button like below picture.



The TizzNFS will automatically run whenever log-on the PC, so shared folders will be maintained.

22.1.3 Downloading other NFS Server

Please download the "freeNFS" or "Allegro" NFS server at Internet at the PC. The "freeNFS" and "Allegro" NFS server was confirmed by TizzBird.


The "freeNFS" software can be downloadable at following URL:

<http://sourceforge.net/projects/freenfs/files/FreeNFS.exe/download>

FreeNFS can be executed without specific installation.

22.1.4 Executing freeNFS Server & Configuration

Execute the freeNFS. The freeNFS icon will appear on Task Bar. Right mouse click the icon and select "Settings" menu item.

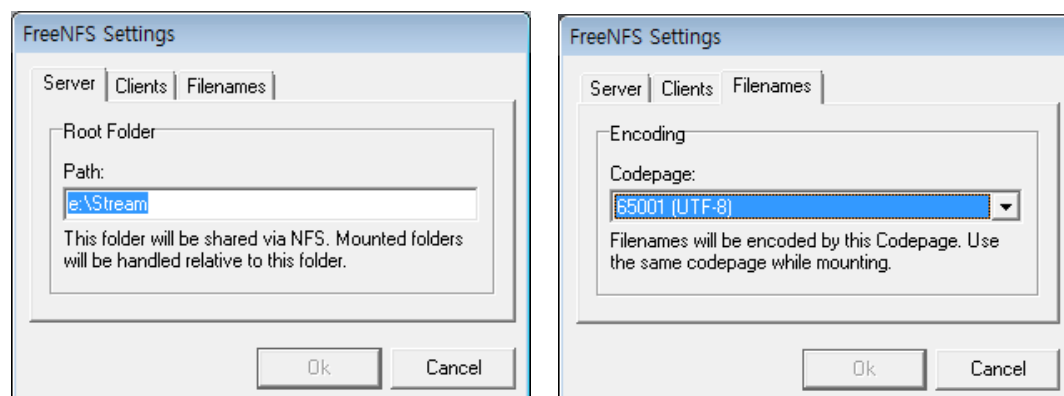


Please enter shared folder name at "Path" of "Server" Tab like above picture.

Please make sure that selecting "65001 (UTF-8)" at the "Codepage" of "Filenames" Tab.

22.1.5 Connecting NFS Server at Device

Select <Settings Browser → Network → Network Server Connection". This will bring the following dialog box.

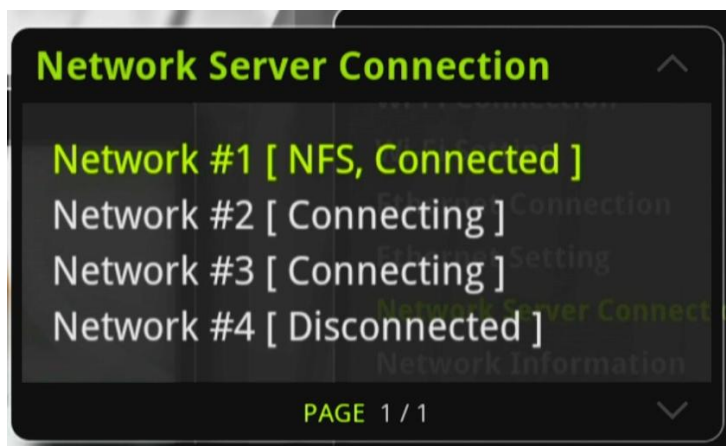


Up to 4 network servers can be connected at this version, and the number of connectable server will be increased at next version.

Please select one of the network drive number then press OK. This will bring the following dialog box.




Please choose NFS. This will start the SERVER BROWSING dialog box and start browsing of available NFS server at the local network.

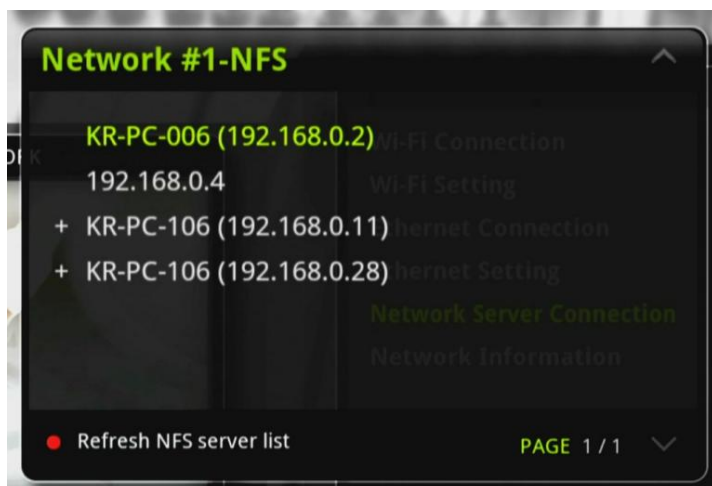


The available NFS servers will appear with names or IP addresses. The "+" sign on the left side of server name means it has exported folders. There can be no "+" sign server which is not exporting the EXPORT NAMES.

If PC runs Windows OS, the PC name can also appear like above picture. If the wanted server list is not appeared, please try RED button on remote to refresh the NFS server list.

Please select one of the server then press OK, the exported folders will appear like below picture. Please select one of those then press OK to connect.

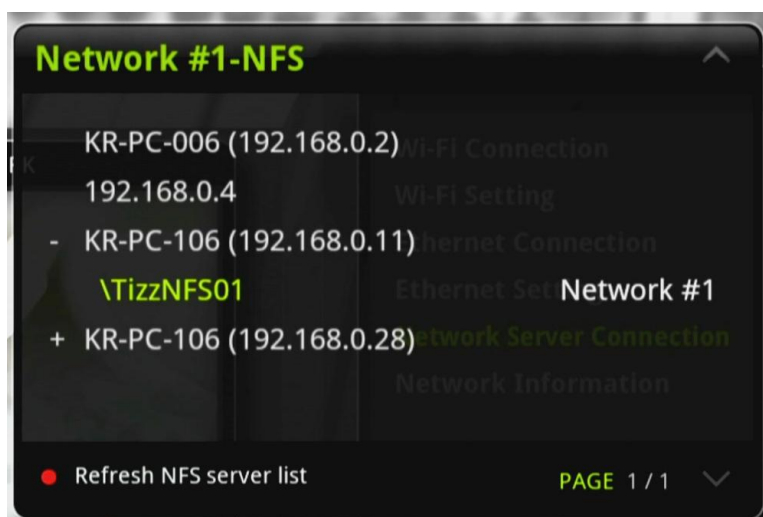

The following dialog will appear shortly and connection will be made.

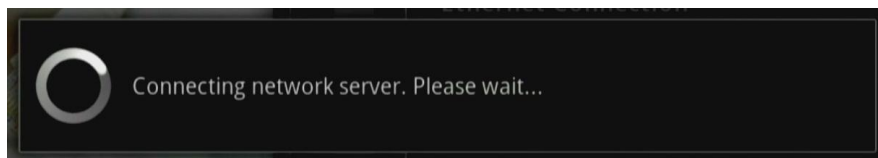

Caution:


Please use RealTEK RTL8188 Wi-Fi module for NFS thru Wi-Fi. The Ralink RT3070 Wi-Fi driver has some problem with NFS connection. The NFS + Ethernet configuration also does not have problem.

22.2 Network Connection using Samba

The following section explains how to connect the shared PC folders or NAS (Network Attached Storage) which runs Samba Server.

22.2.1 Activating PC Share

- Click right mouse button on the folder which will be shared. Select "Property" then "Sharing" TAB on the dialog box.

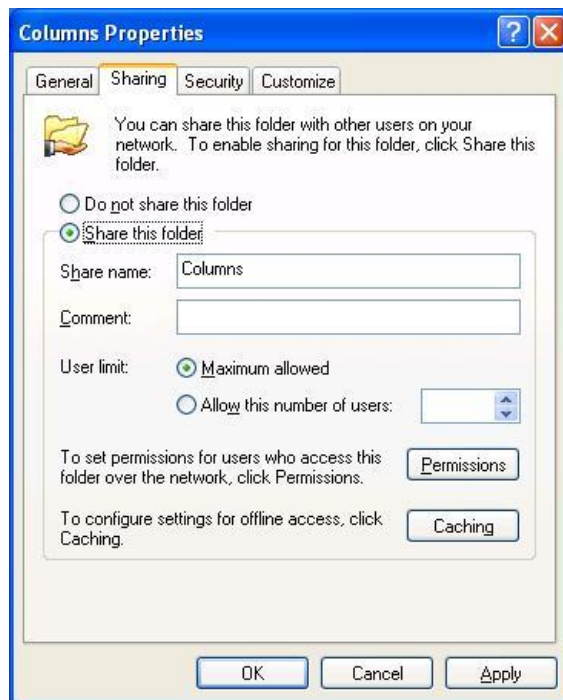


- Select "Share this folder" button on the dialog box
- The shared folder can be notified at file explorer, since the shared icon will appear on the left side of folder icon.



22.2.2 Connecting Samba Server at Device


Select <Settings Browser → Network → Network Server Connection >

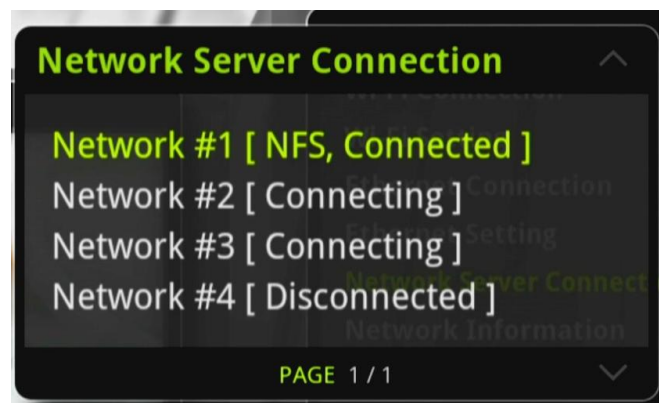


Select "Samba" at dialog box.




This will bring the SAMBA BROWSING dialog box like below. If the wanted SAMBA SERVER name is not appeared, please press RED button on remote.

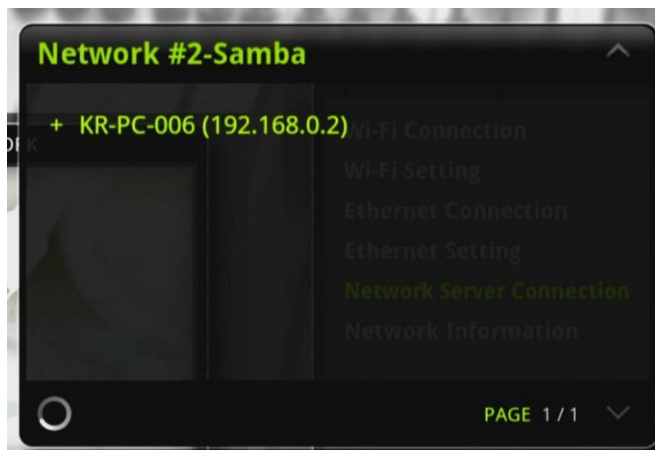

The SAMBA server list will appear according to the PC-names or IP address. The "+" sign means it has several shared folders. Press OK button to unfold the server folder list, then select one of the folder to connect.

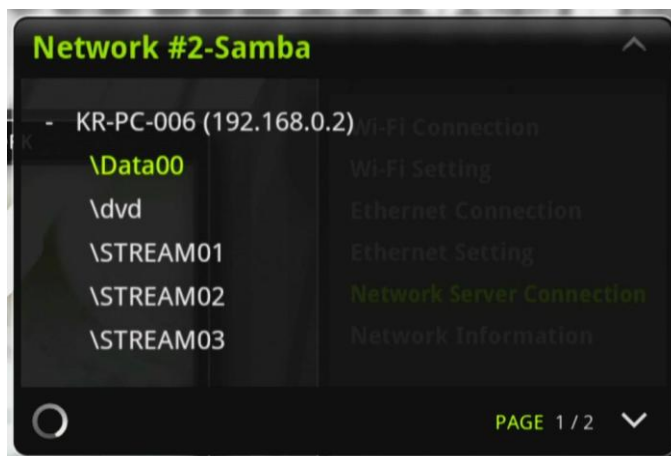

If the selected folder requires ACCESS RIGHT to connect it, the following dialog box will pop-up to enter the log-in account information.

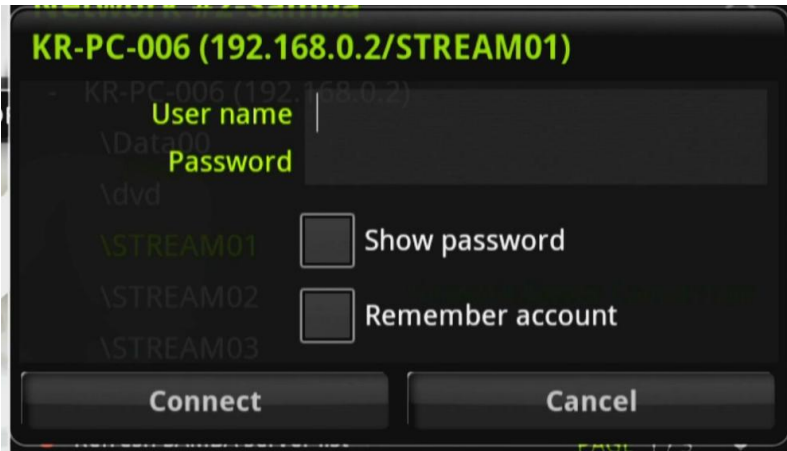

Input the "User name" and "Password" using virtual keyboard. Please check "Remember account" checkbox to by-pass this log-in procedure at next connection.

The connection will be made after pressing "Connect" button.

22.3 Accessing Network Drive at File/ Media Browser

The shared folder connected thru can be accessible at <Movie/ Music/ Photo/ File Browser >. The below picture shows the selecting the NETWORK DRIVE at <File Browser>. Press <RED color> button on remote at File Browser to select the network drive. Select the network icon like following picture.

The shared folder will appeared and the files and folders can be browsed or playback.



23 Using DLNA

Tizzbird fully implements several DLNA stacks includes DMP (Digital Media Player), DMS (Digital Media Server) and DMR (Digital Media Renderer). It can be used very flexibly several ways.

DMP (Digital Media Player)

TizzBird can browse other DMS (Digital Media Server) servers including DLNA enabled PC, Smart Phone and NAS, and be able to playback the contents on the designated server.

DMR (Digital Media Renderer)

TizzBird can render (decode & do presentation) the contents which were designated by DMC (Digital Media Controller). For example, SMART PHONE can be used for browsing and controlling the contents on the DMS and designate the contents should playback on TizzBird output. So you can see the movie, photo and listen to the music on the SMART PHONE or DLNA server.

The beauty of this DMR is browsing can be done intuitively by smart phone, and output may appear on big screen TV. So user can enjoy the contents on several screens (so called N-screen) by designating the rendering output to any DMR device.

DMS (Digital Media Server)

TizzBird can be a DLNA server, so other DLNA device including SMART PHONE can browse and start playback the contents on the TizzBird.

So combined overall DLNA stacks, the mutual contents sharing between TizzBird and other device (TAB, SMART PHONE, PC) is quite easy and intuitive.

The **most important DLNA stack here can be DMR**. Because SMART PHONE or TABLET can be used as controller (DMC) and playback can be done on TizzBird. So users can easily browse contents on server or their phones, and see the contents on BIG SCREEN TV.

23.1 Preparation for DMR

- ✓ Preparing TizzBird & Access-Point
 - Prepare TizzBird F12 or N1 for demonstrating DMR with Rev 2.90 or later firmware. Connect the Wi-Fi or Ethernet with prepared Access-Point.
 - Enable the DLNA at "Settings Browser → Network → DLNA"

- ✓ Preparing Smart Phone.
 - Prepare Android Smart Phone (Gingerbread or later) or iPhone and connect the same Access-Point as Tizzbird connected.
 - Download the **iMediaShare** or **Twonky** app from the market.

- ✓ Preparing DLNA Server (Optional)

If you have a plan to browse or playback DMS using PC, please prepare like this.

- Download the latest Windows Media Player for DLNA server.
- Or download the Twonky Server on PC for DLNA server.

23.2 Sending Smartphone's Contents - iMediaShare APP

iMediaShare is a good example of DMC, DMS and connects contents to DMR. It has several on-line-site DLNA server examples, which are very good to demonstrate, and some of them are in High-Definition. iMediaShare is also available on iPhone.

- ✓ Execute the iMediaShare APP

The iMediaShare startup screen will come up like below.




- ✓ Select the online site example

Select one of the on-line site examples. Below screen shows some candidates.




"My Photos", "My Music", "My Videos" show local contents on your phones. Below screen shows the "Victoria's Secret" on-line DLNA server. Click one of the contents.

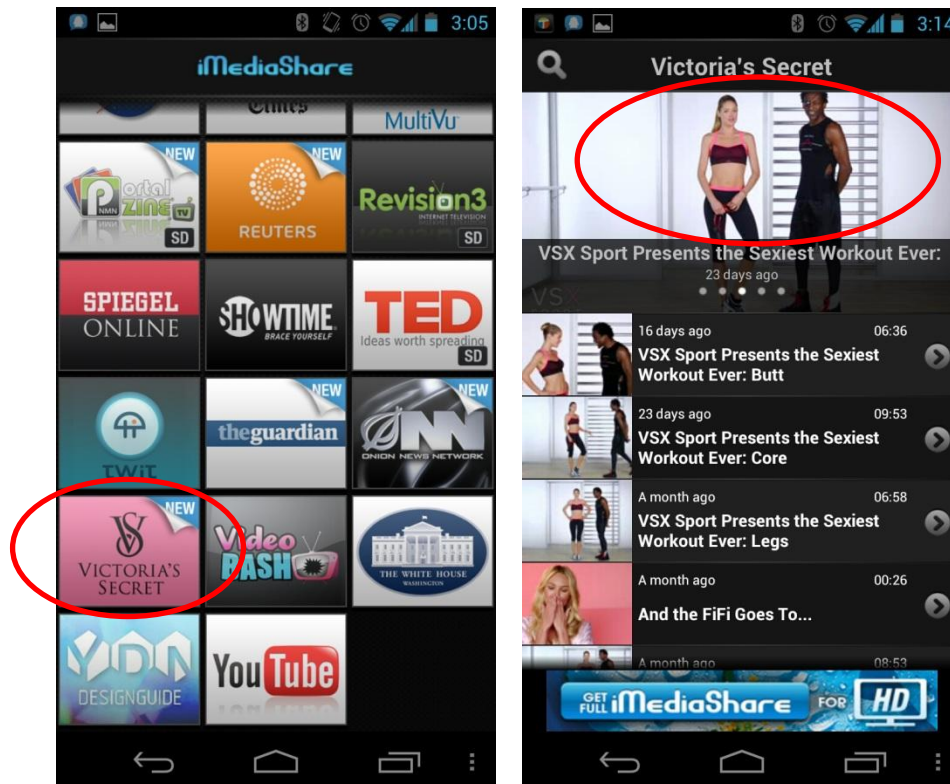

✓ Select the final renderer.


If you click one of the contents, and TizzBird settings are correct, the "RENDERER" selection pane will pop-up. Select **"TizzBird DLNA Renderer"**.

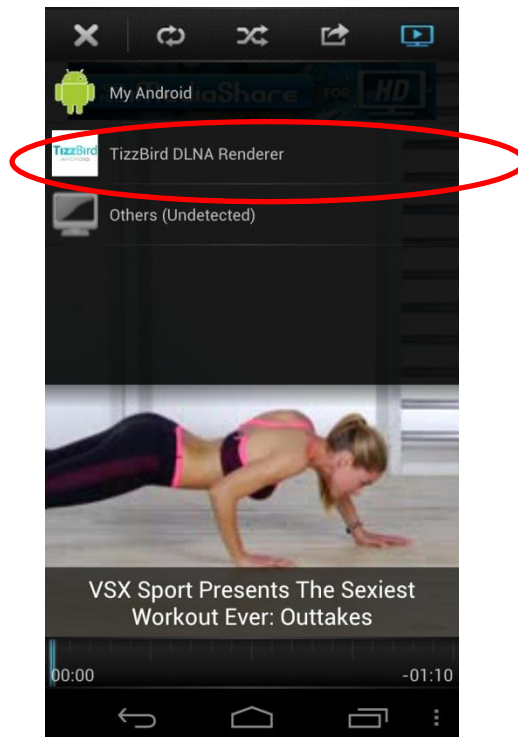

✓ Demonstrating Smart Phone local contents to Tizzbird

→ Select the contents on the SMART PHONE.

Select "My Videos" on the menu. Then following screen will pop-up

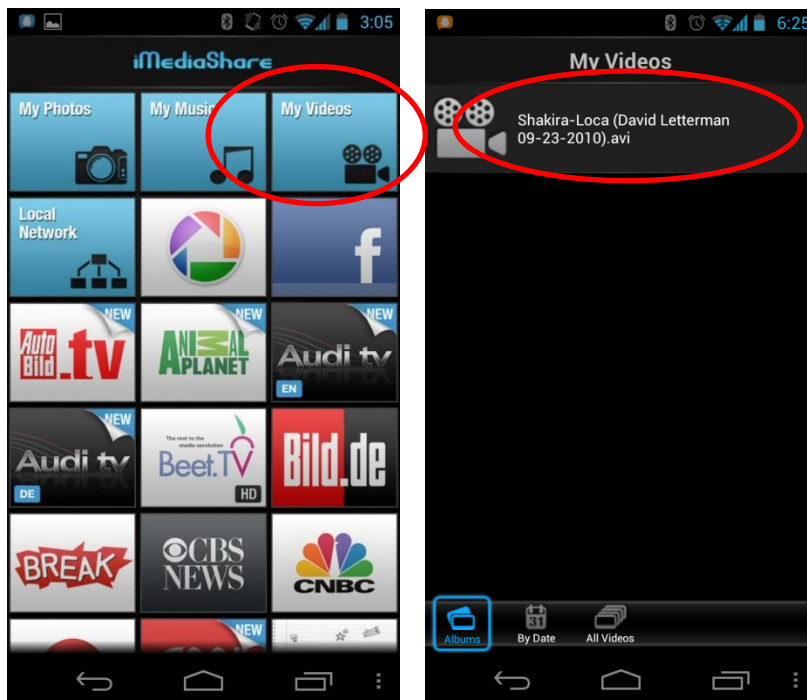


Select one of the movies you want to playback and Tizzbird will start playback. It's so-called DMR (Digital Media Renderer).



23.3 Sending Smartphone's Contents - TWONKY APP


Twonky is a powerful DLNA app which let you browse overall DLNA server on your local network. It also provides playback controller which is very stable.

- ✓ Run Twonky

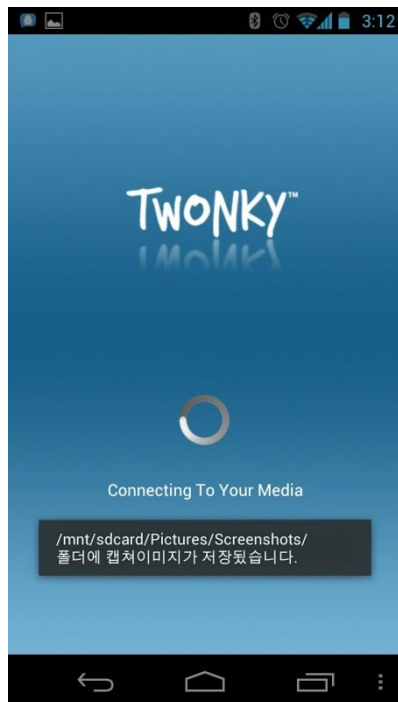


- ✓ Select categories of contents that you want to playback. Then select one of the contents

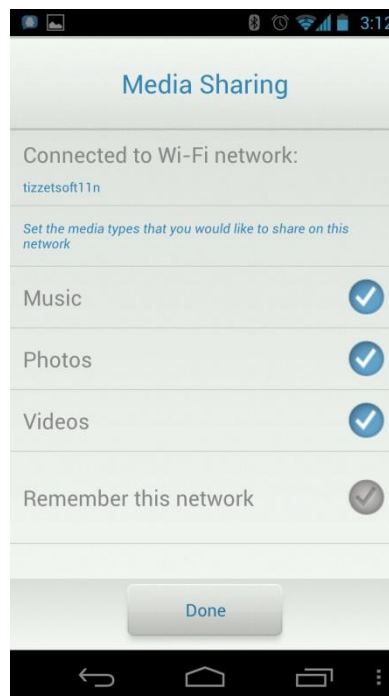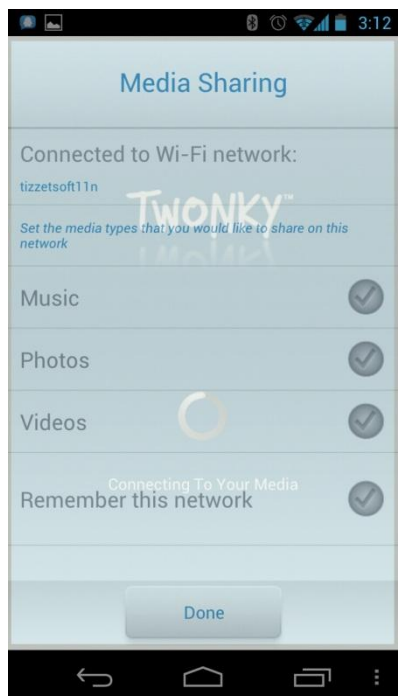

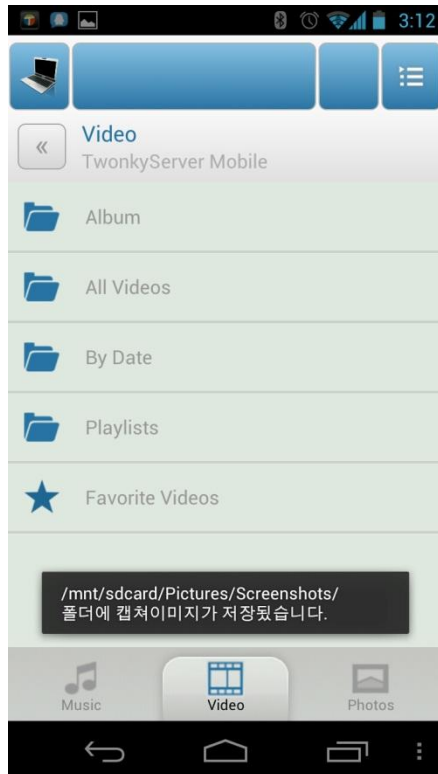

✓ Designate the renderer. Then the Tizzbird will start playback.

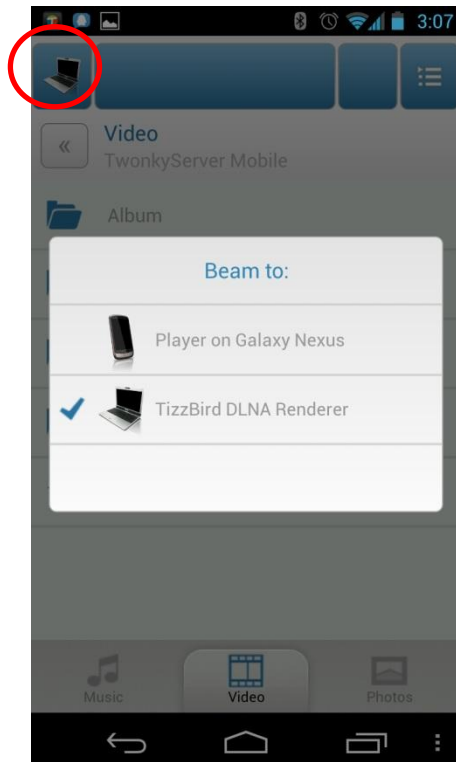

24 Firmware Upgrade

24.1 Online Upgrade (O.T.A – Over the Air Upgrade)

TizzBird will connect the firmware update server periodically (once a week) and pop-up upgrade prompt window automatically, if new firmware is available. If TizzBird is connected to the network, the upgrade can be performed as following.

- 1) Prompt the firmware if new version is available.
- 2) Select <SETTING BROWSER> → <SYSTEM> → <FIRMWARE UPDATE>
- 3) Setting browser will scan the new firmware available on network and pop-up the window.
- 4) Press <OK> to start upgrade.
- 5) This O.T.A function is only available Rev 1.0.8 or later. If firmware is lower than this version, download the newest firmware from the WEB and update it manually. Please refer to 18.2 section.



24.2 Local Upgrade

Separately downloaded firmware (thru PC) can be upgraded like below. The upgrade will not take more than 1 minute.

24.2.1 Upgrade at Settings Screen


Copy or move the latest firmware to the root folder of USB flash or HDD drive.

- Connect the drive to USB port of the unit.
- Select <SETTING BROWSER> → <SYSTEM> → <FIRMWARE UPDATE>.
- SETTINGS BROWSER will scan the new firmware automatically and pop-up the window.
- Press <OK> button to start upgrade.

24.2.2 Upgrade at File Browser

Copy or move the latest firmware to the root folder of USB flash or HDD drive.

- Connect the drive to USB port of the unit.
- Select <FILE BROWSER> at HOME SCREEN. .
- Browse the firmware file and press <OK> to start upgrade.

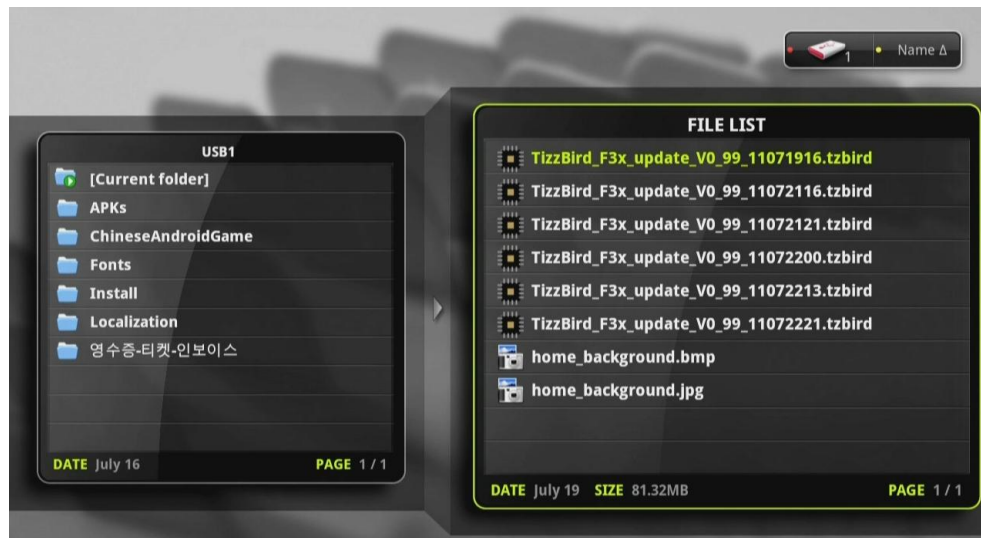

25 How to Fix Booting Failure

This documentation is intended to provide repairing guide in case of booting failure of TizzBird. TizzBird F10/F11/F20/F30 is based on Android Gingerbread

This repairing method is only applied from firmware revision **2.0.6 or later for F10/ F11/ F20/ F30.**

25.1 Abstract

The symptom of booting failure looks like as below.

- Symptom A: **No changes at BOOTING ANIMATION** (Animation with black background)
- Symptom B: **No changes at BOOTING LOGO** (Tizzbird text with white background)

Above symptoms may be caused by several different reasons. There are two ways to fix these symptoms.

- Symptom A : Can be fixed using "*Safe Mode Booting*".
- Symptom B (or Symptom A) : Can be fixed using "*System Recovery Mode*".

25.2 Repairing by Safe Mode Booting

Please follow below steps.

- 1) Power off device completely then turn it on again.
- 2) As soon as you see BOOT LOGO (TEXT with white background), press and hold <MENU> button on remote until home screen comes up.
- 3) You can read "**Safe Mode**" text at **left-bottom** side of screen, when you enter the SAFE BOOTING MODE.

After *SAFE MODE BOOTING*, you need to do one of below **action items**.

- Action item #1
 - Uninstall last APKs you have installed, as they may cause a booting failure.
- Action item #2
 - You need to back up your personal data and installed packages so far.
 - Do "Set Factory Default" by selecting "Settings Browser" → "System" → "Advanced Settings" → "Set Factory Default" with "Erase all" option.

25.3 Repairing by System Recovery Mode


25.3.1 Preparation

- 1) Prepare USB flash drive which has more than 128MB of free space.
- 2) Download the latest upgrade firmware from Tizzbird WEB (<http://www.tizzbird.com>) according to your device. Normally the name of upgrade package is something like "**Tizzbird_mmm_update_vvv.tzbird**". "**mmm**" means model name like "F3x", "F20". "**vvv**" means update version and date like "V2_06_2102115".
- 3) Copy downloaded firmware to root folder of USB flash drive. Then rename it "**update.zip**"


25.3.2 Entering System Recovery Mode

- 1) Power off device completely then turn it on again. If you're not sure, pull the power cable off then reconnect it.

- 2) As soon as you turn on power, press <RED> button on remote twice within 3 seconds. The following screen will come out (Require **revision 2.0.6** or later firmware)

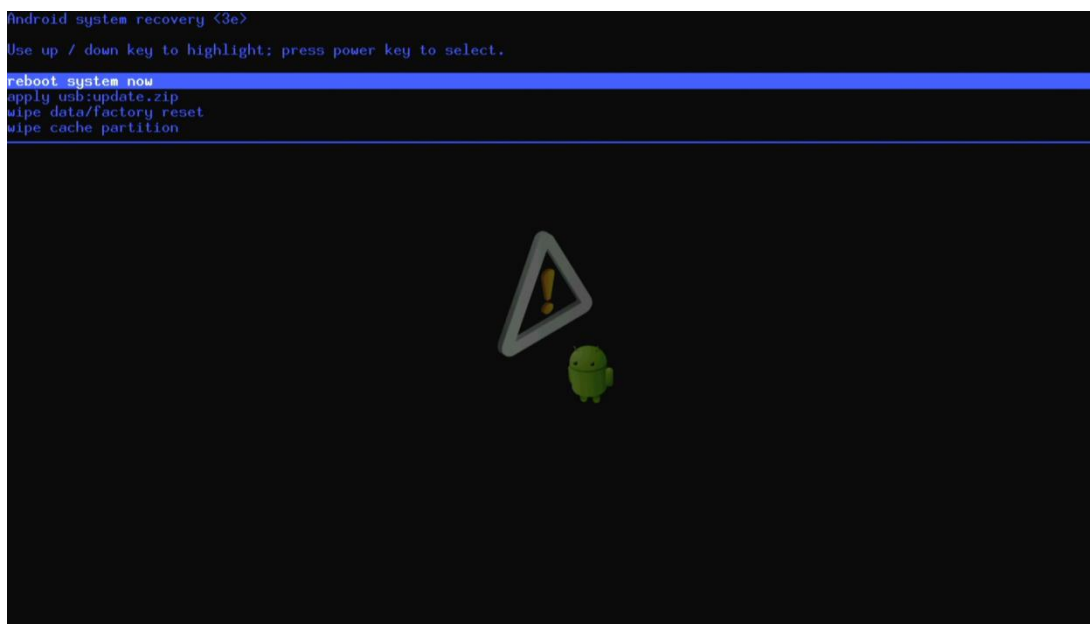


- 3) There are four menus.

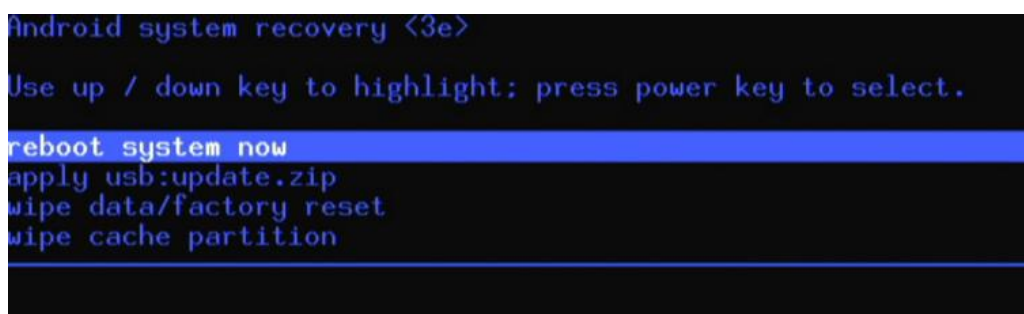

If you want to factory reset status, then select **"wipe data/ factory reset"**. This will help the situation when some applications you installed cause a problem.

- 4) Apply **"wipe cache partition"** first.
- 5) To make the device reboot again with fresh image, put the USB flash drive on the USB port, then select **"apply update from /usb"**. Please make sure that you have [update.zip](#) on the USB drive.

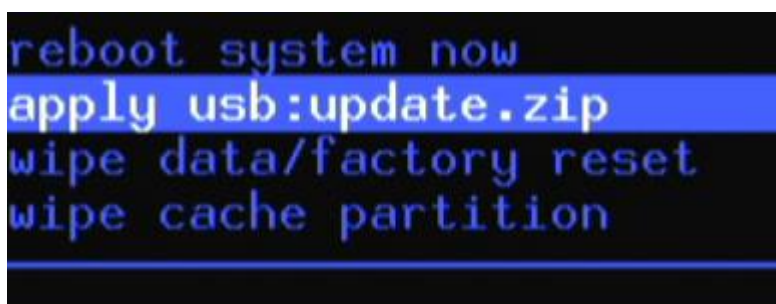

- 6) On the following screen, select “update.zip” on the drive.



- 7) The system will erase whole area of internal flash and start to update like below picture. The progress bar will show the current progress.



26 GNU General Public License

Value Plus Co. Ltd is using a part of Free Software code under the GNU General Public License in operating TizzBird player. This General Public License applies to most of the Free Software Foundation's code and to any other program whose authors commit by using it. The Free Software is copyrighted by Free Software Foundation, Inc. and the program is licensed "AS IS" without warranty of any kind.

Users are free to download the base source code of the TizzBird players at the following address:

http://www.tizzbird.com/eng/index.php?mm_code=752&sm_code=754

The source code can be sent to your address via airmail for a charge of actual expense executed. Please contact us at sales@valueplus.co.kr

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free

software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS